



EMC[®] Storage Analytics

Version 3.2.1

Installation and User Guide

302-001-532 REV 04

EMC²

Copyright © 2014-2015 EMC Corporation. All rights reserved. Published in USA.

Published June, 2015

EMC believes the information in this publication is accurate as of its publication date. The information is subject to change without notice.

The information in this publication is provided as is. EMC Corporation makes no representations or warranties of any kind with respect to the information in this publication, and specifically disclaims implied warranties of merchantability or fitness for a particular purpose. Use, copying, and distribution of any EMC software described in this publication requires an applicable software license.

EMC², EMC, and the EMC logo are registered trademarks or trademarks of EMC Corporation in the United States and other countries. All other trademarks used herein are the property of their respective owners.

For the most up-to-date regulatory document for your product line, go to EMC Online Support (<https://support.emc.com>).

EMC Corporation
Hopkinton, Massachusetts 01748-9103
1-508-435-1000 In North America 1-866-464-7381
www.EMC.com

CONTENTS

Figures		5
Tables		7
Chapter 1	Introduction	9
	Overview.....	10
	References.....	11
	Terminology.....	12
Chapter 2	Installation and Licensing	15
	Installation overview.....	16
	Installation and operating requirements.....	18
	Installing vRealize Operations Manager.....	21
	Installing the EMC Adapter and dashboards.....	22
	Installing Navisphere CLI.....	22
	Configuring a secure connection for VMAX adapters.....	23
	Adapter instances.....	25
	Adding an EMC Adapter instance for vCenter.....	25
	Adding an EMC Adapter instance for SCOM.....	27
	Adding EMC Adapter instances for your storage system.....	28
	Editing EMC Adapter instances for your storage system.....	32
Chapter 3	EMC Storage Analytics Dashboards	33
	Topology mapping.....	34
	ScaleIO topology.....	35
	VNX Block topology.....	36
	VNX File/eNAS topology.....	37
	VMAX topology.....	38
	VMAX3 topology.....	39
	VNXe topology.....	41
	VPLEX Local topology.....	42
	VPLEX Metro topology.....	43
	XtremIO topology.....	45
	RecoverPoint for Virtual Machines topology.....	46
	EMC dashboards.....	47
	Storage Topology dashboard.....	47
	Storage Metrics dashboard.....	49
	ScaleIO Overview dashboard.....	49
	VNX Overview dashboard.....	51
	VMAX Overview dashboard.....	53
	VNXe Overview dashboard.....	56
	VPLEX Overview dashboard.....	57
	VPLEX Performance dashboard.....	58
	VPLEX Communication dashboard.....	60
	XtremIO Overview dashboard.....	61
	XtremIO Performance dashboard.....	62

	RecoverPoint for VMs Overview dashboard.....	62
	RecoverPoint for VMs Performance dashboard.....	63
	Topology dashboards.....	64
	Metrics dashboards.....	65
	Top-N dashboards.....	66
	Dashboard XChange.....	68
Chapter 4	Resource Kinds and Metrics	69
	ScaleIO metrics.....	70
	VNX Block metrics.....	74
	VNX File/eNAS metrics.....	84
	VMAX metrics.....	91
	VNXe metrics.....	95
	VPLEX metrics.....	103
	XtremIO metrics.....	114
	XtremIO views and reports.....	119
	RecoverPoint for Virtual Machines metrics.....	121
Chapter 5	Troubleshooting	127
	Badges for monitoring resources.....	128
	Navigating inventory trees.....	128
	EMC symptoms, alerts, and recommendations.....	129
	Event correlation.....	130
	Viewing all alerts.....	130
	Finding resource alerts.....	131
	Locating alerts that affect the health score for a resource.....	131
	List of alerts and notifications.....	131
	Launching Unisphere.....	155
	Installation logs.....	155
	Log Insight overview.....	156
	Log Insight configuration.....	156
	Sending logs to Log Insight.....	157
	Error handling and event logging.....	159
	Viewing error logs.....	159
	Creating and downloading a support bundle.....	159
	Log file sizes and rollover counts.....	160
	Finding adapter instance IDs.....	160
	Configuring log file sizes and rollover counts.....	160
	Activating configuration changes.....	161
	Verifying configuration changes.....	161
	Editing the Collection Interval for a resource.....	162
	Configuring the thread count for an adapter instance.....	162
	Connecting to vRealize Operations Manager by using SSH.....	163
	Frequently Asked Questions.....	164

FIGURES

1	EMC adapter architecture	11
2	ScaleIO topology	35
3	VNX Block topology	36
4	VNX File/eNAS topology	37
5	VMAX topology	38
6	VMAX3 topology	39
7	VNXe topology	41
8	VPLEX Local topology	42
9	VPLEX Metro topology	44
10	XtremIO topology	45
11	RecoverPoint for Virtual Machines topology	46

TABLES

1	Licensing options for vRealize Operations Manager.....	16
2	Installation and upgrade options.....	17
3	Dashboard-to-product matrix.....	47
4	System metrics.....	70
5	Protection Domain metrics.....	70
6	Device metrics.....	71
7	SDS metrics.....	71
8	Storage pool metrics.....	72
9	Snapshot metrics.....	72
10	MDM cluster metrics.....	72
11	MDM metrics.....	73
12	SDC metrics.....	73
13	SCSI Initiator metrics.....	73
14	Fault Set metrics.....	73
15	VTree metrics.....	73
16	VNX Block metrics for Array.....	74
17	VNX Block metrics for Disk.....	74
18	VNX Block metrics for FAST Cache.....	75
19	VNX Block metrics for Pool LUN.....	76
20	VNX Block metrics for RAID Group.....	78
21	VNX Block metrics for RAID Group LUN.....	78
22	VNX Block metrics for SP Front-end Port.....	79
23	VNX Block metrics for Storage Pool.....	80
24	VNX Block metrics for Storage Processor.....	81
25	VNX Block metrics for Tier.....	82
26	VNX File/eNAS metrics for Array.....	84
27	VNX File/eNAS metrics for Data Mover.....	84
28	VNX File/eNAS metrics for dVol.....	88
29	VNX File/eNAS metrics for File Pool.....	89
30	VNX File/eNAS metrics for File System.....	89
31	VMAX metrics for Device.....	91
32	VMAX metrics for FAST VP Policy.....	91
33	VMAX metrics for Front-End Director.....	92
34	VMAX metrics for Front-End Port.....	92
35	VMAX metrics for Remote Replica Group.....	92
36	VMAX metrics for SRDF Director.....	92
37	VMAX metrics for Storage Group.....	93
38	VMAX metrics for Thin Pool.....	94
39	VMAX3 metrics for Storage Resource Pool.....	94
40	VNXe metrics for EMC Adapter Instance.....	95
41	VNXe metrics for Disk.....	95
42	VNXe metrics for Fast Cache.....	96
43	VNXe metrics for File System.....	96
44	VNXe metrics for LUN.....	96
45	VNXe metrics for Storage Pool.....	97
46	VNXe metrics for Storage Processor.....	97
47	VNXe metrics for Tier.....	102
48	VPLEX metrics for Cluster.....	103
49	VPLEX metrics for Director.....	104
50	VPLEX metrics for Distributed Device.....	107
51	VPLEX metrics for Engine.....	108

52	VPLEX metrics for Ethernet Port	109
53	VPLEX metrics for Extent Device	109
54	VPLEX metrics for FC Port	110
55	VPLEX metrics for Local Device	110
56	VPLEX metrics for Storage Array	111
57	VPLEX metrics for Storage View.....	111
58	VPLEX metrics for Storage Volume	112
59	VPLEX metrics for Virtual Volume	112
60	VPLEX metrics for VPLEX Metro	113
61	XtremIO metrics for Cluster.....	115
62	XtremIO metrics for Data Protection Group.....	116
63	XtremIO metrics for Snapshot.....	116
64	XtremIO metrics for SSD.....	117
65	XtremIO metrics for Storage Controller.....	117
66	XtremIO metrics for Volume.....	117
67	XtremIO metrics for X-Brick.....	118
68	XtremIO cluster capacity consumption summary.....	119
69	XtremIO health state.....	119
70	XtremIO LUN list.....	119
71	XtremIO performance summary.....	120
72	XtremIO storage efficiency summary.....	120
73	RecoverPoint metrics for Cluster.....	122
74	RecoverPoint metrics for Consistency Group.....	122
75	RecoverPoint metrics for Copy.....	123
76	RecoverPoint metrics for Journal Volume	123
77	RecoverPoint metrics for Link.....	123
78	RecoverPoint metrics for virtual RecoverPoint Appliance (vRPA).....	124
79	RecoverPoint metrics for RecoverPoint for Virtual Machines System.....	124
80	RecoverPoint metrics for Replication Set.....	124
81	RecoverPoint metrics for Repository Volume	125
82	RecoverPoint metrics for Splitter	125
83	RecoverPoint metrics for User Volume.....	125
84	List of VMAX alerts.....	132
85	List of VNX Block alerts.....	133
86	List of VNX Block notifications.....	137
87	List of VNX File alerts.....	139
88	List of VNX File notifications.....	142
89	List of VNXe alerts.....	147
90	List of VPLEX alerts.....	149
91	List of XtremIO alerts based on external events.....	153
92	List of XtremIO alerts based on metrics.....	153

CHAPTER 1

Introduction

This chapter contains the following topics:

- [Overview](#)..... 10
- [References](#)..... 11
- [Terminology](#)..... 12

Overview

VMware vRealize Operations Manager is a software product that collects performance and capacity data from monitored software and hardware resources. It provides users with real-time information about potential problems in the enterprise.

vRealize Operations Manager presents data and analysis in several ways:

- Through alerts that warn of potential or occurring problems.
- In configurable dashboards and predefined pages that show commonly needed information.
- In predefined reports.


EMC[®] Storage Analytics links vRealize Operations Manager with an EMC adapter. The adapter is bundled with a connector that enables vRealize Operations Manager to collect performance metrics. The adapter is installed with the vRealize Operations Manager user interface.

The connector types are shown in [Figure 1 on page 11](#).

EMC Storage Analytics uses the power of existing vCenter features to aggregate data from multiple sources and process the data with proprietary analytic algorithms.

EMC Storage Analytics complies with VMware management pack certification requirements and has received the VMware Ready certification.

Figure 1 EMC adapter architecture

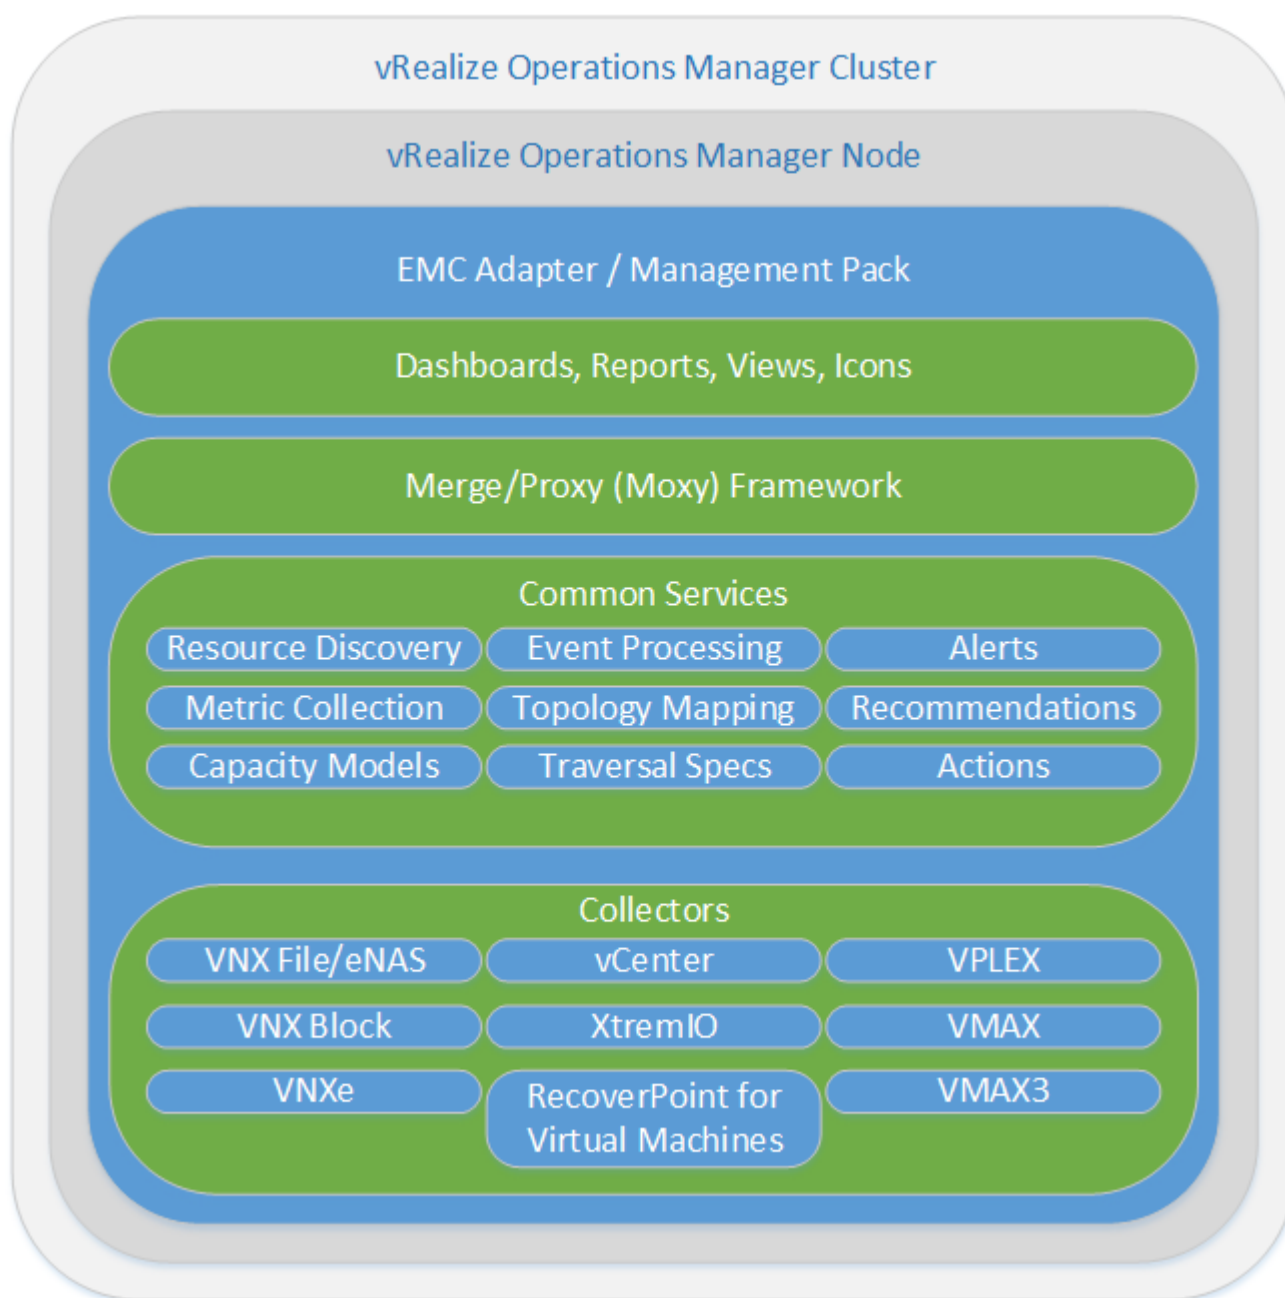**Note**

Refer to the *EMC Storage Analytics Release Notes* for a list of supported product models.

References

This topic provides a list of documentation for reference.

VMware vRealize Operations Manager documentation includes:

- *vRealize Operations Manager Release Notes* contains descriptions of known issues and workarounds.

- *vRealize Operations Manager vApp Deployment and Configuration Guide* explains installation, deployment, and management of vRealize Operations Manager.
- *vRealize Operations Manager User Guide* explains basic features and use of vRealize Operations Manager.
- *vRealize Operations Manager Customization and Administration Guide* describes how to configure and manage the vRealize Operations Manager custom interface.

VMware documentation is available at <http://www.vmware.com/support/pubs>.

EMC documentation includes:

- *EMC Storage Analytics Release Notes* provides a list of the latest supported features, licensing information, and known bugs.
- *EMC Storage Analytics Installation and User Guide* (this document) provides installation and licensing instructions, a list of resource kinds and their metrics, and information about storage topologies and dashboards.

Terminology

This topic contains a list of commonly used terms.

adapter

A vRealize Operations Manager component that collects performance metrics from an external source like a vCenter or storage system. Third-party adapters such as the EMC Adapter are installed on the vRealize Operations Manager server to enable creation of adapter instances within vRealize Operations Manager.

adapter instance

A specific external source of performance metrics, such as a specific storage system. An adapter instance resource is an instance of an adapter that has a one-to-one relationship with an external source of data, such as a VNX storage system.

dashboard

A tab on the home page of the vRealize Operations Manager GUI. vRealize Operations Manager ships with default dashboards. Dashboards are also fully customizable by the end user.

health rating

An overview of the current state of any resource, from an individual operation to an entire enterprise. vRealize Operations Manager checks internal metrics for the resource and uses its proprietary analytics formulas to calculate an overall health score on a scale of 0 to 100.

icon

A pictorial element in a widget that enables a user to perform a specific function. Hovering over an icon displays a tooltip that describes the function.

metric

A category of data collected for a resource. For example, the number of read operations per second is one of the metrics collected for each LUN resource.

resource

Any entity in the environment for which vRealize Operations Manager can collect data. For example, LUN 27 is a resource.

resource kind

A general type of a resource, such as LUN or DISK. The resource kind dictates the type of metrics collected.

widget

An area of the EMC Storage Analytics graphical user interface (GUI) that displays metrics-related information. A user can customize widgets to their own environments.

CHAPTER 2

Installation and Licensing

This chapter contains the following topics:

- [Installation overview](#) 16
- [Installation and operating requirements](#) 18
- [Installing vRealize Operations Manager](#) 21
- [Installing the EMC Adapter and dashboards](#) 22
- [Installing Navisphere CLI](#) 22
- [Configuring a secure connection for VMAX adapters](#) 23
- [Adapter instances](#) 25

Installation overview

EMC Storage Analytics consists of two installation packages that include:

- vRealize Operations Manager
- EMC Adapter

[Table 1 on page 16](#) lists the licensing requirements.

Table 1 Licensing options for vRealize Operations Manager

vRealize Operations Manager version	Required license	Notes
vRealize Operations Manager Advanced or Enterprise	VMware license for vRealize Operations Manager Advanced or Enterprise EMC license for your storage array	Provides a view of all vCenter-managed resources, including EMC storage arrays.

NOTICE

If you purchase an electronic license for EMC Storage Analytics, you will receive a letter that directs you to an electronic licensing system to activate the software to which you are entitled. Otherwise, you will receive a physical license key.

A 90-day trial license is available with EMC Storage Analytics for all supported products. The 90-day trial license provides the same features as a permanent license, but after 90 days of usage, the adapter stops collecting data. You can add a permanent license at any time.

To collect metrics from resources, you must install the EMC Adapter. The license that EMC provides for the storage array is required to add the adapter instance.

The adapter installation includes:

- Installing the EMC Adapter and dashboards.
- Adding one or more EMC adapter instances and applying license keys from EMC.

[Installing the EMC Adapter and dashboards on page 22](#) provides the installation instructions. Then you will add an EMC adapter license key for each storage instance and enter the EMC license key as described in [Adding EMC Adapter instances for your storage system on page 28](#).

[Table 2 on page 17](#) lists the installation and upgrade options for different objectives. To perform an installation or upgrade, refer to the instructions for the task that matches your objective.

Table 2 Installation and upgrade options

Task	Instructions
Install VMware vRealize Operations Manager 6.0.2 and EMC Storage Analytics 3.2.	<ul style="list-style-type: none"> • Installing vRealize Operations Manager on page 21 • Installing the EMC Adapter and dashboards on page 22 • Adding EMC Adapter instances for your storage system on page 28
Install EMC Storage Analytics 3.2 on a system running VMware vRealize Operations Manager 6.0.2.	<ul style="list-style-type: none"> • Installing the EMC Adapter and dashboards on page 22 • Adding EMC Adapter instances for your storage system on page 28
Upgrade EMC Adapter 3.0.x to EMC Storage Analytics 3.2 on a system running VMware vRealize Operations Manager 6.0.	<ol style="list-style-type: none"> 1. Install a new instance of vRealize Operations Manager 6.0.2. See Installing vRealize Operations Manager on page 21. 2. Install EMC Storage Analytics 3.2 on vRealize Operations Manager 6.0.2. 3. Migrate the data from the old vCenter Operations Manager 6.0 or 5.8.x to the new vRealize Operations Manager 6.0.2 system. <hr/> <p>Note</p> <p>Refer to the <i>vRealize Operations Manager vApp Deployment and Configuration Guide</i> for information about migration-based upgrades to vRealize Operations Manager 6.0.2.</p>

NOTICE

The *EMC Storage Analytics Release Notes* provide the most recent information about supported releases.

Installation and operating requirements

Before installing the EMC Adapter, verify that these installation and operating requirements are satisfied.

EMC Adapter requirements

Supported vRealize Operations Manager versions

- vRealize Operations Manager Advanced or Enterprise editions from VMware

Note

EMC Storage Analytics does not support vRealize Operations Manager Foundation and Standard editions.

Deploy the vApp for vRealize Operations Manager before installing the EMC Adapter. Check the *vRealize Operations Manager vApp Deployment and Configuration Guide* at <http://www.vmware.com/support/pubs> for system requirements pertaining to your version of vRealize Operations Manager.

Supported product models

See the *EMC Storage Analytics Release Notes* for a complete list of supported product models.

Supported web browser

See the latest vRealize Operations Manager release notes for a list of supported browsers.

ScaleIO systems

EMC Storage Analytics uses REST APIs to interact with ScaleIO systems. Specify the IP address and port of the ScaleIO Gateway to configure the ScaleIO collector.

VNX Block systems

The EMC Adapter uses `naviseccli` to collect metrics from VNX Block systems. It is bundled into the EMC Adapter install file and is automatically installed along with the adapter. Storage processors require IP addresses that are reachable from the vRealize Operations Manager server. Bidirectional traffic for this connection flows through port 443 (HTTPS). Statistics logging must be enabled on each storage processor (SP) for metric collection (**System** > **System Properties** > **Statistics Logging in Unisphere**).

VNX File/eNAS systems

CLI commands issued on the Control Station direct the EMC Adapter to collect metrics from VNX File and eNAS systems. The Control Station requires an IP address that is reachable from the vRealize Operations Manager server. Bidirectional Ethernet traffic flows through port 22 using Secure Shell (SSH). If you are using the EMC VNX `nas_stig` script for security (`/nas/tools/nas_stig`), do not use root in the password credentials. Setting `nas_stig` to **On** limits direct access for root accounts, preventing the adapter instance from collecting metrics for VNX File and eNAS.

EMC SMI-S Provider for VMAX requirements

The EMC SMI-S Provider for VMAX must be on the network and accessible through secure port 5989 (default) or nonsecure port 5988 for communication. If the EMC SMI-S Provider is also used for vSphere vStorage API for Storage Awareness (VASA), follow the recommendations in the *SMI-S Provider Release Notes* to increase the number of available connections. The user configured in the EMC Adapter instance and connecting to the SMI-S instance must have the role of monitor or administrator. See [Configuring a secure connection to a VMAX Adapter on page 23](#) for steps to configure secure port 5989.

Note

The configured SMI-S Provider must discover the VMAX array as "Local" not "Remote." In an EMC Symmetrix Remote Data Facility (SRDF) environment, if a local VMAX has an SRDF relationship with another array, the remote array is listed by SMI-S as "Remote." To configure this array in ESA, you must use a different SMI-S Provider that sees the remote array as "Local." The other array in that environment would be "Remote." ESA does not prevent adding an array with an SMI-S Provider that sees the array as "Remote," but some metrics are not collected and no error is reported.

VPLEX EMC adapter instance

Only one EMC adapter instance is required for VPLEX Local or VPLEX Metro. You can monitor both clusters in a VPLEX Metro by adding a single EMC adapter instance for one of the clusters. Adding an EMC adapter instance for each cluster in a VPLEX Metro introduces unnecessary stress on the system.

VPLEX data migrations

EMC VPLEX systems are commonly used to perform non-disruptive data migrations. When monitoring a VPLEX system with EMC Storage Analytics, a primary function is to perform analytics of trends on the storage system. When swapping a back-end storage system on VPLEX, the performance and trends for the entire VPLEX storage environment are impacted. Therefore, EMC recommends that you start a new EMC Storage Analytics baseline for the VPLEX after data migration. To start a new baseline:

1. Before you begin data migration, delete all resources associated with the existing EMC Storage Analytics VPLEX adapter instance.
2. Remove the existing EMC Storage Analytics VPLEX adapter instance by using the **Manage Adapter Instances** dialog.
3. Perform the data migration.
4. Create a new EMC Storage Analytics VPLEX adapter instance to monitor the updated VPLEX system.

Optionally, you can stop the VPLEX adapter instance collects during the migration cycle. When collects are restarted after the migration, orphaned VPLEX resources will appear in EMC Storage Analytics, but those resources will be unavailable. Remove the resources manually.

XtremIO

EMC Storage Analytics uses REST APIs to interact with XtremIO arrays. Users must specify the IP address of the XtremIO Management Server (XMS) when adding an EMC Adapter for XtremIO and the serial number of the XtremIO Cluster to monitor when adding an EMC Adapter Instance for XtremIO.

If enhanced performance is required, administrators can configure the thread count for the XtremIO adapter instance. See [Configuring the thread count for an adapter instance on page 162](#).

Minimum OE requirements

See the *EMC Storage Analytics Release Notes* for a complete list of minimum OE requirements for supported product models.

User accounts

To create an EMC Adapter instance for a storage array, you must have a user account that allows you to connect to the storage array or EMC SMI-S Provider. For example, to add an EMC Adapter for a VNX array, use a global account with operator or administrator role (a local account will not work).

To create an EMC Adapter instance for vCenter (where **Adapter Kind = EMC Adapter** and **Connection Type = VMware vSphere**), you must have an account that allows you access to vCenter and the objects it monitors. In this case, vCenter enforces access credentials (not the EMC Adapter). To create an EMC Adapter instance for vCenter, use, at minimum, an account assigned to the **Read-Only** role at the root of vCenter, and enable propagation of permissions to descendant objects. Depending on the size of the vCenter, wait approximately 30 seconds before testing the EMC Adapter. More information on user accounts and access rights is available in the *vSphere API/SDK Documentation* (see information about authentication and authorization for ESXi and vCenter Server).

DNS configuration

To use the EMC Adapter, the vRealize Operations Manager vApp requires network connectivity to the storage systems to be monitored. DNS must be correctly configured on the vRealize Operations Manager server to enable hostname resolution by the EMC Adapter.

Time zone and synchronization settings

Ensure time synchronization for all EMC Storage Analytics resources by using Network Time Protocol (NTP). Also, set correct time zones for EMC Storage Analytics resources (including the EMC SMI-S Provider if using an adapter for VMAX) and related systems. Failure to observe these practices may affect the collection of performance metrics and topology updates.

Installing vRealize Operations Manager

Before you begin

- Obtain the OVA installation package for vRealize Operations Manager from VMware.
- Obtain a copy of the *vRealize Operations Manager vApp Deployment and Configuration Guide* at <http://www.vmware.com/support/pubs>.

Refer to the *vRealize Operations Manager vApp Deployment and Configuration Guide* to deploy the vApp for vRealize Operations Manager.

Procedure

1. Review the system requirements.
2. Follow the instructions to install vRealize Operations Manager and use the VMware license that you received when prompted to assign the vRealize Operations Manager license.
3. Conclude the installation by following instructions to verify the vRealize Operations Manager installation.

Installing the EMC Adapter and dashboards

Before you begin

Obtain the PAK file for the EMC Adapter.

Note

If using Internet Explorer, the installation file downloads as a ZIP file but functions the same way as the PAK file.

WARNING

Upgrading EMC Storage Analytics overwrites the standard EMC dashboards. To customize a standard EMC dashboard, clone it, rename it, and then customize it.

To install the EMC Adapter and dashboards:

Procedure

1. Save the PAK file in a temporary folder.
2. Start the vRealize Operations Manager administrative user interface in your web browser and log in as an administrator.

For example, enter `https://<vROPs_ip_address>`.
3. Select **Administration** > **Solutions** and then click the Add (plus) sign to upload the PAK file.

A message similar to this one displays in the **Add Solution** window:

```
The .pak file has been uploaded and is ready to install.
pak file details
Name          EMC Adapter
Description   Manages EMC systems such as VNX, VMAX...
Version       3.2
```

4. Click **Next**, read the license agreement, and check the check box to indicate agreement. Click **Next** again.

Installation begins. Depending on your system's performance, the installation can take from 5 to 15 minutes to complete.

5. When the installation completes, click the **Finish** button.

The EMC Adapter appears in the list of installed solutions.

Installing Navisphere CLI

For VNX Block systems, you must install the Navisphere CLI (naviseccli) in the Data Node that you assign to collect metrics for VNX.

Install the CLI before you add the EMC Adapter instance to vCenter. If the CLI is not installed, errors might occur in scaled-out vCenter environments that consist of a Master Node and multiple Data Nodes. The CLI is automatically installed on the Master Node. However, because the Data Node collects metrics, the EMC Adapter might report errors if naviseccli is not installed.

To install the CLI:

Procedure

1. Enable Secure Shell (SSH) for both master and data nodes.
Refer to [Connecting to vRealize Operations Manager by using SSH on page 163](#) for instructions.
2. Extract the pak file by using decompression software such as WinZip.
3. Copy the `naviseccli-bin-<version>.rpm` file (for example, `naviseccli-bin-7.33.1.0.33-x64.rpm`) to a target directory in the data node. If you are using Windows, you can use WinSCP for the copy operation.
4. Establish a secure connection to the data node and change to the target directory.
5. Run this command: `rpm -i naviseccli-bin-<version>.rpm` where *<version>* is the appropriate version of the naviseccli utility for the node.
6. Repeat this procedure to install naviseccli in other nodes, as required.

Configuring a secure connection for VMAX adapters

You can optionally add a VMAX adapter instance on a secure connection through port 5989.

To configure a secure connection for a VMAX adapter instance, refer to the procedure below. If your deployment does not require a secure connection, you may skip this procedure.

Procedure

1. Download the vRealize Operations Manager SSL certificate by using one of the three methods listed below:
 - If Firefox is available on a client:
 - a. Point your web browser to the vRealize Operations Manager/EMC Storage Analytics name or IP address (any node inside a cluster). The **Certificate Warning** page opens.
 - b. Click the **I Understand the Risks** link. The **Add Exception** button displays.
 - c. Click the **Add Exception** button. The **Add Security Exception** page opens.
 - d. Click the **View** button. The **Certificate View** window opens.
 - e. Click the **Details** tab, then click the **Export** button. Save the certificate as type **All Files** from the **Save as type** drop-down menu.
 - f. Close the **Certificate View** window, then click **Confirm Security Exceptions** to continue.
 - g. Use a text editor to display the certificate content, and copy the content into the clipboard.
 - If vCenter is accessible, and vRealize Operations Manager console is accessible from vCenter:
 - a. Log into vCenter through the vSphere Client.
 - b. Select **Inventory > Hosts and clusters**.
 - c. Select the vRealize Operations Manager vAppliance, and right-click to select **Open Console**.
 - d. Press the **Enter** key, then **Alt+F1** to access the command console. Login as root (using the root password).

- e. Type `cat /storage/vcops/user/conf/ssl/cacert.pem`, and copy the displayed contents into the clipboard.
 - If vRealize Operations Manager SSHD is enabled, and SSH terminal is accessible:
 - a. Log into the vApp as root (using the root password).
 - b. Type `cat /storage/vcops/user/conf/ssl/cacert.pem`, and copy the displayed contents into the clipboard.
2. Access the SMI-S Provider Ecomconfig site at `https://<ip_address>:5989/Ecomconfig`. Log in as admin/#1Password (default).
3. Click the **SSL Certificate Management** link, then select option 3 by clicking **Import CA Certificate file**.
4. Paste the content from the clipboard into the text box. Then click the **Submit the Certificate** button. The message `Successfully imported certificate` displays.
5. In the vRealize Operations Manager, click the **Test connection** button in the **EMC Adapter** window.

The message `Test was successful` displays. Secure communication is established.

Results

A secure connection through port 5989 is established for the VMAX adapter.

Adapter instances

The vRealize Operations Manager requires an adapter instance for each resource to be monitored. The instance specifies the type of adapter to use and the information needed to identify and access the resource.

With EMC Storage Analytics, the vRealize Operations Manager uses EMC Adapter instances to identify and access the resources. Supported adapter instances include:

- vCenter (prerequisite for other adapter instances)
- System Center Operations Manager (SCOM)
- ScaleIO
- VNX File
- eNAS
- VNX Block
- VMAX
- VNXe
- VPLEX
- XtremIO
- RecoverPoint for Virtual Machines

See the *EMC Storage Analytics Release Notes* for a list of the supported models for each adapter instance and related OEs.

If the vCenter adapter instance is not configured, other adapter instances will function normally but will not display visible connections between the VMware objects and the array objects.

After adapter instances are created, the vRealize Operations Manager Collector requires several minutes to collect statistics, depending on the size of the storage array. Large storage array configurations require up to 45 minutes to collect metrics and resources and update dashboards. This is a one-time event; future statistical collections run quickly.

Adding an EMC Adapter instance for vCenter

For users to traverse health trees from the virtual environment into the storage environment, EMC Storage Analytics requires you to install an EMC Adapter instance for vCenter. All storage system adapter instances require the EMC Adapter instance for vCenter, which you must add first. A separate instance is required for each vCenter monitored by the vRealize Operations Manager environment.

To add an EMC Adapter instance for vCenter:

Procedure

1. In a web browser, type: `https://<vROps_ip_address>/vcops-web-ent` to start the vRealize Operations Manager custom user interface log in as an administrator.
2. Select **Administration > Solutions > > EMC Adapter**, and then click the **Configure** icon.
The **Manage Solution** dialog box appears.
3. Click the **Add** icon to add a new adapter instance.

4. Configure the following **Adapter Settings** and **Basic Settings**:

Display Name	Any descriptive name. For example: My vCenter
Description	Optional description
Connection Type	VMware vSphere
License (optional)	Leave blank. Not applicable for EMC Adapter instance for vCenter.
Management IP	IP address of the vCenter server
Array ID (optional)	This field must be blank for VMware vSphere connection type.

5. In the **Credential** field, select any previously defined credentials for this storage system; otherwise click the Add New icon and configure these settings:

Credential name	Any descriptive name. For example: My VMware Credentials
Username	Username that EMC Storage Analytics uses to connect to the VMware vRealize system. If a domain user is used, the format for the username is DOMAIN \USERNAME.
Password	Password for the EMC Storage Analytics username

6. Click **OK**.

7. If required, configure the **Advanced Settings**:

Collector	vRealize Operations Manager Collector
Log Level	<p>Configure log levels for each adapter instance. The four levels for logging information are ERROR, WARN, INFO, and DEBUG.</p> <p>ERROR The ERROR level logs only error conditions. The ERROR level provides the smallest amount of logging information.</p> <p>WARN The WARN level logs information when an operation completes successfully but there are issues with the operation.</p> <p>INFO The INFO level logs information about workflow. It describes how an operation occurs.</p> <p>DEBUG The DEBUG level logs all details related to an operation. If logging is set to DEBUG, all other levels of logging information are displayed in the log file.</p> <p>TRACE The TRACE level provides the most detailed information and context to understand the steps leading up to errors and warnings.</p>

The **Manage Solution** dialog box appears.

8. To test the adapter instance, click **Test Connection**.

If the connection is correctly configured, a confirmation box appears.

9. Click **OK**.

The new adapter instance polls for data every five minutes by default. At every interval, the adapter instance will collect information about the VMware vSphere datastore and virtual machines with Raw Device Mapping (RDM). Consumers of the registered VMware service can access the mapping information.

Note

To edit the polling interval, select **Administration > Environment Overview > EMC Adapter Instance**. Select the EMC Adapter instance you want to edit, and click the **Edit Object** icon.

Adding an EMC Adapter instance for SCOM

The SCOM adapter collects the resource and topology information for the computers and virtual machines in a Microsoft Hyper-V environment. To view relationships between VNX resources and resources that are collected by the SCOM adapter, configure an EMC Adapter instance for SCOM.

Before you begin

- Install Hyper-V Management Pack Extensions 2012/2012 R2 in SCOM. The installation binary is available at <https://hypervmpe2012.codeplex.com>.
- Install the Management Pack for EMC storage systems (EMC adapter) on vR Ops.
- Install the Management Pack for SCOM on vR Ops.
- Download the Hyper-V-enabled VNX Topology Dashboard from [ESA Dashboard Exchange](#). Import the dashboard into vR Ops.
- Add your SCOM adapter instance in VMware SCOM MP.

Procedure

1. Open the EMC adapter configuration dialog box.
2. For **Management IP**, type the IP address in this format: *<IP address of the SCOM server>.<Port of the SQL Server instance that stores the SCOM data (default is 1433)>|<database name of the SQL Server that stores the SCOM data (default is OperationsManager)>*.

For example, 10.0.0.1:1433/OperationsManager
3. For **Collector Type**, type **Microsoft SCOM**.
4. For **Credential**, type the username and password to connect to SQL Server.

For Windows authentication, provide the domain name, for example *<domain_name>\<administrator_username>*.
5. Click **Test Connection**. If a "Driver not found" error appears, try again.
6. Verify that the connection is successful and click **Save**.

The SCOM adapter instance is added.

Adding EMC Adapter instances for your storage system

Before you begin

- Install the EMC Adapter for vCenter
- Obtain the adapter license key for your storage system

Each storage system requires an adapter instance. All storage system adapter instances require the EMC Adapter instance for vCenter. Add the EMC Adapter instance for vCenter first. Then add the adapter instances for each storage system. Adapter instances are licensed per array. Observe these exceptions and requirements:

- A VNX Unified array can use the same license for VNX File and VNX Block.
- Global Scope is required for VNX Block access.
- For VPLEX Metro, add an adapter instance for only one of the clusters (either one); this action enables you to monitor both clusters with a single adapter instance.
- For RecoverPoint for Virtual Machines, get the RecoverPoint model that is required for the license.

Procedure

1. In a web browser, type: `https://<vROps_ip_address>/vcops-web-ent` to start the vRealize Operations Manager custom user interface and log in as an administrator.
2. Select **Administration > Solutions > EMC Adapter** and click the **Configure** icon.
The **Manage Solution** dialog box appears.
3. Click the **Add** icon to add a new adapter instance.
4. Configure the following **Adapter Settings** and **Basic Settings**:

Display Name	A descriptive name, such as My Storage System or the array ID
Description	Optional description with more details
License (optional)	License key required for the array that you want to monitor (The license key for the adapter instance appears on the Right to Use Certificate that is delivered to you or through electronic licensing, depending on your order.)

5. Configure these settings based on the adapter instance for your product:

Supported product	Field: Connection Type	Field: Management IP	Field: Array ID (optional)
ScaleIO arrays	ScaleIO	Use the IP address and port of the ScaleIO Gateway.	Not applicable
VNX Block arrays	VNX Block	Use the IP address of one Storage Processor (SP) in a single array. Do not add an adapter instance for each SP.	Not applicable
VNX File and Unified models, VG2 and VG8 gateway models	VNX File	Use the IP address of the primary Control Station.	Not applicable
eNAS	eNAS	Use the IP address of the primary Control station.	Not applicable
VMAX3 and VMAX families	VMAX	Use the IP address of the configured EMC SMI-S Provider (see note).	Required
VNXe3200	VNXe	Use the IP address of the management server.	Not applicable
VPLEX Local or VPLEX Metro	VPLEX	Use the IP address of the management server. For a Metro cluster, use the IP address of either management server, but not both.	Not applicable
XtremIO	XtremIO	Use the IP address of the XMS that manages the XtremIO target cluster.	Use the Array ID of the XtremIO target cluster.
RecoverPoint for Virtual Machines	RecoverPoint for Virtual Machines	Use the IP address of the virtual RecoverPoint appliance.	Not applicable

Note

When adding a VMAX adapter instance, EMC Storage Analytics will use a secure connection to the SMI-S Provider by using HTTPS port 5989 by default. This requires a certificate import (see [Configuring a secure connection to a VMAX Adapter on page 23](#)). To bypass certificate authentication and use HTTP instead of HTTPS, use `<SMI-S IP Address>:5988` in the **Management IP** field.

Note

When adding a VNX File adapter instance, a license is required for the VNX File system.

Note

When adding an eNAS adapter instance, a license is not required.

- In the **Credential** field, select any previously defined credentials for this storage system; otherwise click the **Add New** icon and configure these settings:

Field	Value to enter
Credential name	A name for the credentials information.
Username	<p>Username that EMC Storage Analytics uses to connect to the storage system.</p> <ul style="list-style-type: none"> For ScaleIO, use the credentials of the ScaleIO Gateway. For VNX File or eNAS, use the credentials of the Control Station. For VNX Block, use the credentials of the Storage Processor. For VMAX, use the credentials of an ECOM user with monitor or administrator privileges. The default user/password combination is admin/#1Password. For VNXe, use the credentials of the management server. For VPLEX, use the credentials of the management server (for example, the service user). The default credentials are service/Mi@Dim7T. For XtremIO, use the PSNT serial number of the XtremIO target cluster. For RecoverPoint for Virtual Machines, use the credentials of the virtual RecoverPoint appliance.
Password	Password for the EMC Storage Analytics username on the storage system.

- Click **OK**.

The **Manage Solution** dialog reappears.

- If required, configure the following **Advanced Settings**:

Collector	Automatically select collector
Log Level	<p>Configure log levels for each adapter instance. The four levels for logging information are ERROR, WARN, INFO, and DEBUG.</p> <p>ERROR The ERROR level logs only error conditions. The ERROR level provides the smallest amount of logging information.</p> <p>WARN The WARN level logs information when an operation completes successfully but there are issues with the operation.</p>

INFO The INFO level logs information about workflow. It describes how an operation occurs. DEBUG The DEBUG level logs all details related to an operation. If logging is set to DEBUG, all other levels of logging information are displayed in the log file. TRACE The TRACE level provides the most detailed information and context to understand the steps leading up to errors and warnings.

The **Manage Solution** dialog box appears.

9. Click **Test Connection** to validate the values you entered.

If the adapter instance is correctly configured, a confirmation box appears.

Note

Testing an adapter instance validates the values you entered. Failure to do this step causes the adapter instance to change to the (red) warning state if you enter invalid values and do not validate them.

10. To finish adding the adapter instance, click **OK**.

Editing EMC Adapter instances for your storage system

Before you begin

- Install the EMC Adapter
- Configure the EMC Adapter instance for your storage system
- Obtain an adapter license key for your storage system

The EMC Adapter instances for storage systems require licenses. Adapter instances are licensed per storage array. A VNX Unified array can use the same license for VNX File and VNX Block.

Procedure

1. Start the vRealize Operations Manager custom user interface and log in as administrator.

For example in a web browser, type: `https://<vROps_ip_address>/vcops-web-ent`.

2. Select **Administration > Environment Overview > EMC Adapter Instance**.
3. Select the EMC adapter you want to edit and click the **Edit Object** icon.

The **Edit Object** dialog appears.

4. Edit the fields you need to change. See [Adding EMC Adapter instances for your storage system on page 28](#) for field descriptions.
5. Click **Test Connection** to verify the connection.
6. To finish editing the adapter instance, click **OK**.

CHAPTER 3

EMC Storage Analytics Dashboards

This chapter contains the following topics:

- [Topology mapping](#).....34
- [EMC dashboards](#)..... 47

Topology mapping

Topology mapping is viewed and traversed graphically using vRealize Operations Manager health trees. The dashboards developed for EMC Storage Analytics utilize topology mapping to display resources and metrics.

EMC Storage Analytics establishes mappings between:


- Storage system components
- Storage system objects and vCenter objects

Topology mapping enables health scores and alerts from storage system components, such as storage processors and disks, to appear on affected vCenter objects, such as LUNs, datastores, and VMs. Topology mapping between storage system objects and vCenter objects uses a vCenter adapter instance.

ScaleIO topology

EMC Storage Analytics implements the following topology for ScaleIO.



Figure 2 ScaleIO topology

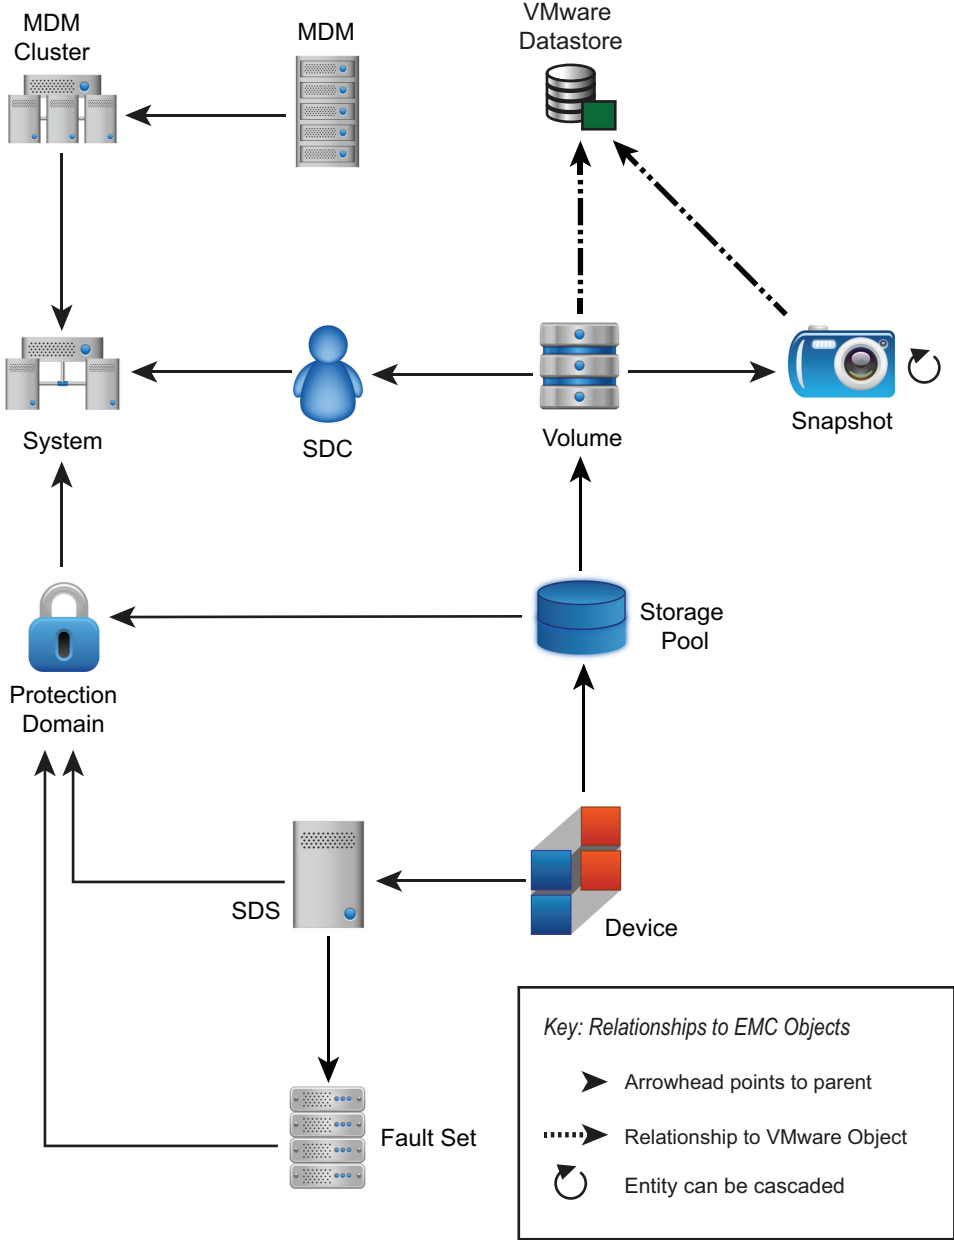

VNX Block topology

EMC Storage Analytics implements the following topology for VNX Block.


Figure 3 VNX Block topology

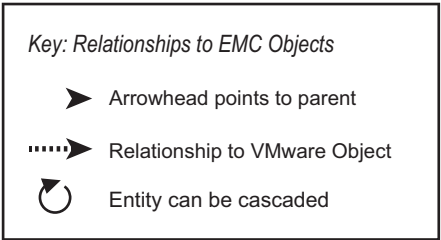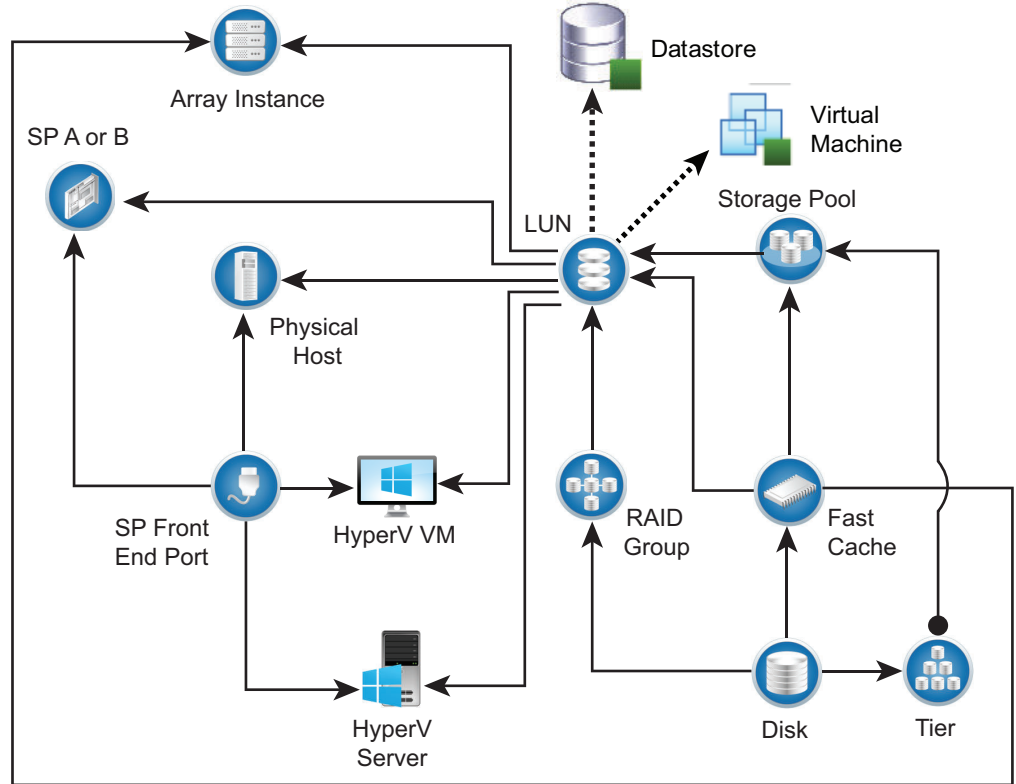

VNX File/eNAS topology

EMC Storage Analytics implements the following topology for VNX File and eNAS.


Figure 4 VNX File/eNAS topology

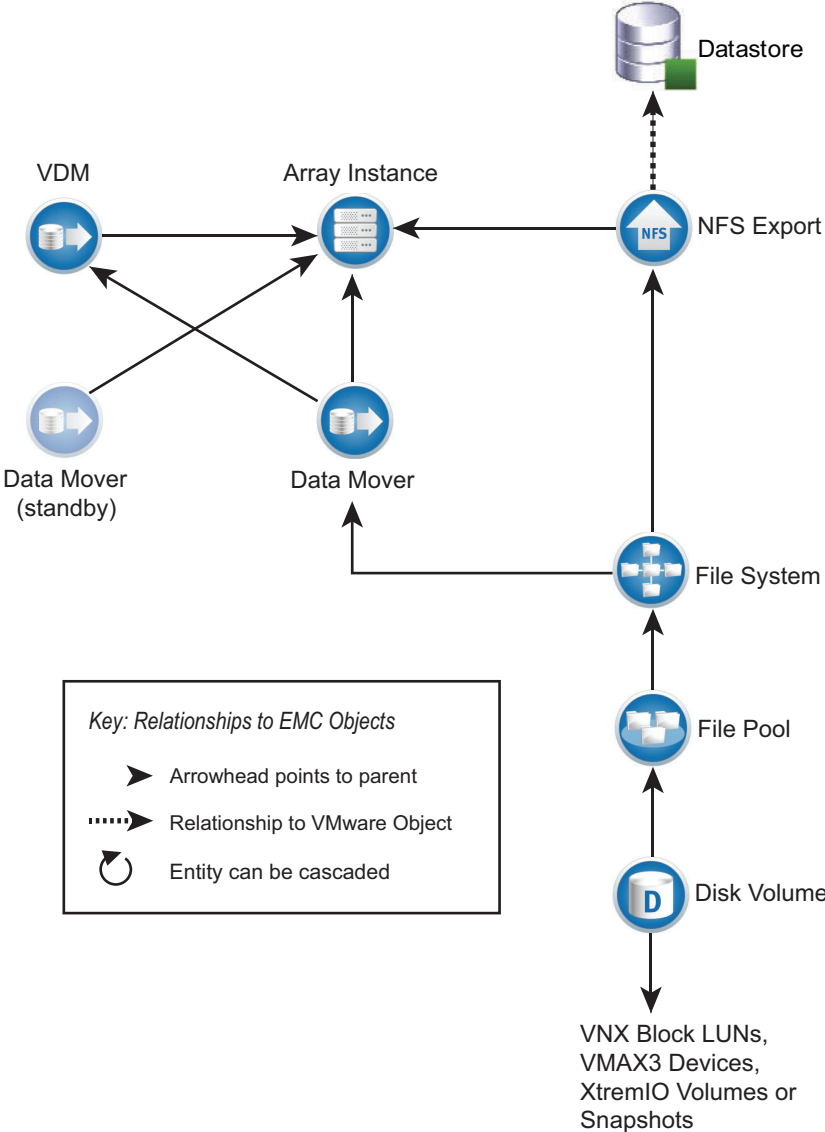

VMAX topology

EMC Storage Analytics implements the following topology for VMAX.


Figure 5 VMAX topology

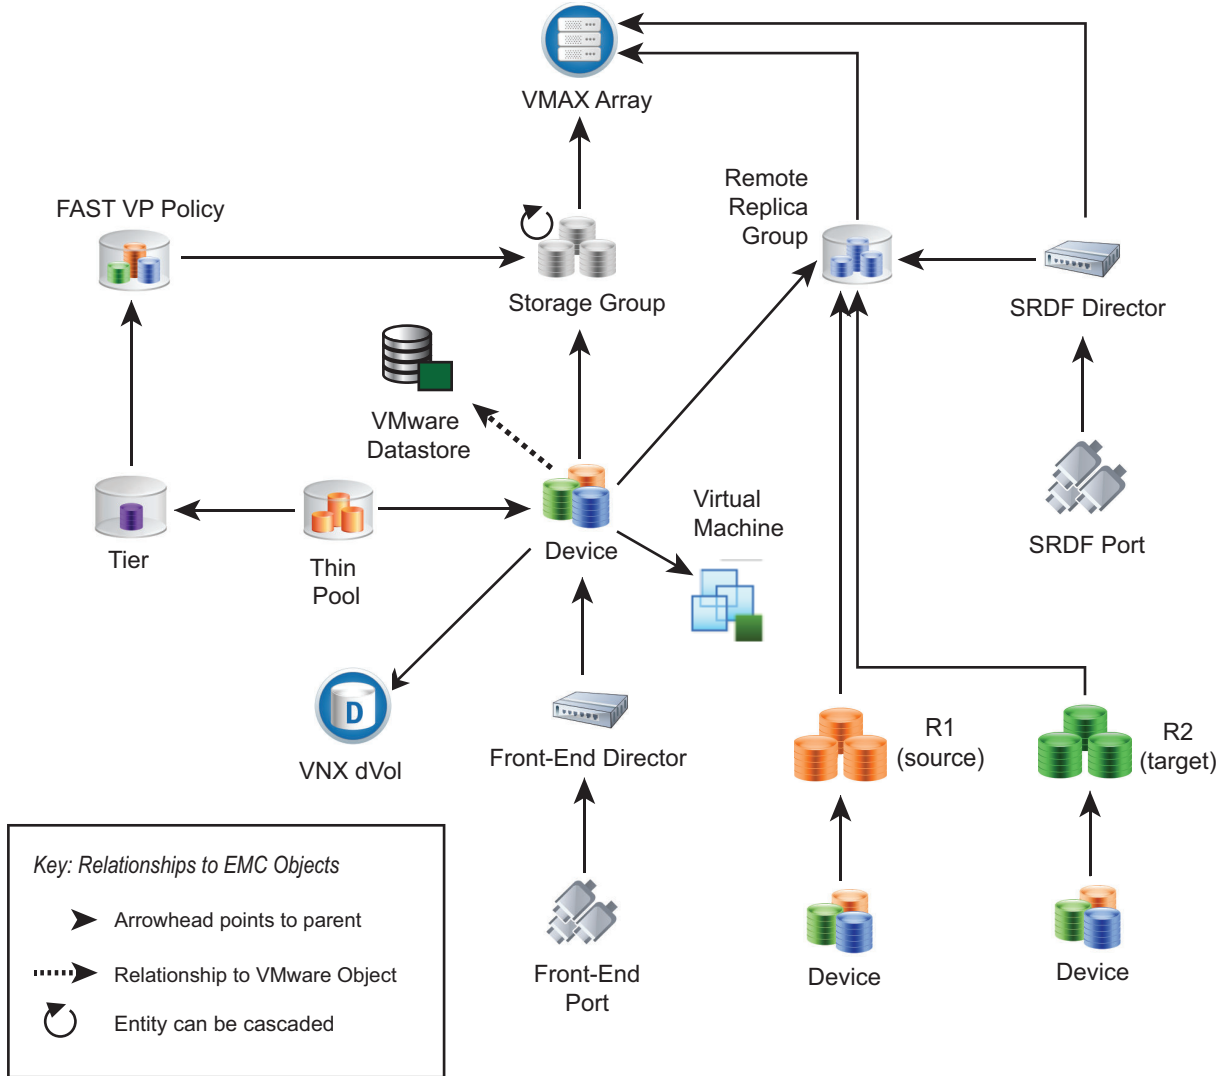

VMAX3 topology

EMC Storage Analytics implements the following topology for VMAX3.

Figure 6 VMAX3 topology

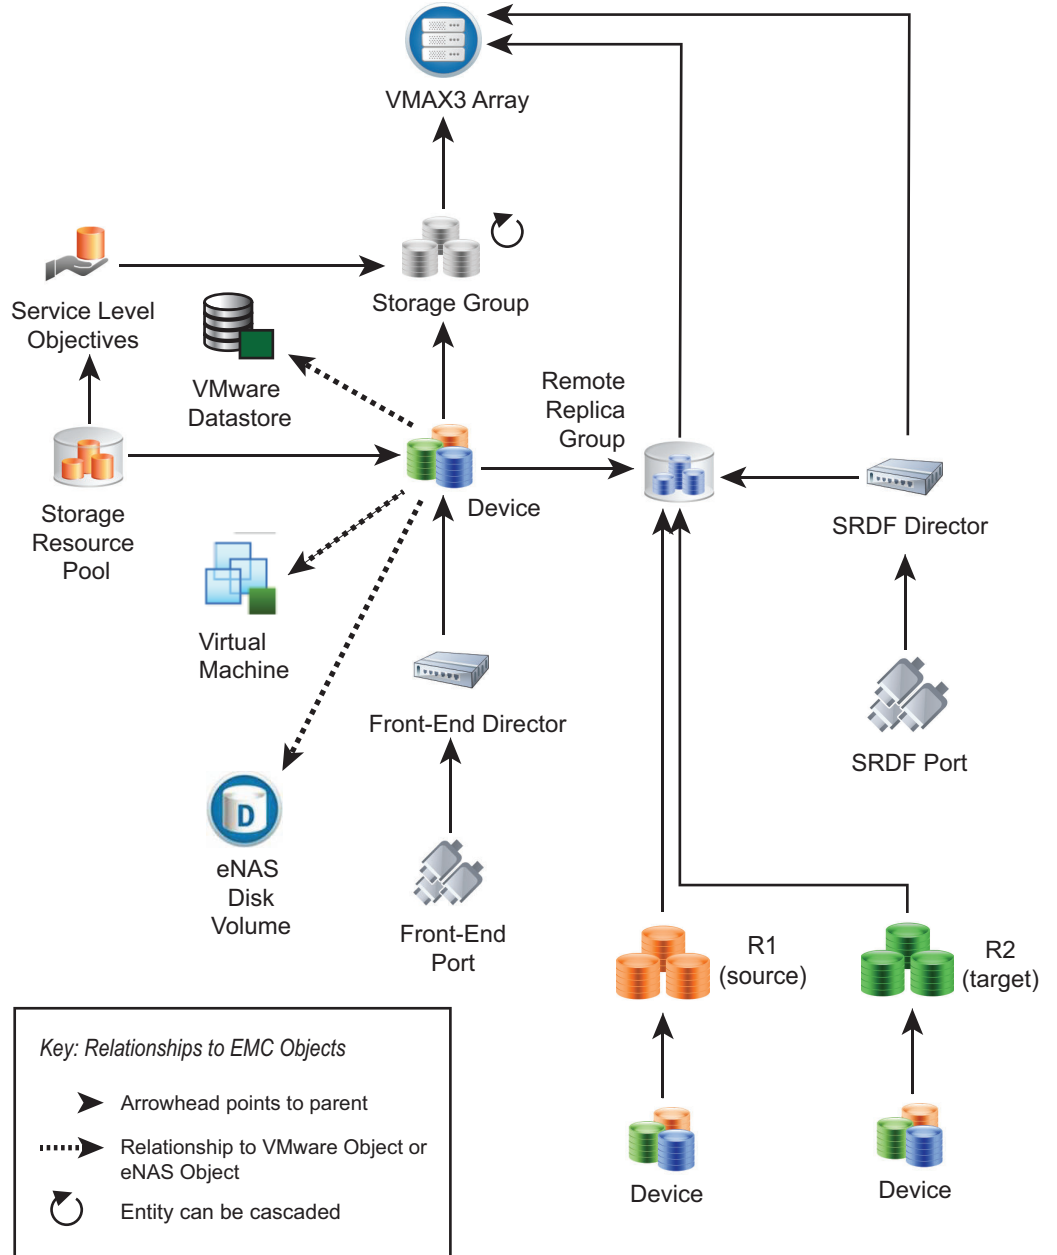

VMAX and VMAX3 topology rules

The following rules govern how objects are displayed in the VMAX topology dashboard and which metrics are collected for them:


- vRealize Operations Manager does not display devices that are unmapped and unbound.
- vRealize Operations Manager does not display devices that are mapped and bound but unused by VMware, VNX, eNAS, or VPLEX. Performance metrics for these devices are aggregated into the parent Storage Group performance metrics.

- If the corresponding EMC vSphere adapter instance is running on the same vRealize Operations Manager appliance, then the vRealize Operations Manager displays devices that are mapped, bound, and used by VMware datastores or RDMS.
- For supported models of VNX File Gateway systems, if the corresponding EMC VNX File or eNAS adapter instance is running on the same vRealize Operations Manager appliance, then the vRealize Operations Manager displays devices that are mapped, bound, and used by VNX File or eNAS Disk Volumes.
- A VMAX device will display when the corresponding VPLEX adapter instance is added.
- vRealize Operations Manager does not display Storage Groups with unmapped and unbound devices.
- vRealize Operations Manager displays Storage Groups that contain mapped and bound devices, and their metrics are aggregates of the member devices.

VNXe topology

EMC Storage Analytics implements the following topology for VNXe.


Figure 7 VNXe topology

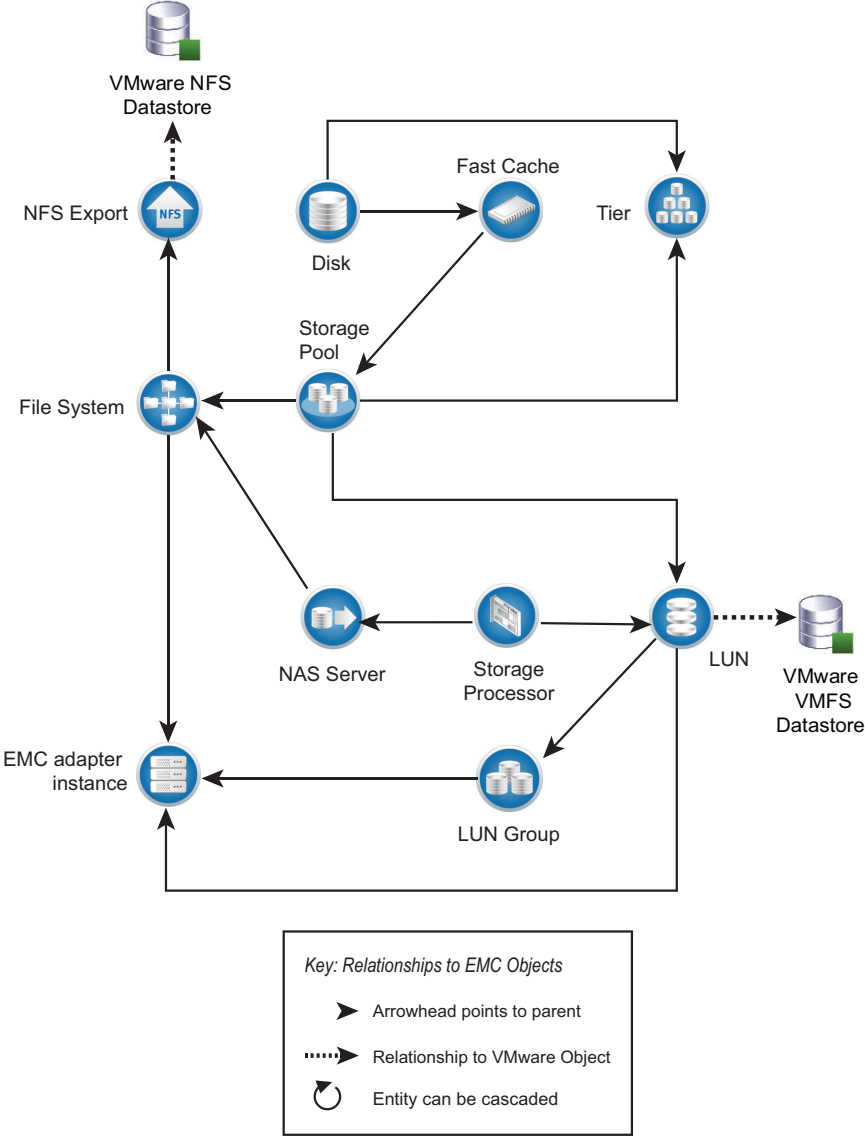

VPLEX Local topology

EMC Storage Analytics implements the following topology for VPLEX Local.


Figure 8 VPLEX Local topology

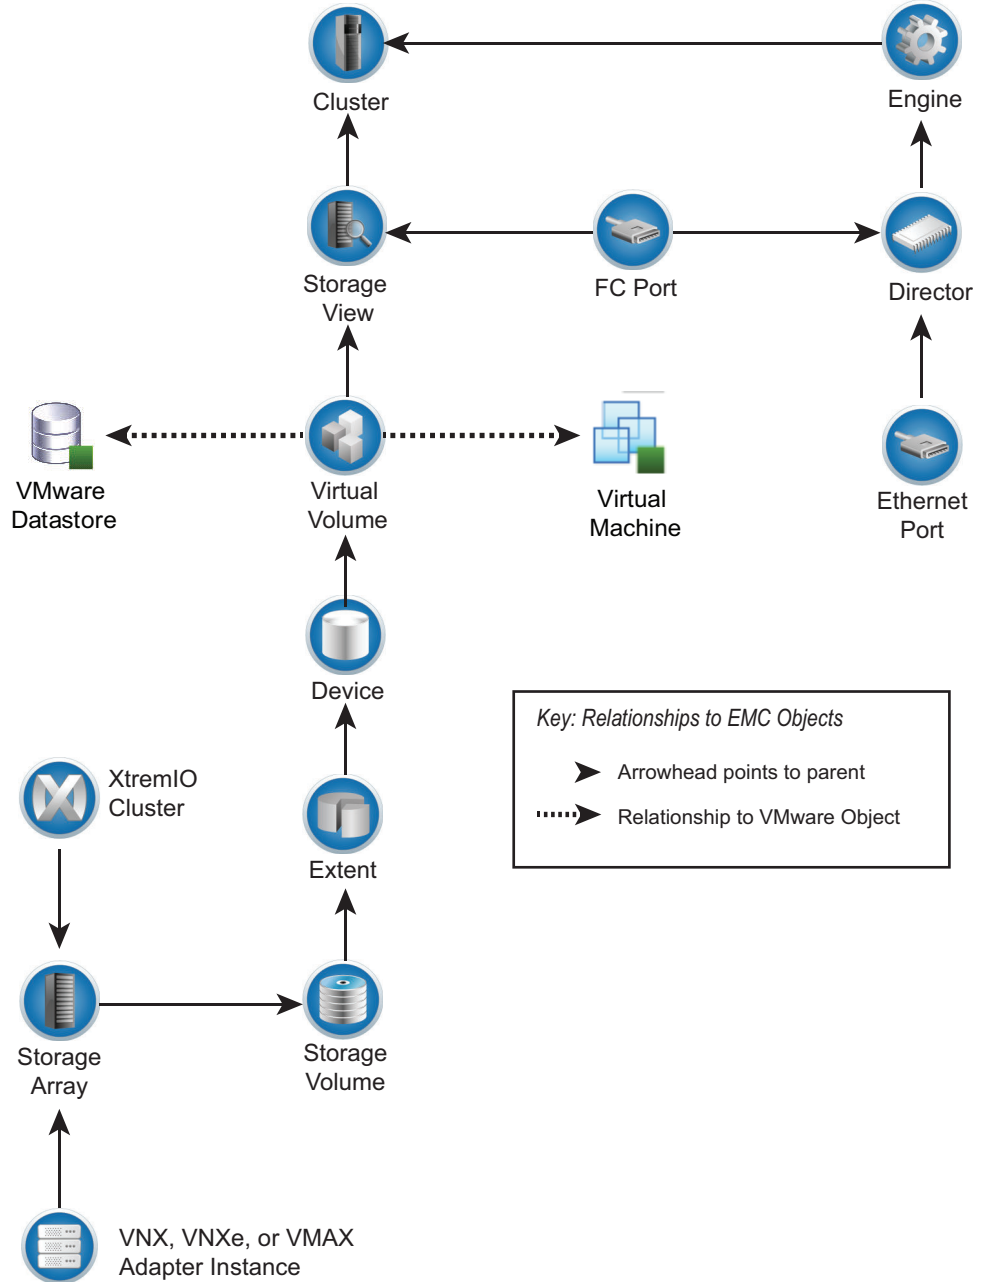

VPLEX Metro topology

EMC Storage Analytics implements the following topology for VPLEX Metro.


Figure 9 VPLEX Metro topology

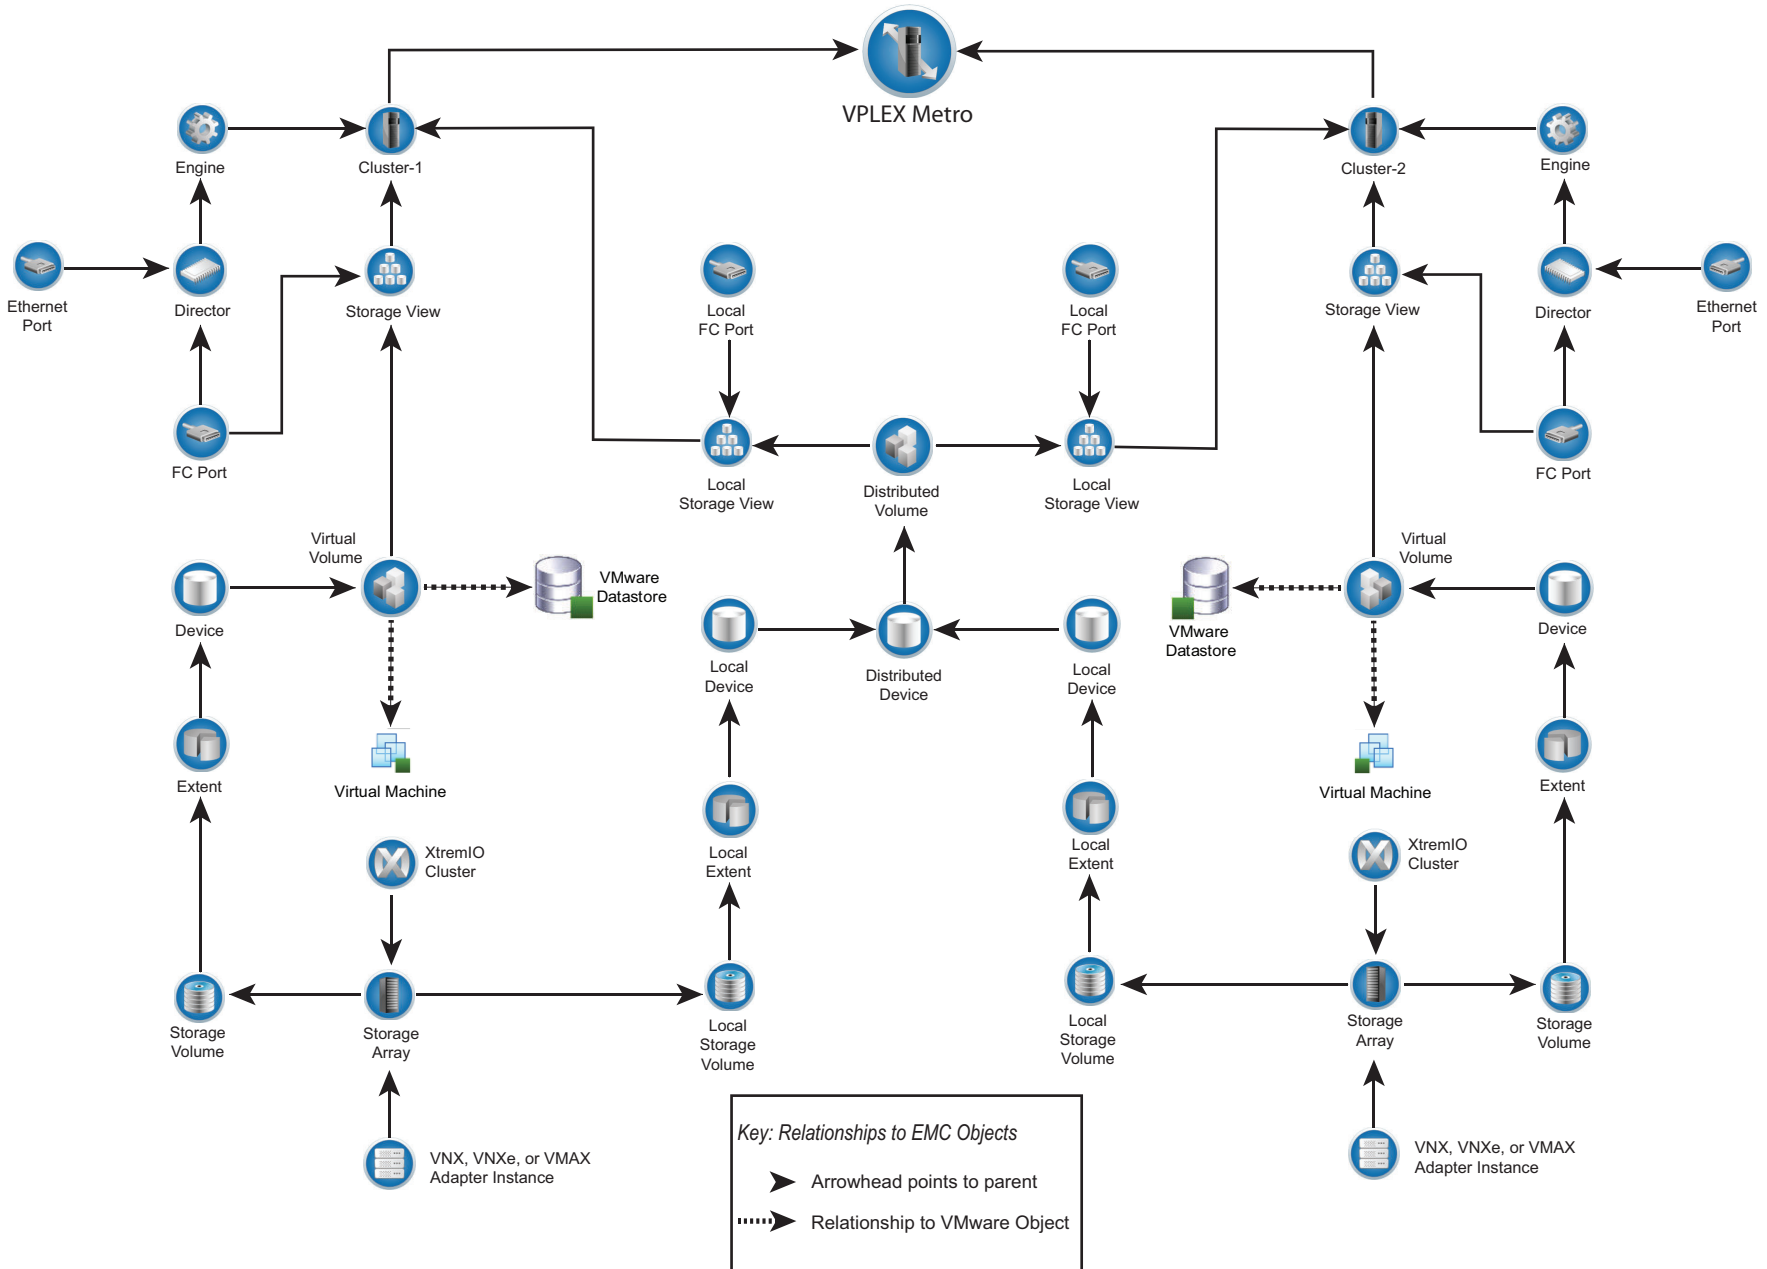

XtremIO topology

XtremIO implements the following topology for XtremIO.


Figure 10 XtremIO topology

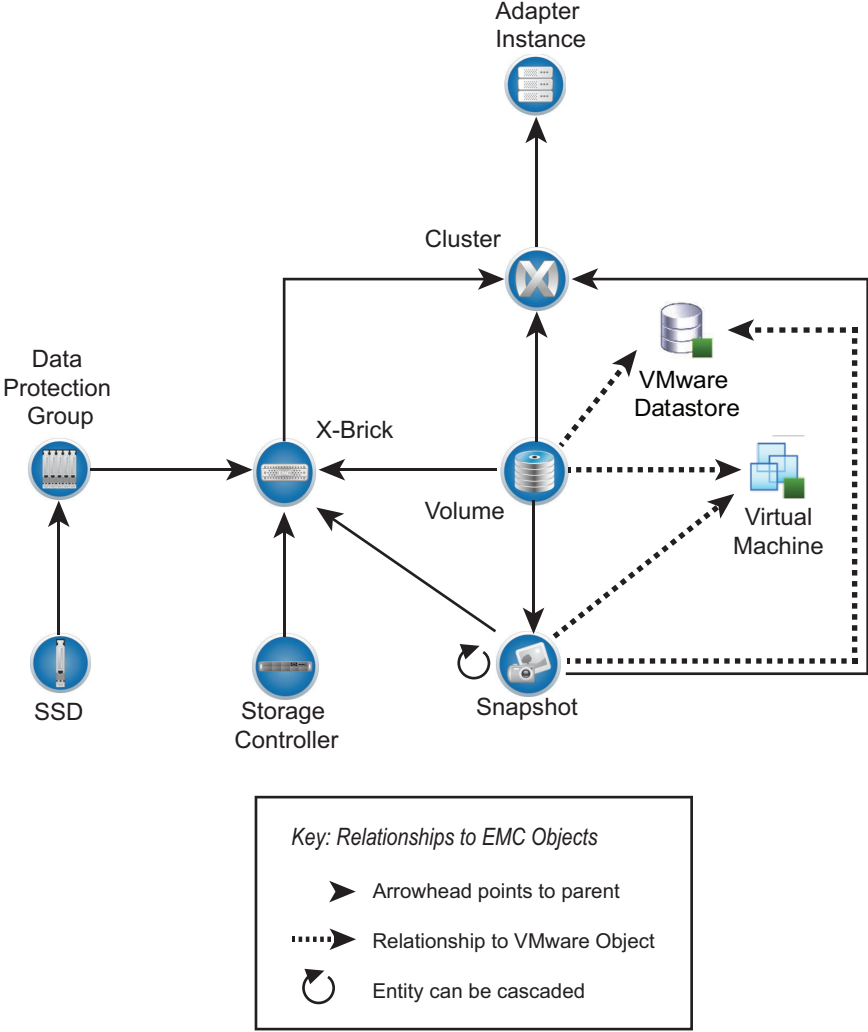

RecoverPoint for Virtual Machines topology

EMC Storage Analytics implements the following topology for RecoverPoint for Virtual Machines.

Figure 11 RecoverPoint for Virtual Machines topology

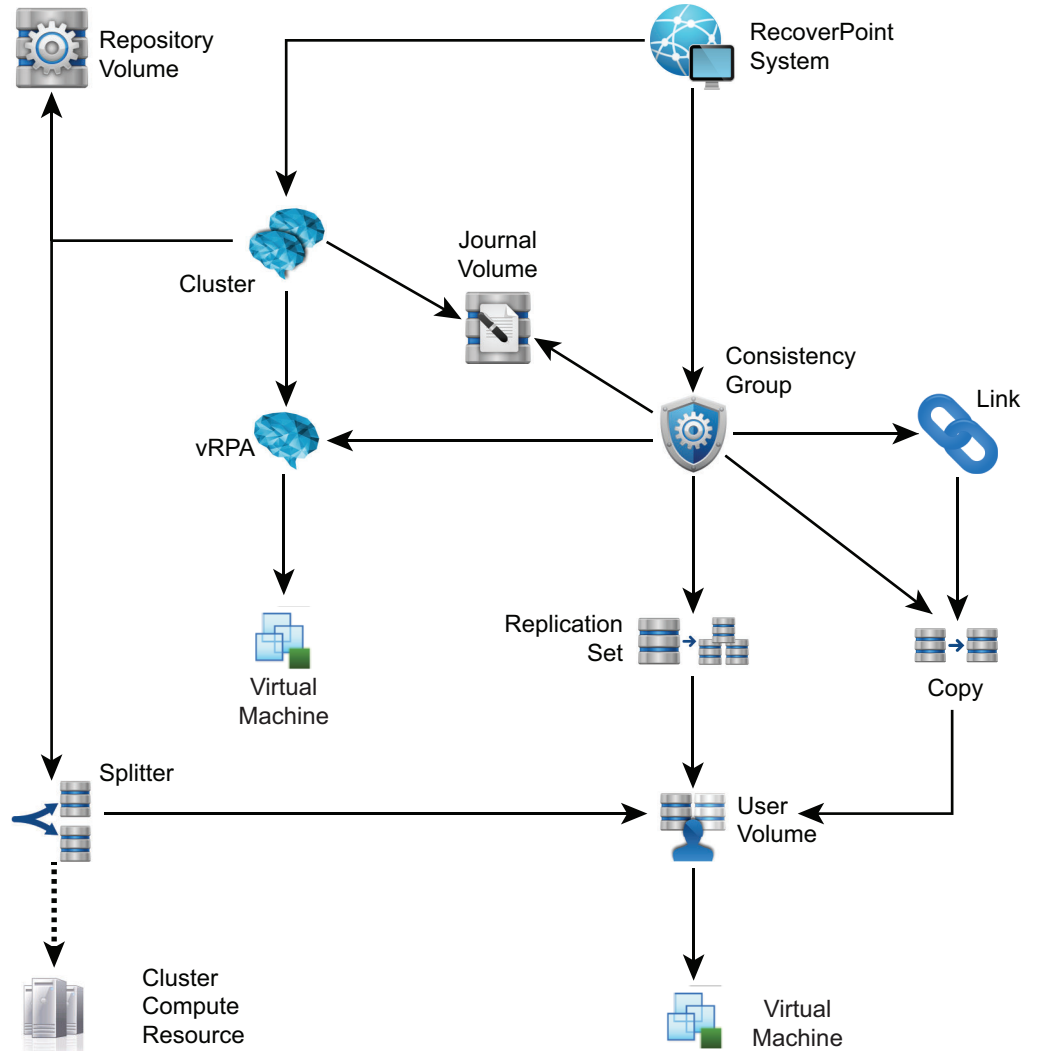

EMC dashboards

Use dashboards to view metrics.

The standard dashboards are delivered as templates. If a dashboard is accidentally deleted or changed, you can generate a new one. [Table 3 on page 47](#) lists the EMC dashboards available for each EMC product.

Table 3 Dashboard-to-product matrix

Dashboard name	ScaleIO	VNX	VNXe	VMAX	VPLEX	XtremIO	RecoverPoint for Virtual Machines
Storage Topology	X	X	X	X	X	X	X
Storage Metrics	X	X	X	X	X	X	X
<i><product_name></i> Overview	X	X	X	X	X	X	X
<i><product_name></i> Topology	X	X	X	X	X	X	---
<i><product_name></i> Metrics	X	X	X	X	X	X	X
Top-N <i><product_name></i>	---	X	X	X	---	X	X
<i><product_name></i> Performance	---	---	---	---	X	X	X

You can use the standard vRealize Operations Manager dashboard customization features to create additional dashboards that are based on your site requirements (some restrictions may apply).

Note

eNAS dashboards are available on the Dashboard XChange. [Dashboard XChange on page 68](#) has more information.

Storage Topology dashboard

The Storage Topology dashboard provides an entry point for viewing resources and relationships between storage and virtual infrastructure objects.

Click the **Storage Topology** tab. Details for every object in every widget are available by selecting the object and clicking the **Object Detail** icon at the top of the widget.

The Storage Topology dashboard contains the following widgets:

Storage System Selector

This **Resource** widget filters the EMC Adapter instances that are found in each storage system. To populate the **Storage Topology and Health** widget, select an instance name.

Storage Topology and Health

This **Health Tree** widget provides a navigable visualization of resources and virtual infrastructure resources. Single-click to select resources, or double-click to change the navigation focus. To populate the **Parent Resources** and **Child Resources** widgets, select a resource in this widget.

Parent resources

This widget lists the parent resources of the resource selected in the **Storage Topology and Health** widget.

Child resources

This widget lists the child resources of the resource selected in the **Storage Topology and Health** widget.

Storage Metrics dashboard

Click the **Storage Metrics** tab to display resource and metrics for storage systems and view graphs of resource metrics.

The Storage Metrics dashboard contains the following widgets:

Storage System Selector

This Resource widget lists all configured EMC Adapter instances. To populate the **Resource Selector** widget, select an instance name.

Resource Selector

This **Health Tree** widget lists each resource associated with the adapter instance selected in the **Storage System Selector**. To populate the **Metric Picker** widget, select a resource.

Metric Picker

This widget lists all the metrics that are collected for the resource selected in the **Resource Selector** widget. The search feature of this widget allows users to locate specific objects. Double-click a metric to create a graph of the metric in the **Metric Graph** widget.

Metric Graph

This widget graphs the metrics selected in the **Metric Picker** widget. Display multiple metrics simultaneously in a single graph or in multiple graphs.

ScaleIO Overview dashboard

Click the **ScaleIO Overview** tab to view a collection of heat maps that provide a single view of the capacity for selected ScaleIO resources with configured adapter instances. Heat maps on this dashboard group the contents by adapter instance.

The ScaleIO dashboard displays the following heat maps. For each heat map and selected metric, the configured ScaleIO adapter is shown.

ScaleIO System

This heat map displays the In UsedCapacity metric. The color of the heat map entries ranges from green to red and corresponds to the In Use Capacity as follows:

- Green indicates that 0 GB of data capacity is allocated.
- Yellow indicates that 500 GB of data capacity is allocated.
- Red indicates that 1000 GB of data capacity is allocated.

ScaleIO Storage Pool

This heat map displays the In UsedCapacity metric for each ScaleIO Storage Pool grouped by ScaleIO System. The color of the heat map entries ranges from green to red and corresponds to the In Use Capacity as follows:

- Green indicates that 0 GB of data capacity is allocated.
- Yellow indicates that 500 GB of data capacity is allocated.
- Red indicates that 1000 GB or more of data capacity is allocated.

ScaleIO Device

This heat map displays the In UsedCapacity metric for each ScaleIO Device grouped by ScaleIO System and SDS associated with. The color of the heat map entries ranges from green to red and corresponds to the In Use Capacity as follows:

- Green indicates that 0 GB of data capacity is allocated.
- Yellow indicates that 500 GB of data capacity is allocated.
- Red indicates that 1000 GB of data capacity is allocated.

ScaleIO Protection Domain

This heat map displays the In UsedCapacity metric for each ScaleIO Protection Domain grouped by ScaleIO System. The color of the heat map entries ranges from light blue to dark blue and corresponds to the In Use Capacity as follows:

- Light Blue indicates that 0 GB of data capacity is allocated.
- Dark Blue indicates that 1000 GB or more of data capacity is allocated.

SDS

This heat map displays the In UsedCapacity metric for each SDS grouped by ScaleIO System and Protection Domain. The color of the heat map entries ranges from light blue to dark blue and corresponds to the In Use Capacity as follows:

- Light Blue indicates that 0 GB of data capacity is allocated.
- Dark Blue indicates that 1000 GB or more of data capacity is allocated.

Fault Set

This heat map displays the In Health% metric for each Fault Set. The color of the heat map entries ranges from light blue to dark blue and corresponds to the In Use Capacity as follows:

- Light Blue indicates 0% health.
- Dark Blue indicates 100% health.

VNX Overview dashboard

Click the **VNX Overview** tab to view a collection of heat maps that provide a single view of the performance and capacity for all VNX resources with configured adapter instances. Heat maps on this dashboard group the contents by adapter instance.

The VNX Overview dashboard displays the following heat maps:

CPU performance

This heat map displays the CPU utilization of each Storage Processor and Data Mover on each configured adapter instance. The color of the heat map entries shows percentage busy:

- Green indicates 0% busy.
- Red indicates 100% busy.

FAST cache performance

This heat map has two modes: Read Cache Hit Ratio and Write Cache Hit Ratio. To select the mode, use the Configuration menu. The Read/Write Cache Hit Ratio (%) is the number of FAST Cache read or write hits divided by the total number of read or write I/Os across all RG LUNs and Pools configured to use FAST Cache. The color of the heat map entries shows hit ratios:

- Green indicates a high FAST Cache hit ratio.
- Red indicates a low FAST Cache hit ratio. A low value on an idle array is acceptable.
- Gray indicates that there is no FAST Cache present on the VNX systems identified by the adapter instances and a `Heat Map not configured message` appears with the heat map.

Pool capacity

This heat map has four modes: RAID Group Available Capacity, Storage Pool Capacity Utilization, Storage Pool Available Capacity, and File Pool Available Capacity.

In Capacity Utilization mode, the color of the heat map entries shows the value of the percentage full metric for all non-RAID Group storage pools:

- Green indicates 0% full.
- Red indicates 100% full.

In Available Capacity mode, the color of the heat map entries shows the value of the Available Capacity (GB) metric:

- Green indicates the largest available capacity on any storage pool for any of the configured adapter instances.
- Red indicates 0 GB available.

LUN and file system performance

This heat map has several modes.

In LUN Utilization mode, the color of the heat map entries show the percentage busy metric for all LUNs grouped by adapter instance:

- Green indicates 0% busy.
- Red indicates 100% busy.

In LUN Latency mode, the color of the heat map entries shows the value of the Latency (ms) metric:

- Green indicates 0 ms latency.
- Red indicates 20 ms or greater latency and is configurable.

Latency values appear for RAID Group LUNs. Pool LUNs appear in white with no latency values reported.

In LUN Read IOPs mode, the color of the heat map entries shows the relative number of read I/O operations per second serviced by the LUN. The color ranges from light green to dark green. Dark green indicates the highest number of read I/O operations per second serviced by any LUN listed in the heat map.

In LUN Write IOPS mode, the color of the heat map entries shows the relative number of write I/O operations per second serviced by the LUN. The color ranges from light green to dark green. Dark green indicates the highest number of write I/O operations per second serviced by any LUN listed in the heat map.

In File System Read IOPs mode, the color of the heat map shows the relative number of read I/O operations per second serviced by the file system. The color ranges from light green to dark green. Dark green indicates the highest number of read I/O operations per second serviced by any file system listed in the heat map.

In File System Write IOPS mode, the color of the heat map entries shows the relative number of write I/O operations per second serviced by the file system. The color ranges from light green to dark green. Dark green indicates the highest number of write I/O operations per second serviced by any file system listed in the heat map.

VMAX Overview dashboard

Click the **VMAX Overview** tab to view a collection of heat maps that provide a single view of the performance and capacity for all VMAX resources with configured adapter instances. Heat maps on this dashboard group the contents by adapter instance.

The VMAX dashboard displays the following heat maps for all applicable VMAX models. For each heat map and selected metric, the configured VMAX adapter is shown:

Thin Pool Usage

This heat map displays the Percent Allocated metric. Percent Allocated displays the allocated capacity in each thin pool. The color of the heat map entries ranges from green to red and corresponds to the percent allocated as follows:

- Green indicates that 0% of the thin pool is allocated.
- Yellow indicates that 50% of the thin pool is allocated.
- Red indicates that 100% of the thin pool is allocated.

Note

This heat map will show no data for VMAX3 arrays because you cannot manipulate thin pools.

The VMAX dashboard displays the following heat maps for all supported VMAX models. For each heat map and selected metric, the configured VMAX adapter is shown:

Storage Group

This heat map has four modes: Total Reads (IOPS), Total Writes (IOPS), Read Latency (ms), and Write Latency (ms).

Total Reads and Writes represent the aggregate reads or writes for all LUNs in the storage group. Write and Read Latency is the average write or read latency of all LUNs in the storage group.

For Total Reads and Writes, the color of the heat map entries shows the relative number of total reads or writes across all the storage groups. The color ranges from light blue to dark blue. Dark blue indicates the storage group(s) with the highest number of total reads or writes while light blue indicates the lowest. Because the range of values for total reads or writes has no lower or upper limits, the numerical difference between light and dark blue may be very small.

For Write and Read Latency, the color of the heat map entries is based on a scale of latency from 0 to 40ms. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately. The color of the heat map entries ranges from green to red as follows:

- Green indicates a latency of 0ms.
- Yellow indicates a latency of 20ms.
- Red indicates a latency of 40ms.

LUN Performance

This heat map has four modes: Reads (IOPS), Writes (IOPS), Read Latency (ms), and Write Latency (ms).

Reads and Writes represent the total reads or writes for a particular LUN. Read and Write Latency is the average read or write latency of all LUNs in the storage group.

For Reads and Writes, the color of the heat map entries shows the relative number of reads or writes across all the LUNs. The color ranges from light blue to dark blue. Dark blue indicates the LUN(s) with the highest number of reads or writes while light blue indicates the lowest. Because the range of values for reads or writes has no lower or upper limits, the numerical difference between light and dark blue may be very small.

For Read and Write Latency, the color of the heat map entries ranges from green to red and is based on a scale of latency from 0 to 40ms. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases EMC recommends adjusting the scale appropriately. The color of the heat map entries range from green to red as follows:

- Green indicates a latency of 0ms.
- Yellow indicates a latency of 20ms.
- Red indicates a latency of 40ms.

Front End Director

This heat map has two modes: Total Bandwidth (MB/s) and Total Operations (IOPS).

Total Bandwidth is the cumulative amount of data transferred over all ports of the front-end director (measured in Megabytes per second). Total Operations is the total number of operations taking place over all ports of a front-end director (measured in IOs per second).

The color of the heat map entries is the same for both metrics. It shows the relative total bandwidth or relative total number of operations, depending on the selected metric. The color ranges from light blue to dark blue. Dark blue indicates the front-end director(s) with the highest number of total operations or the greatest total bandwidth, depending on the selected metric. Light blue indicates the lowest number of operations or the least total bandwidth. Because the range of values for operations or bandwidth has no lower or upper limits, the numerical difference between light and dark blue may be very small.

SRDF Director

This heat map has two modes: Total Bandwidth (MB/s) and Total Writes (IOPS).

Total Bandwidth is the cumulative amount of data transferred over an SRDF director (measured in Megabytes per second). Total Writes is the total number of writes over an SRDF director (measured in IOs per second).

The color of the heat map entries is the same for both metrics. It shows the relative total bandwidth or relative total number of writes, depending on the selected metric. The color ranges from light blue to dark blue. Dark blue indicates the SRDF director(s) with the highest number of total writes or the greatest total bandwidth, depending on the selected metric. Light blue indicates the lowest number of writes or the least total bandwidth. Because the range of values for bandwidth or writes has no lower or upper limits, the numerical difference between light and dark blue may be very small.

SRDF Groups

This heat map has four modes: Devices in Session (count), Average Cycle Time (seconds), Writes (IOPS), and Writes (MB/s).

Devices in Session represents the number of devices in an SRDF session in the SRDF group. The Average Cycle Time is an SRDF/A metric that provides the average elapsed time between data transfer cycles. Writes (IOPS) represents the number of writes per second on the devices in the SRDF group. Writes (MB/s) represents the number of megabytes per second sent from the SRDF group.

The color of the heat map entries is the same for all metrics. It shows the relative devices in session, average cycle time, total bandwidth, or the relative number of writes, depending on the selected metric. The color ranges from light blue to dark blue. Dark blue indicates the SRDF group(s) with the highest number of one these metrics and light blue indicates the lowest number of one of these metrics. Because the range of values has no lower or upper limits, the numerical difference between light and dark blue may be very small.

VNXe Overview dashboard

Click the **VNXe Overview** tab to view a collection of heat maps that provide a single view of the performance and capacity for all VNXe resources with configured adapter instances. Heat maps on this dashboard group the contents by adapter instance.

The VNXe Overview dashboard displays the following heat maps:

CPU Performance

This heat map displays the CPU Utilization, such as % busy, of each Storage Processor on each configured adapter instance. The color of the heat map entries shows % busy:

- Green indicates 0% busy
- Red indicates 100% busy

Pool capacity

This heat map has two modes: Storage Pool Capacity Utilization and Storage Pool Available Capacity.

In Capacity Utilization mode, the color of the heat map entries shows the value of the % full metric for all storage pools:

- Green indicates 0% full.
- Red indicates 100% full.

In Available Capacity mode, the color of the heap map entries shows the value of the Available Capacity (GB) metric:

- Green indicates the largest available capacity on any storage pool for any of the configured adapter instances.
- Red indicates 0 GB available.

LUN Performance

This heat map has two modes: LUN Read IOPS and LUN Write IOPS.

LUN Read IOPS and LUN Write IOPS represent the total reads or writes for a particular LUN. The color of the heat map entries shows the relative number of reads or writes across all the LUNs. The color ranges from light green to dark green. Dark green indicates the LUN(s) with the highest number of reads or writes while light green indicates the lowest. Because the range of values for reads or writes has no lower or upper limits, the numerical difference between light and dark green may be very small.

VPLEX Overview dashboard

Click the **VPLEX Overview** tab to view a collection of scorecard widgets that provide an overview of the health for the VPLEX system.

The EMC VPLEX Overview dashboard displays the following widgets:

Note

Red, yellow, and orange colors correlate with the Health State or Operational Status of the object. Any Health State or Operational Status other than those listed below will show green (good). Also note that because VMware expects numeric values, you cannot modify these widgets.

CPU Health

This widget displays the CPU usage, as a percentage, for each director on the VPLEX. The color of the directors in the widget reflects the CPU usage:

- Green indicates CPU usage of 0 - 75%.
- Yellow indicates CPU usage of 75 - 85%.
- Orange indicates CPU usage of 85 - 95%.
- Red indicates CPU usage of 95 - 100%.

Generally, a director should stay below 75% CPU usage. Correct an imbalance of CPU usage across directors by adjusting the amount of I/O to the busier directors; make this adjustment by modifying existing storage view configurations. Identify busier volumes and hosts and move them to less busy directors. Alternately, add more director ports to a storage view to create a better load balance across the available directors.

Memory Health

This widget displays the memory usage, as a percentage, of each director on the VPLEX. The color of the directors in the widget reflects the memory usage:

- Green indicates memory usage of 0 - 70%.
- Yellow indicates memory usage of 70 - 80%.
- Orange indicates memory usage of 80 - 90%.
- Red indicates memory usage of 90 - 100%.

Front-End Latency - Read/Write

This widget displays read and write latency (in ms) for each Front-end Director.

- Green indicates latency values between 0 ms and 7 ms.
- Yellow indicates latency values of 7 ms up to 11 ms.
- Orange indicates latency values of 11 ms up to 15 ms.
- Red indicates latency values over 15 ms.

Front-End Operations

This widget displays the active and total operations (in counts/s) for each Front-end Director.

VPLEX Performance dashboard

Click the **VPLEX Metrics** tab to view a collection of heat maps that provide a single view of the most important performance metrics for VPLEX resources.

The EMC VPLEX Metrics dashboard displays two types of heat maps:

- Metrics with definitive measurements such as CPU usage (0-100%) or response time latency (0-15ms) are assigned color ranges from lowest (green) to highest (red).
- Metrics with varied values that cannot be assigned a range show relative values from lowest (light blue) to highest (dark blue).

Front-end Bandwidth

This heat map has three modes: Reads (MB/s), Writes (MB/s), and Active Operations (Counts/s)

Reads and Writes represent the total reads or writes for the storage volumes across the front-end ports on a director.

For Reads and Writes, the color of the heat map entries shows the relative front-end bandwidth on a director, depending upon the selected metric.

Active Operations represents the number of active, outstanding I/O operations on the director's front-end ports.

Back-end Bandwidth

This heat map has three modes: Reads (MB/s), Writes (MB/s), and Operations (Counts/s).

Reads and Writes represent the total reads or writes for the storage volumes across the back-end ports on a director.

For Reads and Writes, the color of the heat map entries shows the relative back-end bandwidth on a director, depending upon the selected metric.

Operations represents the number of I/O operations per second through the director's back-end ports.

Back-end Errors

This heat map has three modes: Resets (count/s), Timeouts (count/s), and Aborts (count/s). Resets are LUN resets sent by VPLEX to a storage array LUN when it does not respond to I/O operations for over 20 seconds. Timeouts occur when an I/O from VPLEX to a storage array LUN takes longer than 10 seconds to complete. Aborts occur when an I/O from VPLEX to a storage array LUN is cancelled in transit. Resets indicate more serious problems than timeouts and aborts.

The color of the heat map entries is the same for all metrics. It shows the relative amount of resets, timeouts, or aborts, depending on the selected metric.

Front-end Latency

This heat map has three modes: Read Latency (ms), Write Latency (ms), and Queued Operations (Counts/s).

Write and Read Latency is the average write or read latency for all virtual volumes across all front-end ports on a director.

For Read and Write Latency, the color of the heat map entries is based on a scale of latency from 0 to 15ms, depending upon the selected metric. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately.

For VPLEX Metro systems consisting primarily of distributed devices, the WAN round-trip time greatly affects the front-end write latency. See the COM Latency widgets and the WAN Link Usage widget in the VPLEX Communication dashboard.

Virtual Volumes Latency

This heat map has three modes: Read Latency (ms), Write Latency (ms), and Total Reads & Writes (Counts/s).

Write and Read Latency is the average write or read latency for all virtual volumes on a director.

For Read and Write Latency, the color of the heat map entries is based on a scale of latency from 0 to 15ms, depending on the selected metric. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately.

Total Reads & Writes represents the virtual volume total reads and writes per director.

Storage Volumes Latency

This heat map has two modes: Read Latency (ms) and Write Latency (ms).

Write and Read Latency is the average write or read latency for all storage volumes on a director.

For Read and Write Latency, the color of the heat map entries is based on a scale of latency from 0 to 15ms, depending on the selected metric. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately.

VPLEX Communication dashboard

Click the **VPLEX Communication** tab to view a collection of heat maps that provide a single view of the performance of the communication links for a VPLEX configuration.

The EMC VPLEX Communication dashboard displays two types of heat maps:

- Metrics with definitive measurements such as intra-cluster local COM latency (0-15ms) are assigned color ranges from lowest (green) to highest (red).
- Metrics with varied values that cannot be assigned a range show relative values from lowest (light blue) to highest (dark blue).

Cluster-1 COM Latency

This heat map has one mode: Average Latency (ms).

The Cluster-1 latency statistics represent the intra-cluster local COM latency, which occurs within the rack and is typically fast (less than 1 msec).

For COM Latency, the color of the heat map entries is based on a scale of latency from 0 to 15ms, depending upon the selected metric. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately.

For VPLEX Metro, EMC recommends adjusting the scale based on your discovered WAN round-trip time.

Cluster-2 COM Latency

This heat map has one mode: Average Latency (ms).

The Cluster-2 latency statistics represent the intra-cluster local COM latency, which occurs within the rack and is typically small (less than 1 msec).

For COM Latency, the color of the heat map entries is based on a scale of latency from 0 to 15ms, depending upon the selected metric. This scale is based on average customer requirements and may not represent a customer's particular requirements for latency. In such cases, EMC recommends adjusting the scale appropriately.

For VPLEX Metro, EMC recommends adjusting the scale based on your discovered WAN round-trip time.

WAN Link Usage (VPLEX Metro only)

This heat map has four modes:

- Distributed Device Bytes Received (MB/s)
- Distributed Device Bytes Sent (MB/s)
- Distributed Device Rebuild Bytes Received (MB/s)
- Distributed Device Rebuild Bytes Sent (MB/s)

Distributed Device Bytes Received or Sent represent the total amount of traffic received or sent for all distributed devices on a director.

Distributed Device Rebuild Bytes Received or Sent represent the total amount of rebuild/migration traffic received or sent for all distributed devices on a director.

The color of the heat map entries shows the relative number of distributed device bytes transferred on a director, depending upon the selected metric.

XtremIO Overview dashboard

Click the **XtremIO Overview** tab to view a collection of scorecard widgets that provide an overview of the health for the XtremIO system.

The XtremIO Overview dashboard displays two types of heat maps:

- Metrics with definitive measurements are assigned color ranges from lowest (green) to highest (red).
- Metrics with varied values that cannot be assigned a range show relative values from lowest (light blue) to highest (dark blue).

Cluster Data Reduction

This widget displays the Data Deduplication Ratio and Compression Ratio of each cluster.

Note

Compression Ratio shows as blue if XtremIO version 2.4.1 is running.

Cluster Efficiency

This widget displays the Thin Provisioning Savings (%) and the Total Efficiency of each cluster.

Volume

This widget displays volumes in one of two modes: Total Capacity or Consumed Capacity. Select a volume to display its sparkline charts.

Cluster

This widget displays, for each cluster, the Total Physical and Logical Capacity; Available Physical and Logical Capacity; and Consumed Physical and Logical Capacity.

Snapshot

This widget displays snapshots in one of two modes: Total Capacity or Consumed Capacity. Select a snapshot to display its sparkline charts.

XtremIO Performance dashboard

The XtremIO Performance dashboard provides percent utilization of the Storage Controller CPUs, key volume, and SSD metrics and sparklines.

The XtremIO Performance dashboard displays two types of heat maps:

- Metrics with definitive measurements such as CPU usage (0-100%) are assigned color ranges from lowest (green) to highest (red).
- Metrics with varied values that cannot be assigned a range show relative values from lowest (light blue) to highest (dark blue).

Storage Controllers CPU 1 Utilization (%)

This widget shows the percent utilization of CPU 1.

Storage Controllers CPU 2 Utilization (%)

This widget shows the percent utilization of CPU 2.

Volume

This widget provides five modes: Total Operations, Total Bandwidth, Total Latency, Unaligned (%), and Average Block Size. Select a volume from this widget to display sparklines for it.

SSD

This widget provides two modes: Endurance Remaining and Disk Utilization. Select an SSD from this widget to display sparklines for it.

RecoverPoint for VMs Overview dashboard

Click the **RecoverPoint for VMs Overview** tab to view a collection of heat maps that provide a single view of the performance and capacity for all resources of RecoverPoint for Virtual Machines with configured adapter instances. Heat maps on this dashboard group the contents by adapter instance.

The RecoverPoint for VMs Overview dashboard displays heat maps for metrics with definitive measurements are assigned color ranges from lowest (green) to highest (red).

RecoverPoint for VMs System

This widget displays the number of RecoverPoint splitters and RecoverPoint clusters. It also provides summary information about the systems and clusters.

RecoverPoint Cluster

This widget displays the following for each RecoverPoint system, including summary information:

- The number of consistency groups and the number of clusters
- The number of protected Virtual Machine Disks (VMDKs) and the number of protected user volumes
- The number of protected virtual machines for each RecoverPoint system
- The number of virtual RecoverPoint Appliances (vRPAs) for each cluster

Consistency Group

This widget displays all RecoverPoint for Virtual Machines consistency groups.

Splitter

This widget displays the following for each RecoverPoint system, including summary information:

- The number of vSphere ESX Clusters connected to a given splitters
- The number of attached volumes

RecoverPoint for VMs Performance dashboard

The RecoverPoint for VMs Performance dashboard provides a single view of the most important performance metrics for the resources.

The Performance dashboard displays two types of heat maps:

- Metrics with definitive measurements such as CPU usage (0-100%) are assigned color ranges from lowest (green) to highest (red).
- Metrics with varied values that cannot be assigned a range show relative values from lowest (light blue) to highest (dark blue).

Link | Lag (%)

This widget shows the percent of the current lag for the link and for protection.

Consistency Group | Protection Window

Current Protection Window (Hrs) shows the earliest point in hours for which RecoverPoint can roll back the consistency group's replica copy. Current Protection Window Ratio shows the ratio of the current protection window compared with the required protection window for the Consistency Group.

vRPA | CPU Utilization (%)

This widget shows the percent utilization of virtual RecoverPoint Appliance (vRPA) CPUs.

Cluster

This widget shows the performance for incoming writes (IOPS and KB/s) to clusters.

Consistency Group

This widget shows the performance for incoming writes (IOPS and KB/s) to consistency groups.

vRPA

This widget shows the performance for incoming writes (IOPS and KB/s) to vRPAs.

Topology dashboards

The topology dashboards provide an entry point for viewing resources and relationships between storage and virtual infrastructure objects for supported adapter instances.

Depending on the EMC adapter instance you configured, click the:

- **eNAS** tab
- **ScaleIO Topology** tab
- **VNX Topology** tab
- **VNXe Topology** tab
- **VMAX Topology** tab
- **VPLEX Topology** tab
- **XtremIO Topology** tab

Details for every object in every widget are available by selecting the object and clicking the **Resource Detail** icon at the top of each widget.

The topology dashboards contain the following widgets:

Resource Tree

This widget shows the end-to-end topology and health of resources across vSphere and storage domains. You can configure the hierarchy that is shown by changing the widget settings; changing these settings does not alter the underlying object relationships in the database. Select any resource in this widget to view related resources in the stack.

Health Tree

The **Health Tree** widget provides a navigable visualization of resources that have parent or child relationships to the resource you select in the **Resource Tree** widget. Single-click to select resources, or double-click to change the navigation focus.

Metric Sparklines

This widget shows sparklines for the metrics of the resource you select in the **Resource Tree** widget.

Metrics dashboards

The metrics dashboards display resources and metrics for storage systems and allow the user to view graphs of resource metrics.

Depending on the EMC adapter instance you installed, click the:

- **eNAS Metrics** tab
- **ScaleIO Metrics**
- **VNX Metrics** tab
- **VNXe Metrics** tab
- **VMAX Metrics** tab
- **XtremIO Metrics** tab
- **RecoverPoint for VMs Metrics** tab

Widgets for the metrics dashboards are described next.

Resource Tree/Environment Overview

This widget shows the end-to-end topology and health of resources across vSphere and storage domains. You can configure the hierarchy that is shown by changing the widget settings; changing these settings does not alter the underlying object relationships in the database. Select any resource in this widget to view related resources in the stack.

Metric Selector/Metric Picker

This widget lists all the metrics that are collected for the resource you select in the **Resource Tree/Environment Overview** widget. Double-click a metric to create a graph of the metric in the **Metric Graph/Metric Chart** widget.

Metric Graph/Metric Chart

This widget graphs the metrics you select in the **Metric Selector/Metric Picker** widget. Display multiple metrics simultaneously in a single graph or in multiple graphs.

Resource Events (VNX/VNXe only)

The resource event widget shows a graph that illustrates the health of the selected object over a period of time. Object events are labeled on the graph. When you hover over or click a label, event details appear in a message box:

```
Id: 460
Start Time: May 23, 2014 4:30:52 AM
Cancel Time: May 23, 2014 4:38:28 AM
Trigger: Notification
Resource: Pool 0 (Storage Pool)
Details: FAST VP relocation completed.
```

The message box includes the event ID, start time, cancel time, trigger, resource name, and event details.

To close the message box, click the X button at the top-right corner.

Top-N dashboards

Click a Top-N dashboard to view your top performing devices at a glance.

The Top-N dashboards are available for:

- VNX
- VNXe
- VMAX
- XtremIO
- RecoverPoint for Virtual Machines

Top performing devices are selected based on the current value of the associated metric that you configured for each widget. You can change the time period.

You can also change the number of objects in your top performer list.

VNX and VNXe

By default, a Top-N dashboard shows the top five devices in the following categories across your VNX or VNXe systems:

- Top-5 by Read (IOPS)
- Top-5 by Write (IOPS)
- Top-5 by Read (MB/s)
- Top-5 by Write (MB/s)
- Top-5 by Consumed Capacity

VMAX

By default, a Top-N dashboard shows the top 10 devices in the following categories across your VMAX system:

- Top-10 by Read (IOPS)
- Top-10 by Write (IOPS)
- Top-10 by Read (MB/s)
- Top-10 by Write (MB/s)
- Top-10 by Read Latency (ms)
- Top-10 by Write Latency (ms)

XtremIO

By default, a Top-N dashboard shows the top 10 devices in the following categories across your XtremIO system.

- Top-10 by Read (IOPS)
- Top-10 by Write (IOPS)
- Top-10 by Read Latency (usec)
- Top-10 by Write (usec)
- Top-10 by Read Block Size (KB)
- Top-10 by Write Block Size (KB)
- Top-10 by Total Capacity (GB)

RecoverPoint for Virtual Machines

By default, a Top-N dashboard shows the top 10 devices in the following categories across RecoverPoint for Virtual Machine systems:

- Top-10 vRPAs by Incoming Writes (IO/s) (24h)
- Top-10 vRPAs by Incoming Writes (KB/s) (24h)
- Top-10 Clusters by Incoming Writes (IO/s) (24h)
- Top-10 Clusters by Incoming Writes (KB/s) (24h)
- Top-10 Consistency Groups by Incoming Writes (IO/s) (24h)
- Top-10 Consistency Groups by Incoming Writes (KB/s) (24h)

Dashboard XChange

The Dashboard XChange is a user community page for users to exchange EMC Storage Analytics custom dashboards.

EMC Storage Analytics provides a set of default dashboards that provide you with a variety of functional views into your storage environment. EMC Storage Analytics also enables you to create custom dashboards that allow you to visualize collected data according to your own requirements. The Dashboard XChange is an extension of that feature that enables you to:

- Export custom dashboards to the Dashboard XChange to benefit a wider EMC Storage Analytics community
- Import custom dashboards from the Dashboard XChange to add value to your own environment

The Dashboard XChange, hosted on the EMC Community Network, will also host dashboards designed by EMC to showcase widget functions that may satisfy a particular use-case in your environment. You can import these dashboards into your existing environment to enhance the functionality offered by EMC Storage Analytics. You can also edit imported dashboards to meet the specific requirements of your own storage environment.

The Dashboard XChange provides these resources to assist you in creating custom dashboards:

- How-to video that shows how to create custom dashboards
- Best practices guide that provides detailed guidelines for dashboard creation
- Slide show that demonstrates how to import dashboards from or export them to the Dashboard XChange

The EMC Storage Analytics Dashboard XChange is available at <https://community.emc.com/community/connect/esa>. Note that there are XChange Zones for supported platforms.

CHAPTER 4

Resource Kinds and Metrics

This chapter contains the following topics:

- [ScaleIO metrics](#)..... 70
- [VNX Block metrics](#)..... 74
- [VNX File/eNAS metrics](#)..... 84
- [VMAX metrics](#)..... 91
- [VNXe metrics](#)..... 95
- [VPLEX metrics](#)..... 103
- [XtremIO metrics](#)..... 114
- [XtremIO views and reports](#)..... 119
- [RecoverPoint for Virtual Machines metrics](#)..... 121

ScaleIO metrics

EMC Storage Analytics provides metrics for these Resource Kinds:

Note

Only the Resource Kinds with associated metrics are shown.

- [System metrics on page 70](#)
- [Protection Domain metrics on page 70](#)
- [Device metrics on page 71](#)
- [SDS metrics on page 71](#)
- [Storage pool metrics on page 72](#)
- [Snapshot metrics on page 72](#)
- [MDM cluster metrics on page 72](#)
- [MDM metrics on page 73](#)
- [SDC metrics on page 73](#)
- [SCSI initiator metrics on page 73](#)
- [Fault Set metrics on page 73](#)
- [VTree metrics on page 73](#)

Table 4 System metrics

Metric	Unit	Description
Maximum Capacity	GB	MAX (changed from total) capacity for ScaleIO cluster
Used Capacity	GB	Total used capacity of ScaleIO cluster
Spare Capacity Allocated	GB	Total Spare capacity allocated for the cluster and used by the ScaleIO system in case of failure to rebuild the data
Thin Used Capacity	GB	Thin used capacity for ScaleIO System
Thick Used Capacity	GB	Thick used capacity for ScaleIO System
Protected Capacity	GB	Protected capacity for ScaleIO System
Snap Used Capacity	GB	Snap used capacity for ScaleIO System
Unused Capacity	GB	Available capacity for ScaleIO System
Total Reads	MB/s	The number of read operations performed each second on all ScaleIO volumes at ScaleIO cluster level
Total Writes	MB/s	The number of write operations performed each second on all ScaleIO volumes at ScaleIO cluster level

Table 5 Protection Domain metrics

Metric	Unit	Description
Maximum Capacity	GB	Max (changed from total) capacity for Protection Domain

Table 5 Protection Domain metrics (continued)

Metric	Unit	Description
Used Capacity	GB	Total Used capacity of Protection Domain
Thin Used Capacity	GB	Thin Used capacity for Protection Domain
Thick Used Capacity	GB	Thick Used capacity of Protection Domain
Protected Capacity	GB	Protected capacity available in Protection Domain
Snap Used Capacity	GB	Snap Used capacity of Protection Domain
Unused Capacity	GB	Available capacity of Protection Domain
Total Reads	GB	The number of read operations performed each second on all ScaleIO volumes at Protection Domain level
Total Writes	MB/s	The number of write operations performed each second on all ScaleIO volumes at Protection Domain level

Table 6 Device metrics

Metric	Unit	Description
Maximum Capacity	GB	Max (changed from total) capacity for Disk
Used Capacity	GB	Total Used capacity of Disk
Spare Capacity Allocated	GB	Thin Used capacity for Disk
Thin Used Capacity	GB	Thick Used capacity of Disk
Thick Used Capacity	GB	Snap Used capacity of Disk
Protected Capacity	GB	Available capacity of Disk
Snap Used Capacity	GB	The number of read operations performed each second on all ScaleIO volumes at drive level
Unused Capacity	GB	The number of write operations performed each second on all ScaleIO volumes at drive level
Total Reads	MB/s	The number of forward rebuild read operations performed each second on all ScaleIO volumes at disk level
Total Writes	MB/s	The number of forward rebuild write operations performed each second on all ScaleIO volumes at disk level

Table 7 SDS metrics

Metric	Unit	Description
Maximum Capacity	GB	Max (changed from total) capacity for ScaleIO Data Server
Used Capacity	GB	Total Used capacity of ScaleIO Data Server
Spare Capacity Allocated	GB	Thin Used capacity for ScaleIO Data Server
Thin Used Capacity	GB	Thick Used capacity of ScaleIO Data Server
Thick Used Capacity	GB	Snap Used capacity of ScaleIO Data Server

Table 7 SDS metrics (continued)

Metric	Unit	Description
Protected Capacity	GB	Available capacity of ScaleIO Data Server
Snap Used Capacity	GB	The number of read operations performed each second on all ScaleIO volumes at ScaleIO Data Server level
Unused Capacity	GB	The number of write operations performed each second on all ScaleIO volumes at ScaleIO Data Server level

Table 8 Storage pool metrics

Metric	Unit	Description
Maximum Capacity	GB	Max (changed from total) capacity for storage pool
Used Capacity	GB	Total Used capacity of storage pool
Unused Capacity	GB	Free capacity available in storage pool
Capacity Available for Volume Creation	GB	Capacity available(changed from used) for volume creation and mapping from the storage pool
Thin Used Capacity	GB	Thin Used capacity for storage pool
Thick Used Capacity	GB	Thick Used capacity of storage pool
Protected Capacity	GB	Protected capacity available in storage pool
Snapshot Used Capacity	GB	Snap Used capacity of storage pool
Total Capacity Allocated	GB	Total enabled capacity of storage pool
Total Reads	MB/s	The number of read operations performed each second on all ScaleIO volumes at storage pool level
Total Writes	MB/s	The number of write operations performed each second on all ScaleIO volumes at storage pool level

Table 9 Snapshot metrics

Metric	Unit	Description
Size	GB	Snapshot Size in GB

Table 10 MDM cluster metrics

Metric	Unit	Description
MDM Mode	String	Single or cluster
State	String	NotClustered or ClusteredNormal or ClusteredDegraded or ClusteredTiebreakerDown or ClusteredDegradedTiebreakerDown

Table 11 MDM metrics

Metric	Unit	Description
Name	String	Primary, Secondary, Tie Breaker, Management

Table 12 SDC metrics

Metric	Unit	Description
IP	String	IP address of the SDC client

Table 13 SCSI Initiator metrics

Metric	Unit	Description
IQN	String	IQN number assigned to the SCSI Initiator

Table 14 Fault Set metrics

Metric	Unit	Description
name	String	Name of the Fault Set

Table 15 VTree metrics

Metric	Unit	Description
ID	String	VTree ID assigned

VNX Block metrics

EMC Storage Analytics provides metrics for these Resource Kinds:

- [EMC Adapter Instance on page 74](#) (array)
- [Disk on page 74](#)
- [FAST Cache on page 75](#)
- [Pool LUN on page 76](#)
- [RAID Group on page 78](#)
- [RAID Group LUN on page 78](#)
- [SP Front-end Port on page 79](#)
- [Storage Pool on page 80](#)
- [Storage Processor on page 81](#)
- [Tier on page 82](#)

Table 16 VNX Block metrics for Array

Metric	Additional information
Elapsed collect time (ms)	Time elapsed during the collection.
New metrics in each collect call	Number of new metrics per collection.
New resources in each collect call	Number of new resources per collection.
Number of down resources	Number of down resources for this adapter instance.
Number of metrics collected	Number of metrics collected by this adapter instance.
Number of resources collected	Number of resources collected by this adapter instance.

Table 17 VNX Block metrics for Disk

Metric	Additional information
Busy (%)	The percentage of time during which the disk is servicing any requests.
Capacity (GB)	Total capacity of the disk.
Hard Read Errors (Count)	Number of hard read errors.
Hard Write Errors (Count)	Number of hard write errors.
LUN Count	Total number of LUNs that the disk is serving.
Queue Length	The average number of requests within a polling interval that are waiting to be serviced by the disk, including the one currently in service.
Read Size (MB)	Appears in the Performance metric group. The average size of data read.

Table 17 VNX Block metrics for Disk (continued)

Metric	Additional information
Reads (IOPS)	The average number of read requests from the disk per second.
Reads (MB/s)	The average amount of data read from the disk in megabytes per second.
State	Current state of the disk.
Total Latency (ms)	The average time, in milliseconds, that it takes for one request to pass through the disk, including any waiting time.
Total Operations (IOPS)	The total number of read and write requests per second that pass through the disk.
Total Bandwidth (MB/s)	The total number of host read and write data per second that pass through the disk.
Write Size (MB)	Appears in the Performance metric group. The average size of data written.
Writes (IOPS)	The average number of write requests to the disk per second.
Writes (MB/s)	The average amount of data written to the disk in megabytes per second.

Table 18 VNX Block metrics for FAST Cache

Metric	Additional information
Current Operation	Creating or Destroying.
Current Operation Status	If there is a current FAST Cache operation in progress such as destroying or creating, this displays the percentage complete.
Current Operation Complete (%)	If there is a current FAST Cache operation in progress such as destroying or creating, this displays the percentage complete.
Dirty (%)	Appears in the Performance > SPA and Performance > SPB metric groups. Percentage of write cache pages owned by the SP that contain data that has not yet been flushed out to the FAST Cache.
Flushed (MB)	Appears in the Performance > SPA and Performance > SPB metric groups. The average amount of data in megabytes that was written from the write cache to the FAST Cache.
Mode	Read/Write
RAID Type	The RAID Type of FAST Cache
Read Cache Hit Ratio (%)	The ratio of read requests that the FAST Cache satisfied without requiring any disk access versus the total number of read requests. The higher the ratio the better the read performance.

Table 18 VNX Block metrics for FAST Cache (continued)

Metric	Additional information
Read Cache Hits (Hits/s)	Average number of read requests per second that were satisfied by the FAST Cache without requiring any disk access. Read requests that are not FAST Cache hits are read misses.
Read Cache Misses (Misses/s)	Average number of read requests per second that required one or multiple disk accesses.
Size (GB)	The capacity of FAST Cache.
Write Cache Hit Ratio (%)	The ratio of write requests that the FAST Cache satisfied without requiring any disk access versus the total number of write requests. The higher the ratio the better the write performance.
Write Cache Hits (Hits/s)	Average number of write requests per second that were satisfied by the FAST Cache without requiring any disk access. Write requests that are not FAST Cache hits are write misses.
Write Cache Misses (Misses/s)	Average number of write requests per second that required one or multiple disk accesses.

Table 19 VNX Block metrics for Pool LUN

Metric	Additional information
Average Busy Queue Length	Appears in the Performance metric group. The average number of outstanding requests when the LUN was busy.
Busy (%)	Appears in the Performance > SPA and Performance > SPB metric groups. The fraction of an observation period during which a LUN has any outstanding requests. When the LUN becomes the bottleneck, the utilization is at or near 100%. However, since the I/Os can be serviced by multiple disks, an increase in workload may still result in a higher throughput.
Capacity Tier Distribution (%)	The distribution (%) of the Capacity Tier.
Consumed Capacity (GB)	The amount of space consumed in the pool by the LUN plus overhead.
Explicit trespasses (Count)	Appears in the Performance > SPA and Performance > SPB metric groups. Number of trespasses since the last poll. Default polling cycle is five minutes. Occurs as a result of an external command from a user or the failover software. When an SP receives this command, LUN ownership is transferred to that SP.
Extreme Performance Tier Distribution (%)	The distribution (%) of the Extreme Performance Tier.
Implicit trespasses (Count)	Appears in the Performance > SPA and Performance > SPB metric groups.

Table 19 VNX Block metrics for Pool LUN (continued)

Metric	Additional information
	Number of trespasses since the last poll. Default polling cycle is five minutes. Occurs as a result of software controls within the storage system. An implicit trespass occurs when the amount of I/O transferred across the non-optimal path exceeds the optimal path I/O by a specified threshold.
Initial Tier	The initial tier that was used for initial placement of the new LUN.
Performance Tier Distribution (%)	The distribution (%) of the Performance Tier.
Queue Length	The length of the LUN queue.
Read Cache State	The enabled or disabled state of the read cache.
Read Size (MB)	Appears in the Performance metric group. The average size of data read.
Reads (IOPS)	The average number of host read requests that is passed through the LUN per second. Smaller requests usually result in a higher read throughput than larger requests.
Reads (MB/s)	The average amount of host read data in megabytes that is passed through the LUN per second. Larger requests usually result in a higher bandwidth than smaller requests.
Service Time (ms)	Appears in the Performance metric group. Average service time for successful completion of I/O without retries and queuing delays.
Tiering Policy	The tiering policy of this Pool LUN.
Total Latency (ms)	The average time, in milliseconds, that a request to this LUN is outstanding, including its waiting time.
Total Operations (IOPS)	The total number of read and write requests per second that pass through the LUN.
Total Bandwidth (MB/s)	The total number of host read and write data per second that pass through the LUN.
User Capacity (GB)	The amount of space consumed in the pool by the LUN.
Write Cache State	The enabled or disabled state of the write cache.
Write Size (MB)	Appears in the Performance metric group. The average size of data written.
Writes (IOPS)	The average number of host write requests that is passed through the LUN per second. Smaller requests usually result in a higher write throughput than larger requests.
Writes (MB/s)	The average amount of host write data in megabytes that is passed through the LUN per second. Larger requests usually result in higher bandwidth than smaller requests.

Table 20 VNX Block metrics for RAID Group

Metric	Additional information
Available Capacity (GB)	The remaining free capacity of this RAID Group.
Defragmented (%)	When a defragment operation is in progress, this displays the percentage complete.
Disk Count	Number of disks in this RAID Group.
Free Continuous Group of Unbound Segments (GB)	Size in GB of the largest continuous span of free space in the RAID Group. LUNs must fit into a contiguous span of free space.
Full (%)	Percentage of total capacity that is consumed.
LUN Count	Number of LUNs in this RAID Group.
Max Disks	Maximum number of disks allowed for this RAID Group.
Max LUNs	Maximum number of LUNs allowed for this RAID Group.
Raw Capacity (GB)	The total amount of space available in the RAID Group prior to RAID protection.
User Capacity (GB)	The amount of space available in the RAID Group.

Table 21 VNX Block metrics for RAID Group LUN

Metric	Additional information
Average Busy Queue Length	Appears in the Performance metric group. The average number of outstanding requests when the LUN was busy.
Busy (%)	Appears in the Performance > SPA and Performance > SPB metric groups. The fraction of an observation period during which a LUN has any outstanding requests. When the LUN becomes the bottleneck, the utilization is at or near 100%. However, since the I/Os can be serviced by multiple disks, an increase in workload may still result in a higher throughput.
Queue Length	The length of the LUN queue.
Read Cache State	The enabled or disabled state of the read cache.
Read Size (MB)	Appears in the Performance metric group. The average size of data read.
Reads (IOPS)	The average number of host read requests that is passed through the LUN per second. Smaller requests usually result in a higher read throughput than larger requests.
Reads (MB/s)	The average amount of host read data in megabytes that is passed through the LUN per second. Larger requests usually result in a higher bandwidth than smaller requests.
Service Time (ms)	Appears in the Performance metric group.

Table 21 VNX Block metrics for RAID Group LUN (continued)

Metric	Additional information
	Average service time for successful completion of I/O without retries and queuing delays.
Total Latency (ms)	The average time in milliseconds, that it takes for one request to pass through the LUN, including any waiting time. The higher the queue length for a LUN, the more requests are waiting in its queue, thus increasing the average latency of a single request. For a given workload, queue length and response time are directly proportional.
Total Operations (IOPS)	The total number of read and write requests per second that pass through the LUN.
Total Bandwidth (MB/s)	The total number of host read and write data per second that pass through the LUN.
User Capacity (GB)	The amount of space available in the RAID Group LUN.
Write Cache State	The enabled or disabled state of the write cache.
Write Size (MB)	Appears in the Performance metric group. The average size of data written.
Writes (IOPS)	The average number of host write requests that is passed through the LUN per second.
Writes (MB/s)	The average amount of host write data in megabytes that is passed through the LUN per second.

Table 22 VNX Block metrics for SP Front-end Port

Metric	Additional information
Queue Full Count	The number of times that a front-end port issued a queue full response to the hosts.
Reads (IOPS)	The average number of read requests per second that pass through the SP front-end port.
Reads (MB/s)	The average amount of data read from the disk in megabytes per second.
Total Operations (IOPS)	The total number of read and write requests per second that pass through the SP front-end port.
Total Bandwidth (MB/s)	The total number of host read and write data per second that pass through the SP front-end port.
Writes (IOPS)	The average number of write requests per second that pass through the SP front-end port.
Writes (MB/s)	The average amount of data written to the disk in megabytes per second.

Table 23 VNX Block metrics for Storage Pool

Metric	Additional information
Available Capacity (GB)	Capacity available for use in this Storage Pool.
Auto-Tiering	Shows if auto-tiering is scheduled.
Auto-Tiering State	The enabled or disabled state of auto-tiering.
Consumed Capacity (GB)	Capacity used in this Storage Pool.
Current Operation	Displays the current operation in the pool.
Current Operation Complete (%)	If there is a thin pool operation in progress such as a re-balance, this displays the percentage complete.
Current Operation State	Displays the current operation state.
Current Operation Status	Displays additional descriptive information for the current state of the thin pool.
Data Movement Completed (GB)	Amount of data that has been moved up or down.
Data to Move Down (GB)	Amount of data that is going to be moved down.
Data to Move Up (GB)	Amount of data that is going to be moved up.
Data to Move Within (GB)	Amount of data to move within tiers.
Deduplicated LUNs Shared Capacity (GBs)	Shared capacity of deduplicated LUNs.
Deduplication and Snapshot Savings (GBs)	Capacity savings through deduplication and Snapshots.
Deduplication Rate	Rate of deduplication.
Deduplication State	The deduplication state can take any of these values: Idle (No deduplicated LUNs) Idle (No deduplicated LUNs) - Faulted Pending Pending - Faulted Running (% complete, GB remaining) Running - Faulted (% complete, GB remaining) Paused Paused - Faulted
Disk Count	Number of disks consumed by this Storage Pool.
Disk Type	Type of disks in this Storage Pool.
Estimated Time to Complete	Estimated time to complete the data relocation.
FAST Cache	The enabled or disabled state of the FAST Cache for this Storage Pool.
Full (%)	Percentage of total capacity that is consumed.
Initial Tier	Initial tier can be any of the values available for Tiering Policy (above).
LUN Count	Number of LUNs hosted by this Storage Pool.

Table 23 VNX Block metrics for Storage Pool (continued)

Metric	Additional information
Oversubscribed (GB)	How much the Storage Pool is oversubscribed.
Relocation Rate	Rate at which relocation occurs.
Relocation Start Time	Start time for the relocation.
Relocation Status	Relocation is active or inactive.
Relocation Stop Time	Stop time for the relocation.
Relocation Type	Scheduled or manual relocation.
Schedule Duration Remaining	If using scheduled relocation, this displays the remaining time for the relocation.
Subscribed (%)	Percentage of total capacity that is subscribed.
Threshold (%)	Threshold as percentage of total capacity.
Tiering Policy	<p>With FAST VP enabled, tiering policy can take any of these values:</p> <ul style="list-style-type: none"> Start High then Auto-Tier (recommended) Auto Tier Highest Available Tier Lowest Available Tier No Data Movement <p>With FAST VP disabled, tiering policy can be:</p> <ul style="list-style-type: none"> Optimize for Pool Performance (default) Highest Available Tier Lowest Available Tier

Table 24 VNX Block metrics for Storage Processor

Metric	Additional information
Busy (%)	The percentage of time during which the SP is serving requests. When the SP becomes the bottleneck, the utilization will be at or close to 100%. And increase in workload will have no further impact on the SP throughput, but the I/O response time will start increasing more aggressively.
Dirty Cache Pages (%)	The amount of dirty cache pages by percentage. This metric is for 1st generation VNX models.
Dirty Cache Pages (MB)	The amount of dirty cache pages in megabytes. This metric is for 2nd generation VNX models.
Read Cache Hit Ratio (%)	The ratio of read requests that the SP Cache satisfied without requiring any disk access versus the total number of read requests.
Read Cache Size (MB)	The size of the read cache in megabytes. This metric is only for 1st generation VNX models.

Table 24 VNX Block metrics for Storage Processor (continued)

Metric	Additional information
Read Cache State	The enabled or disabled state of the read cache.
Read Size (MB)	Appears in the Disk metric group. The average size of data read.
Reads (IOPS)	The average number of host read requests that is passed through the SP per second. Smaller requests usually result in a higher read throughput than larger requests.
Reads (MB/s)	The average amount of host read data in megabytes that is passed through the SP per second. Larger requests usually result in a higher bandwidth than smaller requests.
Total Operations (IOPS)	The total number of read and write requests per second at the time when the SP is polled.
Total Bandwidth (MB/s)	The total number of read and write requests that pass through the SP per second.
Write Cache Hit Ratio (%)	The ratio of write requests that the SP Cache satisfied without requiring any disk access versus the total number of write requests.
Write Cache Flushes (MB/s)	The average amount of data in megabytes that was written from the write cache to the disks per second. The value is a measure of back-end activity.
Write Cache Size (MB)	The size of the write cache in megabytes. This metric is only for 1st generation VNX models.
Write Cache State	The enabled or disabled state of the write cache.
Write Size (MB)	Appears in the Disk metric group. The average size of data written.
Writes (IOPS)	The number of writes per second at the time when the SP is polled. Smaller requests usually result in a higher write throughput than larger requests.
Writes (MB/s)	The average write request size in megabytes that passes through the SP per second. Larger requests usually result in higher bandwidth than smaller requests.

Table 25 VNX Block metrics for Tier

Metric	Additional information
Available Capacity (GB)	Capacity still available for use.
Consumed Capacity (GB)	Used capacity.
Disk Count	Number of disks in the tier.
Higher Tier (GB)	Amount of data targeted for higher tiers.
Lower Tier (GB)	Amount of data targeted for lower tiers.

Table 25 VNX Block metrics for Tier (continued)

Metric	Additional information
RAID Type	Type of RAID applied to the tier.
Subscribed (%)	Percentage of tier that is subscribed.
User Capacity (GB)	Free capacity for users.

VNX File/eNAS metrics

EMC Storage Analytics provides metrics for these Resource Kinds:

- [EMC Adapter Instance on page 84](#) (array)
- [Data Mover on page 84](#) (includes Virtual Data Mover)
- [dVol on page 88](#)
- [File Pool on page 89](#)
- [File System on page 89](#)

Table 26 VNX File/eNAS metrics for Array

Metric	Additional information
Elapsed collect time (ms)	Amount of elapsed time for the collection.
New metrics in each collect call	Number of new metrics per collection.
New resources in each collect call	Number of new resources per collection.
Number of down resources	Number of down resources for this adapter instance.
Number of metrics collected	Number of metrics collected by this adapter instance.
Number of resources collected	Number of resources collected by this adapter instance.

Table 27 VNX File/eNAS metrics for Data Mover

Metric	Metric Group	Description
Buffer Cache Hit Ratio (%)	Cache	Buffer Cache Hit ratio percentage.
DNLC Hit Ratio (%)	Cache	Directory Name Lookup Cache (DNLC) hit ratio percentage used for pathname resolution logic.
Open File Cache Hit Ratio (%)	Cache	Open File Cache Hit ratio percentage.
Type	Configuration	Data Mover type. The value can be Active (for the primary Data Mover), Standby, or VDM.
Busy (%)	CPU	CPU utilization percentage during this interval.
Reads (MB/s)	Disk	Storage in megabytes per second received from all server-storage interfaces.
Total Bandwidth (MB/s)	Disk	The total bandwidth in megabytes per second for the Data Mover.
Writes (MB/s)	Disk	Storage in megabytes per second sent to all server-storage interfaces.
CIFS Average Read Size (KB)	Network	Average CIFS read size

Table 27 VNX File/eNAS metrics for Data Mover (continued)

Metric	Metric Group	Description
CIFS Average Write Size (KB)	Network	Average CIFS write size
CIFS Reads (IOPS)	Network	IOs per second for CIFS reads
CIFS Reads (MB/s)	Network	Megabytes per second for CIFS reads
CIFS Total Operations (IOPS)	Network	The total number of CIFS read and write requests per second that pass through the Data Mover.
CIFS Total Bandwidth (MB/s)	Network	The total number of CIFS read and write data per second that pass through the Data Mover.
CIFS Writes (IOPS)	Network	Input/output operations per second for CIFS writes
CIFS Writes (MB/s)	Network	Megabytes per second for CIFS writes
NFS Average Read Size (Bytes)	Network	Average size of data read.
NFS Average Write Size (Bytes)	Network	Average size of data written.
NFS Reads (IOPS)	Network	NFS read operations per second.
NFS Reads (MB/s)	Network	NFS read data response in megabytes per second.
NFS Total Bandwidth (MB/s)	Network	The total number of NFS read and write data per second that pass through the Data Mover.
NFS Total Operations (IOPS)	Network	The total number of NFS read and write requests per second that pass through the Data Mover.
NFS Writes (IOPS)	Network	NFS write operations per second.
NFS Writes (MB/s)	Network	NFS write data response in megabytes per second.
Network In Bandwidth (MB/s)	Network	Network in bandwidth. megabytes received per second.
Network Out Bandwidth (MB/s)	Network	Network out bandwidth. megabytes sent per second.
Total Network Bandwidth (MB/s)	Network	The total network bandwidth per second.
Read Calls/s	Network > NFSv2, NFSv3, and NFSv4	Read calls per second
Read Errors/s	Network > NFSv2, NFSv3, and NFSv4	Read errors per second
Read Response Time (ms)	Network > NFSv2, NFSv3, and NFSv4	Total read response time

Table 27 VNX File/eNAS metrics for Data Mover (continued)

Metric	Metric Group	Description
Write Calls/s	Network › NFSv2, NFSv3, and NFSv4	Write calls per second
Write Errors/s	Network › NFSv2, NFSv3, and NFSv4	Write errors per second
Write Response Time (ms)	Network › NFSv2, NFSv3, and NFSv4	Total write response time
Access Calls/s	Network › NFSv3	Access calls per second
Access Errors/s	Network › NFSv3	Access errors per second
Access Response Time (ms)	Network › NFSv3	Total access response time
GetAttr Calls/s	Network › NFSv3	Get file attributes (GetAttr) per second
GetAttr Errors/s	Network › NFSv3	GetAttr errors per second
GetAttr Response Time (ms)	Network › NFSv3	Total response time for GetAttr
Lookup Calls/s	Network › NFSv3	Lookup calls per second
Lookup Errors/s	Network › NFSv3	Lookup errors per second
Lookup Response Time (ms)	Network › NFSv3	Total lookup response time
SetAttr Calls/s	Network › NFSv3	Set file attributes (SetAttr) per second
SetAttr Errors/s	Network › NFSv3	SetAttr errors per second
SetAttr Response Time (ms)	Network › NFSv3	Total response time for SetAttr
Close Calls/s	Network › NFSv4	Close calls per second
Close Errors/s	Network › NFSv4	Close errors per second
Close Response Time (ms)	Network › NFSv4	Total close response time
Compound Calls/s	Network › NFSv4	Compound calls per second
Compound Errors/s	Network › NFSv4	Compound errors per second
Compound Response Time (ms)	Network › NFSv4	Total compound response time
Open Calls/s	Network › NFSv4	Open calls per second
Open Errors/s	Network › NFSv4	Open errors per second
Open Response Time (ms)	Network › NFSv4	Total open response time
Close Average Response Time (ms)	Network › SMB1	Close average response time

Table 27 VNX File/eNAS metrics for Data Mover (continued)

Metric	Metric Group	Description
Close Calls/s	Network › SMB1	Close calls per second
Close Max Response Time (ms)	Network › SMB1	Close maximum response time
NCreateX Average Response Time (ms)	Network › SMB1	NCreateX average response time
NCreateX Calls/s	Network › SMB1	NCreateX calls per second
NCreateX Max Response Time (ms)	Network › SMB1	NCreateX maximum response time
ReadX Average Response Time (ms)	Network › SMB1	Average response time for ReadX
ReadX Calls/s	Network › SMB1	ReadX calls per second
ReadX Max Response Time (ms)	Network › SMB1	ReadX maximum response time
Trans2Prim Average Response Time (ms)	Network › SMB1	Trans2Prim average response time
Trans2Prim Calls/s	Network › SMB1	Trans2Prim calls per second
Trans2Prim Max Response Time (ms)	Network › SMB1	Trans2Prim maximum response time
WriteX Average Response Time (ms)	Network › SMB1	WriteX average response time
WriteX Calls/s	Network › SMB1	WriteX calls per second
WriteX Max Response Time (ms)	Network › SMB1	WriteX maximum response time
Close Average Response Time (ms)	Network › SMB2	Close average response time
Close Calls/s	Network › SMB2	Close calls per second
Close Max Response Time (ms)	Network › SMB2	Close maximum response time
Flush Average Response Time (ms)	Network › SMB2	Flush average response time
Flush Calls/s	Network › SMB2	Flush calls per second
Flush Max Response Time (ms)	Network › SMB2	Flush maximum response time
Create Average Response Time (ms)	Network › SMB2	Create average response time
Create Calls/s	Network › SMB2	Create calls per second
Create Max Response Time (ms)	Network › SMB2	Create maximum response time

Table 27 VNX File/eNAS metrics for Data Mover (continued)

Metric	Metric Group	Description
IOCTL Average Response Time (ms)	Network > SMB2	Input/Output Control average response time
IOCTL Calls/s	Network > SMB2	Input/Output Control (IOCTL) calls per second
IOCTL Max Response Time (ms)	Network > SMB2	Input/Output Control maximum response time
Queryinfo Average Response Time (ms)	Network > SMB2	Query information average response time
Queryinfo Calls/s	Network > SMB2	Query information calls per second
Queryinfo Max Response Time (ms)	Network > SMB2	Query information maximum response time
Read Average Response Time (ms)	Network > SMB2	Read average response time
Read Calls/s	Network > SMB2	Read calls per second
Read Max Response Time (ms)	Network > SMB2	Read maximum response time
Write Average Response Time (ms)	Network > SMB2	Write average response time
Write Calls/s	Network > SMB2	Write calls per second
Write Max Response Time (ms)	Network > SMB2	Write maximum response time

Table 28 VNX File/eNAS metrics for dVol

Metric	Additional information
Average Read Size (Bytes)	Average size of data read.
Average Write Size (Bytes)	Average size of data written.
Average Completion Time (μ Sec/call)	Average time for completion of an I/O.
Average Service Time (μ Sec/call)	Average service time for successful completion of I/O without retries and queuing delays.
Capacity (GB)	Total capacity of the disk volume.
IO Retries (IOPS)	Number of I/O retries per second.
Queue Length	Length of disk queue
Reads (IOPS)	Number of read operations on the disk per second.
Reads (MB/s)	Megabytes read from the disk per second.
Total Operations (IOPS)	Number of I/O operations on the disk volume per second.
Total Bandwidth (MB/s)	Total bandwidth of the disk volume.
Utilization (%)	Percentage time that disk has been utilized.

Table 28 VNX File/eNAS metrics for dVol (continued)

Metric	Additional information
Writes (IOPS)	Number of write operations on the disk per second.
Writes (MB/s)	Mbytes written to the disk per second.

Table 29 VNX File/eNAS metrics for File Pool

Metric	Additional information
Available Capacity (GB)	Capacity still available for use.
Capacity (GB)	Total capacity of the file pool.
Consumed Capacity (GB)	Consumed capacity of the file pool.

Table 30 VNX File/eNAS metrics for File System

Metric	Additional information
Available Capacity (GB)	Capacity still available for use.
Average Read Size (Bytes)	Average size of data read.
Average Write Size (Bytes)	Average size of data written.
Capacity (GB)	Total space available for storage of user data (does not include metadata).
Consumed Capacity (GB)	Consumed capacity of the File System.
Thin Provisioning	True indicates that the file system is enabled for virtual provisioning, an option that can only be used with automatic file system extension. Combining automatic file system extension with virtual provisioning allows growth of the file system gradually and as needed. When virtual provisioning is enabled, NFS and CIFS clients receive reports for either the virtual maximum file system size or real file system size, whichever is larger.
Max Capacity (GB)	If automatic extension is enabled, the file system will automatically extend to this maximum size when the high water mark is reached. The default value for the high water mark is 90 percent.
Read IO Ratio (%)	Percentage of total I/Os that are read I/Os.
Read Requests (Requests/s)	Read operations per second in the interval.
Reads (IOPS)	The average read operations per second.
Reads (MB/s)	Read data response per second.
Total Bandwidth (MB/s)	The total number of read and write data per second for the file system.
Total Operations (IOPS)	The total number of read and write data per second for the file system.

Table 30 VNX File/eNAS metrics for File System (continued)

Metric	Additional information
Write IO Ratio (%)	Percentage of total I/Os that are write I/Os.
Write Requests (Requests/s)	Write operations per second in the interval.
Writes (IOPS)	The average write operations per second.
Writes (MB/s)	Write data response per second.

VMAX metrics

EMC Storage Analytics provides metrics for the following applicable VMAX and VMAX3 Resource Kinds:

- [Device on page 91](#)
- [Front-End Director on page 92](#)
- [Front-End Port on page 92](#)
- [Remote Replica Group on page 92](#)
- [SRDF Director on page 92](#)
- [Storage Group on page 93](#)
- [FAST VP Policy on page 91](#)
- [Thin Pool on page 94](#)
- [Storage Resource Pool on page 94](#)

Table 31 VMAX metrics for Device

Metric	Definition
Read Latency (ms)	The average time it took the VMAX array to serve one read I/O for this device.
Reads (IOPS)	The number of read operations performed each second on the device.
Reads (MB/s)	The number of megabytes read per second from the device.
Total Bandwidth (MB/s)	The total number of read and write megabytes performed each second on the device.
Total Capacity	The total capacity available (in GBs) on the device.
Total Operations (IOPS)	The total reads and writes performed each second on the device.
Used Capacity	The capacity used (in GBs) by the device.
Write Latency (ms)	The average time it took the VMAX array to serve one write I/O for this device.
Writes (IOPS)	The total number of write I/O operations performed each second by the VMAX volume (LUN).
Writes (MB/s)	The cumulative number of megabytes written per second to the device.

Table 32 VMAX metrics for FAST VP Policy

Metric	Metric group	Definition
Name	Tier 1, Tier 2, Tier 3, Tier 4	The name of the FAST VP policy.
Percent in policy	Tier 1, Tier 2, Tier 3, Tier 4	Percentage of tier within a policy.

Table 33 VMAX metrics for Front-End Director

Metrics	Definition
Reads (IOPS)	The total read operations the front-end director processes per second.
Total Bandwidth (MB/s)	The total number of megabytes sent and received per second by the director.
Total Hits (IOPS)	The total number of requests per second that were immediately serviced from cache.
Total Operations (IOPS)	The total reads and writes the front-end director processes per second.
Writes (IOPS)	The total write operations the front-end director processes per second.

Table 34 VMAX metrics for Front-End Port

Metrics	Definition
Total Operations (IOPS)	The total reads and writes the front-end port processes per second.
Total Bandwidth (MB/s)	The number of megabytes transferred per second.

Table 35 VMAX metrics for Remote Replica Group

Metrics	Definition
Average Cycle Time (s)	The average time it takes for each cycle to complete.
Delta Set Extension Threshold	The percent of write pendings before DSE activates.
Devices in Session (count)	The number of devices in the group.
HA Repeat Writes (counts/s)	Writes to a slot already in the active cycle. Total host adapter repeat writes, measured in write commands to SRDF/A volumes only. This counter helps estimate the cache locality of reference, i.e., how much cache is saved by the re-writes. This does not give any indication to the bandwidth locality of reference.
Minimum Cycle Time (s)	The setting for the minimum number of seconds for a cycle.
Writes (IOPS)	The number of write input/output operations coming in per second for the volumes in this session.
Writes (MB/s)	The total number of megabytes sent per second by the group.

Table 36 VMAX metrics for SRDF Director

Metrics	Definition
Reads (IOPS)	The read operations the SRDF director processes per second
Total Bandwidth (MB/s)	The total number of megabytes sent and received per second by the RDF director

Table 36 VMAX metrics for SRDF Director (continued)

Metrics	Definition
Total Operations (IOPS)	The total reads and writes the SRDF director processes per second
Writes (IOPS)	The write operations the SRDF director processes per second
Percent Busy (%)	The percent of time the director was busy
SRDFA Writes (IOPS)	The number of asynchronous write requests per second processed by this director
SRDFA Writes (MB/s)	The number of asynchronous megabytes sent per second by this director
SRDFS Writes (IOPS)	The number of synchronous write requests per second processed by this director
SRDFS Writes (MB/s)	The number of synchronous megabytes sent per second by this director

Table 37 VMAX metrics for Storage Group

Metric	Definition
Read Latency (ms)	The average time it took the VMAX array to serve one Read I/O for this storage group.
Reads (IOPS)	The number of read operations performed each second by the storage group.
Reads (MB/s)	The cumulative number of megabytes read per second by the storage group.
Total Bandwidth (MB/s)	The total number of megabytes sent and received per second by the storage group.
Total Capacity	The total capacity available (in GBs) for the storage group.
Total Latency (ms)	The average time it took the VMAX array to serve one I/O for this storage group.
Total Operations (IOPS)	The total reads and writes performed each second by the storage group.
Used Capacity	The capacity used (in GBs) by the the storage group.
Write Latency (ms)	The average time it took the VMAX array to serve one Write I/O for this storage group.
Writes (IOPS)	The number of write operations performed each second by the storage group.
Writes (MB/s)	The cumulative number of megabytes written per second by the storage group.

Table 38 VMAX metrics for Thin Pool

Metric	Definition
Allocated Capacity (GB)	The allocated thin pool capacity.
Full (%)	The percent of the thin pool that has been allocated.
Total Capacity (GB)	The total thin pool capacity.
Used Capacity (GB)	The used thin pool capacity.

Table 39 VMAX3 metrics for Storage Resource Pool

Metric	Definition
Capacity/Full (%)	The percent of the pool that has been allocated.
Capacity/Total Managed Space	The capacity and total managed space.

VNXe metrics

EMC Storage Analytics provides metrics for these Resource Kinds:

Note

Only the Resource Kinds with associated metrics are shown.

- [EMC Adapter Instance on page 95](#)
- [Disk on page 95](#)
- [FAST Cache on page 96](#)
- [File System on page 96](#)
- [LUN on page 96](#)
- [Storage Pool on page 97](#)
- [Storage Processor on page 97](#)
- [Tier on page 102](#)

Table 40 VNXe metrics for EMC Adapter Instance

Metric	Additional information
Elapsed collect time (ms)	Time elapsed during the collection.
New metrics in each collect call	Number of new metrics per collection.
New resources in each collect call	Number of new resources per collection.
Number of down resources	Number of down resources for this adapter instance.
Number of metrics collected	Number of metrics collected by this adapter instance.
Number of resources collected	Number of resources collected by this adapter instance.

Table 41 VNXe metrics for Disk

Metric	Metric Group	Description
Size (GB)	Capacity	The total capacity of the disk.
State	Configuration	Current state of the disk.
Busy (%)	Performance	The percentage of time during which the disk is servicing any requests.
Reads ()	Performance	The percentage of time during which the disk is servicing any requests.
Reads (MB/s)	Performance	The average amount of data read from the disk in megabytes per second.
Total Latency (ms)	Performance	The average time, in milliseconds, that it takes for one request to pass through the disk, including any waiting time.

Table 41 VNXe metrics for Disk (continued)

Metric	Metric Group	Description
Writes (IOPS)	Performance	The average number of write requests to the disk per second.
Writes (MB/s)	Performance	The average amount of data written to the disk in megabytes per second.

Table 42 VNXe metrics for Fast Cache

Metric	Metric group	Description
Available Capacity (GB)	Capacity	Capacity still available for use.
Raid Type	Configuration	The RAID Type of FAST Cache.

Table 43 VNXe metrics for File System

Metric	Metric group	Description
Available Capacity (GB)	Capacity	Capacity still available for use.
Capacity (GB)	Capacity	Total space available for storage of user data (does not include metadata).
Consumed Capacity (GB)	Capacity	Consumed capacity of the File System.
Max Capacity (GB)	Capacity	If automatic extension is enabled, the file system will automatically extend to this maximum size when the high water mark is reached. The default value for the high water mark is 90 percent.
Thin Provisioning	Capacity	True indicates that the file system is enabled for virtual provisioning, an option that can only be used with automatic file system extension. Combining automatic file system extension with virtual provisioning allows growth of the file system gradually and as needed. When virtual provisioning is enabled, NFS and CIFS clients receive reports for either the virtual maximum file system size or real file system size, which ever is larger.

Table 44 VNXe metrics for LUN

Metric	Metric group	Description
Consumed Capacity (GB)	Capacity	Capacity used in this LUN.
Total Capacity (GB)	Capacity	Total LUN capacity.

Table 44 VNXe metrics for LUN (continued)

Metric	Metric group	Description
Queue Length	Performance	The length of the LUN queue.
Reads (IOPS)	Performance	The average number of host read requests that is passed through the LUN per second. Smaller requests usually result in a higher read throughput than larger requests.
Reads (MB/s)	Performance	The average amount of host read data in megabytes that is passed through the LUN per second. Larger requests usually result in a higher bandwidth than smaller requests.
Writes (IOPS)	Performance	The average number of host write requests that is passed through the LUN per second.
Writes (MB/s)	Performance	The average amount of host write data in megabytes that is passed through the LUN per second.

Table 45 VNXe metrics for Storage Pool

Metric	Metric group	Description
Available Capacity (GB)	Capacity	Capacity available for use in this Storage Pool.
Consumed Capacity (GB)	Capacity	Capacity used in this Storage Pool.
Full (%)	Capacity	Percentage of total capacity that is consumed.
Subscribed (%)	Capacity	Percentage of total capacity that is subscribed.
User Capacity (GB)	Capacity	The amount of space available in the Storage Pool.
Fast Cache	Configuration	The enabled or disabled state of the FAST Cache for this Storage Pool.

Table 46 VNXe metrics for Storage Processor

Metric	Metric group	Description
Dirty Cache Pages (MB)	Cache	The amount of dirty cache pages in megabytes.
Read Cache Hit Ratio (%)	Cache	The ratio of read requests that the SP Cache satisfied without requiring any disk access versus the total number of read requests.
Write Cache Hit Ratio (%)	Cache	The ratio of write requests that the SP Cache satisfied without requiring any disk access versus the total number of write requests.
CIFS Reads (IOPS)	Network	Input/output operations per second for CIFS reads.

Table 46 VNXe metrics for Storage Processor (continued)

Metric	Metric group	Description
CIFS Reads (MB/s)	Network	Megabytes per second for CIFS reads.
CIFS Writes (IOPS)	Network	Input/output operations per second for CIFS writes.
CIFS Writes (MB/s)	Network	Megabytes per second for CIFS writes.
Network In Bandwidth (MB/s)	Network	Network in bandwidth (megabytes received per second).
Network Out Bandwidth (MB/s)	Network	Network out bandwidth (megabytes sent per second).
NFS Reads (IOPS)	Network	NFS read operations per second.
NFS Reads (MB/s)	Network	NFS read data response in megabytes per second.
NFS Writes (IOPS)	Network	NFS write operations per second.
NFS Writes (MB/s)	Network	NFS write data response in megabytes per second.
Read Calls/s	Network › NFSv2	Read calls per second.
Read Errors/s	Network › NFSv2	Read errors per second.
Read Response Time (ms)	Network › NFSv2	Read response time.
Reads (IOPS)	Network › NFSv2	NFS V2 read operations per second.
Write Calls/s	Network › NFSv2	Write calls per second.
Write Errors/s	Network › NFSv2	Write errors per second.
Write Response Time (ms)	Network › NFSv2	Write average response time.
Writes (IOPS)	Network › NFSv2	NFS V2 write operations per second.
Access Calls/s	Network › NFSv3	Access calls per second.
Access Errors/s	Network › NFSv3	Access errors per second.
Access Response Time (ms)	Network › NFSv3	Access average response time.
GetAttr Calls/s	Network › NFSv3	Get file attributes (GetAttr) per second.
GetAttr Errors/s	Network › NFSv3	GetAttr errors per second.
GetAttr Response Time (ms)	Network › NFSv3	GetAttr average response time.
Lookup Calls/s	Network › NFSv3	Lookup calls per second.
Lookup Errors/s	Network › NFSv3	Lookup errors per second.
Lookup Response Time (ms)	Network › NFSv3	Lookup average response time.
Read Calls/s	Network › NFSv3	Read calls per second.
Read Errors/s	Network › NFSv3	Read errors per second.

Table 46 VNXe metrics for Storage Processor (continued)

Metric	Metric group	Description
Read Response Time (ms)	Network › NFSv3	Read average response time.
Reads (IOPS)	Network › NFSv3	NFS V3 read operations per second.
SetAttr Calls/s	Network › NFSv3	SetAttr per second.
SetAttr Errors/s	Network › NFSv3	SetAttr errors per second.
SetAtt Response Time (ms)	Network › NFSv3	Set file attributes (SetAttr) average response time.
Write Calls/s	Network › NFSv3	Write calls per second.
Write Errors/s	Network › NFSv3	Write errors per second.
Write Response Time (ms)	Network › NFSv3	Write average response time
Writes (IOPS)	Network › NFSv3	NFS V3 write operations per second.
Close Average Response Time (ms)	Network › SMB1	Close average response time.
Close Calls/s	Network › SMB1	Close calls per second.
Close Max Response Time (ms)	Network › SMB1	Close maximum response time.
NTCreateX Average Response Time (ms)	Network › SMB1	NTCreateX average response time.
NTCreateX Calls/s	Network › SMB1	NTCreateX calls per second.
NTCreateX Max Response Time (ms)	Network › SMB1	NTCreateX maximum response time.
Reads (IOPS)	Network › SMB1	Input/output operations per second for CIFS SMB1 reads.
Reads (MB/s)	Network › SMB1	Megabytes per second for CIFS SMB1 reads.
ReadX Average Response Time (ms)	Network › SMB1	Average response time for ReadX.
ReadX Calls/s	Network › SMB1	ReadX calls per second.
ReadX Max Response Time (ms)	Network › SMB1	Maximum response time for ReadX.
Trans2Prim Average Response Time (ms)	Network › SMB1	Trans2Prim average response time.

Table 46 VNXe metrics for Storage Processor (continued)

Metric	Metric group	Description
Trans2Prim Calls/s	Network › SMB1	Trans2Prim calls per second.
Trans2Prim Max Response Time (ms)	Network › SMB1	Trans2Prim maximum response time.
Writes (IOPS)	Network › SMB1	Input/output operations per second for CIFS SMB1 writes.
Writes (MB/s)	Network › SMB1	Megabytes per second for CIFS SMB1 writes.
WriteX Average Response Time (ms)	Network › SMB1	WriteX average response time.
WriteX Calls/s	Network › SMB1	WriteX calls per second.
WriteX Max Response Time (ms)	Network › SMB1	WriteX maximum response time.
Close Average Response Time (ms)	Network › SMB2	Close average response time.
Close Calls/s	Network › SMB2	Close calls per second.
Close Max Response Time (ms)	Network › SMB2	Close maximum response time.
Create Average Response Time (ms)	Network › SMB2	Create average response time.
Create Calls/s	Network › SMB2	Create calls per second.
Create Max Response Time (ms)	Network › SMB2	Create maximum response time.
Flush Average Response Time (ms)	Network › SMB2	Flush average response time.
Flush Calls/s	Network › SMB2	Flush calls per second.
Flush Max Response Time (ms)	Network › SMB2	Flush maximum response time.
Ioctl Average Response Time (ms)	Network › SMB2	IO Control (IOCTL) average response time.
Ioctl Calls/s	Network › SMB2	IOCTL calls per second.
Ioctl Max Response Time	Network › SMB2	IOCTL maximum response time.

Table 46 VNXe metrics for Storage Processor (continued)

Metric	Metric group	Description
Queryinfo Average Response Time (ms)	Network › SMB2	Queryinfo average response time.
Queryinfo Calls/s	Network › SMB2	Queryinfo calls per second.
Queryinfo Max Response Time (ms)	Network › SMB2	Queryinfo maximum response time.
Read Average Response Time (ms)	Network › SMB2	Read average response time.
Read Calls/s	Network › SMB2	Read calls per second.
Read Max Response Time (ms)	Network › SMB2	Read maximum response time.
Reads (IOPS)	Network › SMB2	Input/output operations per second for CIFS SMB2 reads.
Reads (MB/s)	Network › SMB2	Megabytes per second for CIFS SMB2 reads.
Write Average Response Time (ms)	Network › SMB2	Write average response time.
Write Calls/s	Network › SMB2	Write calls per second.
Write Max Response Time (ms)	Network › SMB2	Write maximum response time.
Writes (IOPS)	Network › SMB2	Input/output operations per second for CIFS SMB2 writes.
Writes (MB/s)	Network › SMB2	Megabytes per second for CIFS SMB2 writes.
Busy (%)	Performance	The percentage of time during which the SP is serving requests. When the SP becomes the bottleneck, the utilization will be at or close to 100%. An increase in workload will have no further impact on the SP throughput, but the I/O response time will start increasing more aggressively.
Reads (IOPS)	Performance	The average number of host read requests that is passed through the SP per second. Smaller requests usually result in a higher read throughput than larger requests.
Reads (MB/s)	Performance	The average amount of host read data in megabytes that is passed through the SP per second. Larger requests usually result in a higher bandwidth than smaller requests.

Table 46 VNXe metrics for Storage Processor (continued)

Metric	Metric group	Description
Writes (IOPS)	Performance	The number of writes per second at the time when the SP is polled. that is passed through the SP per second. Smaller requests usually result in a higher write throughput than larger requests.
Writes (MB/s)	Performance	The average write request size in megabytes that passes through the SP per second. Larger requests usually result in higher bandwidth than smaller requests.

Table 47 VNXe metrics for Tier

Metric	Description
Available Capacity (GB)	Capacity available for use in this tier
Consumed Capacity (GB)	Capacity used in this tier
Data to Move Down (GB)	Amount of data that is going to be moved down
Data to Move Up (GB)	Amount of data that is going to be moved up
Data to Move Within (GB)	Amount of data to move within tiers
Disk Count	Number of disks in the tier
Full (%)	Percentage of total capacity that is consumed
Raid Type	Type of RAID applied to the tier
User Capacity (GB)	The amount of space available in this tier

VPLEX metrics

EMC Storage Analytics provides metrics for these Resource Kinds:

- [Cluster on page 103](#)
- [Director on page 104](#)
- [Distributed Device on page 107](#)
- [Engine on page 108](#)
- [Ethernet Port on page 109](#)
- [Extent on page 109](#)
- [FC Port on page 110](#)
- [Local Device on page 110](#)
- [Storage Array on page 111](#)
- [Storage View on page 111](#)
- [Storage Volume on page 112](#)
- [Virtual Volume on page 112](#)
- [VPLEX Metro on page 113](#)

Table 48 VPLEX metrics for Cluster

Metric	Metric Group	Definition
Cluster Type	Status	Local or Metro.
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - The cluster is functioning normally. • Degraded - The cluster is not functioning at an optimal level. This may indicate non-functioning remote virtual volumes, unhealthy devices or storage volumes, suspended devices, conflicting director count configuration values, or out-of-date devices. • Unknown - VPLEX cannot determine the cluster's health state, or the state is invalid. • Major failure - The cluster is failing and some functionality may be degraded or unavailable. This may indicate complete loss of back-end connectivity. • Minor failure - The cluster is functioning, but some functionality may be degraded. This may indicate one or more unreachable storage volumes. • Critical failure - The cluster is not functioning and may have failed completely. This may indicate a complete loss of back-end connectivity.
Operational Status	Status	<p>During transition periods, the cluster moves from one operational state to another. Possible values include:</p> <ul style="list-style-type: none"> • Ok - The cluster is operating normally.

Table 48 VPLEX metrics for Cluster (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> • Cluster departure - One or more of the clusters cannot be contacted. Commands affecting distributed storage are refused. • Degraded - The cluster is not functioning at an optimal level. This may indicate non-functioning remote virtual volumes, unhealthy devices or storage volumes, suspended devices, conflicting director count configuration values, or out-of-date devices. • Device initializing - If clusters cannot communicate with each other, then the distributed-device will be unable to initialize. • Device out of date - Child devices are being marked fully out of date. Sometimes this occurs after a link outage. • Expelled - The cluster has been isolated from the island either manually (by an administrator) or automatically (by a system configuration setting). • Shutdown - The cluster's directors are shutting down. • Suspended exports - Some I/O is suspended. This could be result of a link failure or loss of a director. Other states might indicate the true problem. The VPLEX might be waiting for you to confirm the resumption of I/O. • Transitioning - Components of the software are recovering from a previous incident (for example, the loss of a director or the loss of an inter-cluster link).
Exported Virtual Volumes	Capacity	Number of exported virtual volumes.
Exported Virtual Volumes (GB)	Capacity	Gigabytes of exported virtual volumes.
Used Storage Volumes	Capacity	Number of used storage volumes.
Used Storage Volumes (GB)	Capacity	Gigabytes of used storage volumes.
Unused Storage Volumes	Capacity	Number of unused storage volumes.
Unused Storage Volumes (GB)	Capacity	Gigabytes of unused storage volumes.

Table 49 VPLEX metrics for Director

Metric	Metric Group	Definition
Busy (%)	CPU	Percentage of director CPU usage.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead.

Table 49 VPLEX metrics for Director (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> Starting - Not yet ready. Lost-communication - The object is unreachable.
Read Latency (ms)	Storage Volumes	Average read latency in milliseconds.
Write Latency (ms)	Storage Volumes	Average write latency in milliseconds.
Read Latency (ms)	Virtual Volumes	Average read latency in milliseconds.
Reads (MB/s)	Virtual Volumes	Number of bytes read per second.
Total Reads and Writes (counts/s)	Virtual Volumes	Total number of reads and writes per second.
Write Latency (ms)	Virtual Volumes	Average write latency in milliseconds.
Writes (MB/s)	Virtual Volumes	Number of bytes written per second.
Memory Used (%)	Memory	Percentage of memory heap usage by the firmware for its accounting on the director. This value is not the percentage of cache pages in use for user data.
Aborts (counts/s)	Front-end Director	Number of aborted I/O operations per second through the director's front-end ports.
Active Operations (counts)	Front-end Director	Number of active, outstanding I/O operations on the director's front-end ports.
Compare and Write Latency (ms)	Front-end Director	The average time, in milliseconds, that it takes for VAAI CompareAndWrite request to complete on the director's front-end ports.
Operations (counts/s)	Front-end Director	Number of I/O operations per second through the director's front-end ports.
Queued Operations (counts)	Front-end Director	Number of queued, outstanding I/O operations on the director's front-end ports.
Read Latency (ms)	Front-end Director	The average time, in milliseconds, that it takes for read requests to complete on the director's front-end ports. The total time it takes VPLEX to complete a read request.
Reads (counts/s)	Front-end Director	Number of read operations per second on the director's front-end ports.
Reads (MB/s)	Front-end Director	Number of bytes per second read from the director's front-end ports.
Write Latency (ms)	Front-end Director	The average time, in milliseconds, that it takes for write requests to complete on the director's front-end ports. The total time it takes VPLEX to complete a write request.
Writes (counts/s)	Front-end Director	Number of write operations per second on the director's front-end ports.
Writes (MB/s)	Front-end Director	Number of bytes per second written to the director's front-end ports.
Aborts (counts/s)	Back-end Director	Number of aborted I/O operations per second on the director's back-end ports.

Table 49 VPLEX metrics for Director (continued)

Metric	Metric Group	Definition
Operations (counts/s)	Back-end Director	Number of I/O operations per second through the director's back-end ports.
Reads (counts/s)	Back-end Director	Number of read operations per second by the director's back-end ports.
Reads (MB/s)	Back-end Director	Number of bytes read per second by the director's back-end ports.
Resets (counts/s)	Back-end Director	Number of LUN resets issued per second through the director's back-end ports. LUN resets are issued after 20 seconds of LUN unresponsiveness to outstanding operations.
Timeouts (counts/s)	Back-end Director	Number of timed out I/O operations per second on the director's back-end ports. Operations time out after 10 seconds.
Writes (MB/s)	Back-end Director	Number of bytes written per second by the director's back-end ports.
Average Latency (ms)	COM Latency	The average time, in milliseconds, that it took for inter-director WAN messages to complete on this director to the specified cluster in the last 5-second interval.
Maximum Latency (ms)	COM Latency	The maximum time, in milliseconds, that it took for an inter-director WAN message to complete on this director to the specified cluster in the last 5-second interval.
Minimum Latency (ms)	COM Latency	The minimum time, in milliseconds, that it took for an inter-director WAN message to complete on this director to the specified cluster in the last five-second interval.
Distributed Device Bytes Received (MB/s)	WAN Link Usage	Number of bytes of distributed-device traffic per second received on the director's WAN ports.
Distributed Device Bytes Sent (MB/s)	WAN Link Usage	Number of bytes of distributed-device traffic per second sent on the director's WAN ports.
Distributed Device Rebuild Bytes Received (MB/s)	WAN Link Usage	Number of bytes of distributed-device, rebuild/migration traffic per second received on the director's WAN ports.
Distributed Device Rebuild Bytes Sent (MB/s)	WAN Link Usage	Number of bytes of distributed-device rebuild/migration per second traffic sent on the director's WAN ports.
Bytes Received (MB/s)	FC WAN COM	Number of bytes of WAN traffic per second received on this director's FibreChannel port.
Bytes Sent (MB/s)	FC WAN COM	Number of bytes of WAN traffic per second sent on this director's FibreChannel port.
Packets Received (counts/s)	FC WAN COM	Number of packets of WAN traffic per second received on this director's FibreChannel port.
Packets Sent (counts/s)	FC WAN COM	Number of packets of WAN traffic per second sent on this director's FibreChannel port.
Average Latency (ms)	IP WAN COM	The average time, in milliseconds, that it took for inter-director WAN messages to complete on this director's IP port in the last 5-second interval.

Table 49 VPLEX metrics for Director (continued)

Metric	Metric Group	Definition
Bytes Received (MB/s)	IP WAN COM	Number of bytes of WAN traffic per second received on this director's IP port.
Bytes Sent (MB/s)	IP WAN COM	Number of bytes of WAN traffic per second sent on this director's IP port.
Maximum Latency (ms)	IP WAN COM	The maximum time, in milliseconds, that it took for an inter-director WAN message to complete on this director's IP port in the last five-second interval.
Minimum Latency (ms)	IP WAN COM	The minimum time, in milliseconds, that it takes for an inter-director WAN message to complete on this director's IP port in the last five-second interval.
Packets Received (counts/s)	IP WAN COM	Number of packets of WAN traffic per second received on this director's IP port.
Packets Resent (counts/s)	IP WAN COM	Number of WAN traffic packets re-transmitted per second that were sent on this director's IP port.
Packets Sent (counts/s)	IP WAN COM	Number of packets of WAN traffic per second sent on this director's IP port.
Received Packets Dropped (counts/s)	IP WAN COM	Number of WAN traffic packets dropped per second that were received on this director's IP port.
Sent Packets Dropped (counts/s)	IP WAN COM	Number of WAN traffic packets dropped per second that were sent on this director's IP port.

Table 50 VPLEX metrics for Distributed Device

Metric	Metric Group	Definition
Capacity (GB)	Capacity	Capacity in gigabytes.
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Non-recoverable error - May be out-of-date compared to its mirror, or VPLEX cannot determine the health state. • Critical failure - VPLEX has marked the object as hardware-dead.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead.

Table 50 VPLEX metrics for Distributed Device (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> • Starting - Not yet ready. • Lost-communication - The object is unreachable.
Service Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Cluster unreachable - VPLEX cannot reach the cluster; the status is unknown. • Need resume - The other cluster detached the distributed device while it was unreachable. The distributed device needs to be manually resumed for I/O to resume at this cluster. • Need winner - All clusters are reachable again, but both clusters had detached this distributed device and resumed I/O. You must pick a winner cluster whose data will overwrite the other cluster's data for this distributed device. • Potential conflict - The clusters have detached each other resulting in a potential for detach conflict. • Running - The distributed device is accepting I/O. • Suspended - The distributed device is not accepting new I/O; pending I/O requests are frozen. • Winner-running - This cluster detached the distributed device while the other cluster was unreachable, and is now sending I/O to the device.

Table 51 VPLEX metrics for Engine

Metric	Metric Group	Definition
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Non-recoverable error - May be out-of-date compared to its mirror, or VPLEX cannot determine the health state. • Critical failure - VPLEX has marked the object as hardware-dead.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready.

Table 51 VPLEX metrics for Engine (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> • Lost-communication - The object is unreachable.

Table 52 VPLEX metrics for Ethernet Port

Metric	Metric Group	Definition
Operational Status	Status	Possible values include: <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready. • Lost-communication - The object is unreachable.

Table 53 VPLEX metrics for Extent Device

Metric	Metric Group	Definition
Capacity (GB)	Capacity	Capacity in gigabytes.
Health State	Status	Possible values include: <ul style="list-style-type: none"> • OK - The extent is functioning normally. • Degraded - The extent may be out-of-date compared to its mirror (applies only to extents that are part of a RAID 1 device). • Unknown - VPLEX cannot determine the extent's operational state, or the state is invalid. • Non-recoverable error - The extent may be out-of-date compared to its mirror (applies only to extents that are part of a RAID 1 device), and/or the health state cannot be determined.
Operational Status	Status	Possible values include: <ul style="list-style-type: none"> • OK - The extent is functioning normally. • Degraded - The extent may be out-of-date compared to its mirror (applies only to extents that are part of a RAID 1 device). • Unknown - VPLEX cannot determine the extent's operational state, or the state is invalid. • Starting - The extent is not yet ready.

Table 54 VPLEX metrics for FC Port

Metric	Metric Group	Definition
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready. • Lost-communication - The object is unreachable.

Table 55 VPLEX metrics for Local Device

Metric	Metric Group	Definition
Capacity (GB)	Capacity	Capacity in gigabytes.
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Non-recoverable error - May be out-of-date compared to its mirror, or VPLEX cannot determine the health state. • Critical failure - VPLEX has marked the object as hardware-dead.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready. • Lost-communication - The object is unreachable.
Service Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Cluster unreachable - VPLEX cannot reach the cluster; the status is unknown. • Need resume - The other cluster detached the distributed device while it was unreachable. The distributed device needs to be manually resumed for I/O to resume at this cluster. • Need winner - All clusters are reachable again, but both clusters had detached this distributed device and resumed I/O. You must

Table 55 VPLEX metrics for Local Device (continued)

Metric	Metric Group	Definition
		<p>pick a winner cluster whose data will overwrite the other cluster's data for this distributed device.</p> <ul style="list-style-type: none"> • Potential conflict - The clusters have detached each other resulting in a potential for detach conflict. • Running - The distributed device is accepting I/O. • Suspended - The distributed device is not accepting new I/O; pending I/O requests are frozen. • Winner-running - This cluster detached the distributed device while the other cluster was unreachable, and is now sending I/O to the device.

Table 56 VPLEX metrics for Storage Array

Metric	Metric Group	Definition
Allocated Storage Volumes	Capacity	Number of allocated storage volumes.
Allocated Storage Volumes (GB)	Capacity	Gigabytes of allocated storage volumes.
Used Storage Volumes	Capacity	Number of used storage volumes.
Used Storage Volumes (GB)	Capacity	Gigabytes of used storage volumes.

Table 57 VPLEX metrics for Storage View

Metric	Metric Group	Definition
Virtual Volumes (GB)	Capacity	Gigabytes of virtual volumes.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready. • Lost-communication - The object is unreachable.

Table 58 VPLEX metrics for Storage Volume

Metric	Metric Group	Definition
Capacity (GB)	Capacity	Capacity in gigabytes.
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - The storage volume is functioning normally. • Degraded - The storage volume may be out-of-date compared to its mirror. • Unknown - Cannot determine the health state, or the state is invalid. • Non-recoverable error - May be out-of-date compared to its mirror, or VPLEX cannot determine the health state. • Critical failure - VPLEX has marked the object as hardware-dead.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - May be out-of-date compared to its mirror. (This state applies only to a storage volume that is part of a RAID 1 Metadata Volume.) • Unknown - Cannot determine the health state, or the state is invalid. • Error - VPLEX has marked the object as hardware-dead. • Starting - Not yet ready. • Lost-communication - The object is unreachable.

Table 59 VPLEX metrics for Virtual Volume

Metric	Metric Group	Definition
Capacity (GB)	Capacity	Capacity in gigabytes.
Locality	Locality	<p>Possible values include:</p> <ul style="list-style-type: none"> • Local - The volume is local to the enclosing cluster. • Remote - The volume is made available by a different cluster than the enclosing cluster, and is accessed remotely. • Distributed - The virtual volume either has, or is capable of having, legs at more than one cluster.
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - Functioning normally. • Unknown - Cannot determine the health state, or the state is invalid. • Major failure - One or more of the virtual volume's underlying devices is out-of-date, but will never rebuild.

Table 59 VPLEX metrics for Virtual Volume (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> • Minor failure - One or more of the virtual volume's underlying devices is out-of-date, but will rebuild.
Operational Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • OK - Functioning normally. • Degraded - The virtual volume may have one or more out-of-date devices that will eventually rebuild. • Unknown - VPLEX cannot determine the virtual volume's operational state, or the state is invalid. • Error - One or more of the virtual volume's underlying devices is hardware-dead. • Starting - Not yet ready. • Stressed - One or more of the virtual volume's underlying devices is out-of-date and will never rebuild.
Service Status	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Running - I/O is running. • Inactive - The volume is part of an inactive storage-view and is not visible from the host. • Unexported - The volume is unexported. • Suspended - I/O is suspended for the volume. • Cluster-unreachable - Cluster is unreachable at this time. • Need-resume - Issue re-attach to resume after link has returned.

Table 60 VPLEX metrics for VPLEX Metro

Metric	Metric Group	Definition
Health State	Status	<p>Possible values include:</p> <ul style="list-style-type: none"> • Ok - The cluster is functioning normally. • Degraded - The cluster is not functioning at an optimal level. This may indicate non-functioning remote virtual volumes, unhealthy devices or storage volumes, suspended devices, conflicting director count configuration values, or out-of-date devices. • Unknown - VPLEX cannot determine the cluster's health state, or the state is invalid. • Major failure - The cluster is failing and some functionality may be degraded or unavailable. This may indicate complete loss of back-end connectivity. • Minor failure - The cluster is functioning, but some functionality may be degraded. This may indicate one or more unreachable storage volumes.

Table 60 VPLEX metrics for VPLEX Metro (continued)

Metric	Metric Group	Definition
		<ul style="list-style-type: none"> • Critical failure - The cluster is not functioning and may have failed completely. This may indicate a complete loss of back-end connectivity.
Operational Status	Status	<p>During transition periods, the cluster moves from one operational state to another. Possible values include:</p> <ul style="list-style-type: none"> • Ok - The cluster is operating normally. • Cluster departure - One or more of the clusters cannot be contacted. Commands affecting distributed storage are refused. • Degraded - The cluster is not functioning at an optimal level. This may indicate non-functioning remote virtual volumes, unhealthy devices or storage volumes, suspended devices, conflicting director count configuration values, or out-of-date devices. • Device initializing - If clusters cannot communicate with each other, then the distributed-device will be unable to initialize. • Device out of date - Child devices are being marked fully out of date. Sometimes this occurs after a link outage. • Expelled - The cluster has been isolated from the island either manually (by an administrator) or automatically (by a system configuration setting). • Shutdown - The cluster's directors are shutting down. • Suspended exports - Some I/O is suspended. This could be result of a link failure or loss of a director. Other states might indicate the true problem. The VPLEX might be waiting for you to confirm the resumption of I/O. • Transitioning - Components of the software are recovering from a previous incident (for example, the loss of a director or the loss of an inter-cluster link).

XtremIO metrics

XtremIO provides metrics for these resource kinds:

- [Cluster on page 115](#)
- [Data Protection Group on page 116](#)
- [Snapshot on page 116](#)
- [SSD on page 117](#)
- [Storage Controller on page 117](#)
- [Volume on page 117](#)
- [X-Brick on page 118](#)

Table 61 XtremIO metrics for Cluster

Metric	Metric Group	Description
Deduplication Ratio	Capacity	Ratio of inline data reduction (data written to the array compared to physical capacity used).
Compression Ratio	Capacity	Compression ratio (unique data on the SSD compared to the physical capacity used)
Total Efficiency	Capacity	Amount of disk space saved (based on Volume Capacity / Physical Space Used).
Thin Provision Savings (%)	Capacity	Disk space actually used compared to disk space allocated.
Available Capacity (TBs)	Capacity › Physical	Available capacity in terabytes.
Consumed Capacity (TBs)	Capacity › Physical	Consumed physical capacity in terabytes.
Total Capacity (TBs)	Capacity › Physical	Total physical capacity in terabytes.
Available Capacity (TBs)	Capacity › Volume	Available volume capacity in terabytes.
Consumed Capacity (TBs)	Capacity › Volume	Consumed volume capacity in terabytes.
Total Capacity (TBs)	Capacity › Volume	Total volume capacity in terabytes.
Total Bandwidth (MB/s)	Performance	Total bandwidth in megabytes per second.
Total Latency (usec)	Performance	Total latency in microseconds.
Total Operations (IOPs)	Performance	Total input/output operations per second.
Read Bandwidth (MB/s)	Performance › Read Operations	Total read bandwidth in megabytes per second.
Read Latency (usec)	Performance › Read Operations	Total read latency in microseconds.
Reads (IOPS)	Performance › Read Operations	Total read input/output operations per second.
Writes (MB/s)	Performance › Write Operations	Total write bandwidth in megabytes per second.
Write Bandwidth (MB/s)	Performance › Write Operations	Total write latency in microseconds.
Write Latency (usec)	Performance › Write Operations	Total write input/output operations in microseconds.
Health State	Status	Health state of the cluster.

Table 62 XtremIO metrics for Data Protection Group

Metric	Metric Group	Description
Average SSD Utilization (%)	Performance	SSD utilization as a percentage.

Table 63 XtremIO metrics for Snapshot

Metric	Metric Group	Description
Consumed Capacity in XtremIO (GB)	Capacity	Consumed capacity in gigabytes without "zeroed" space.
Consumed Capacity in VMware (GB)	Capacity	Consumed capacity in gigabytes, including "zeroed" space. Note This metric is available only when a datastore is built on top of the snapshot. The value of the metric is the consumed datastore capacity, which might not be the same as the consumed snapshot capacity.
Total Capacity (GB)	Capacity	Total capacity in gigabytes.
Average Block Size (KB)	Performance	Average block size in kilobytes.
Total Bandwidth (MB/s)	Performance	Total bandwidth in megabytes per second.
Total Latency (usec)	Performance	Total latency in microseconds.
Total Operations (IOPS)	Performance	Total input/output operations per second.
Unaligned (%)	Performance	Percentage of unaligned I/O blocks.
Average Block Size (KB)	Performance > Read Operations	Average read block size in kilobytes.
Average Small Reads (IOPS)	Performance > Read Operations	Average small reads in input/output operations per second.
Average Unaligned Reads (IOPS)	Performance > Read Operations	Average unaligned reads in input/output operations per second.
Read Bandwidth (MB/s)	Performance > Read Operations	Read bandwidth in megabytes per second.
Read Latency (usec)	Performance > Read Operations	Read latency in microseconds.
Reads (IOPS)	Performance > Read Operations	Read input/output operations per second.

Table 63 XtremIO metrics for Snapshot (continued)

Metric	Metric Group	Description
Average Block Size (KB)	Performance > Write Operations	Average write block size in kilobytes.
Average Small Writes (IOPS)	Performance > Write Operations	Average small writes in input/output operations per second.
Average Unaligned Writes (IOPS)	Performance > Write Operations	Average unaligned writes in input/output operations per second.
Write Bandwidth (MB/s)	Performance > Write Operations	Write bandwidth in megabytes per second.
Write Latency (usec)	Performance > Write Operations	Write latency in microseconds.
Writes (IOPS)	Performance > Write Operations	Write input/output operations per second.

Table 64 XtremIO metrics for SSD

Metric	Metric Group	Description
Disk Utilization (%)	Capacity	Percentage of disk utilization.
Endurance Remaining (%)	Endurance	Percentage of SSD remaining endurance.

Table 65 XtremIO metrics for Storage Controller

Metric	Metric Group	Description
Encrypted	Configuration	Storage Controller encryption status.
CPU 1 Utilization (%)	Performance	The Storage Controller has two CPU cores. This metric shows the percent utilization of the first core.
CPU 2 Utilization (%)	Performance	The Storage Controller has two CPU cores. This metric shows the percent utilization of the second core.
Health State	Status	Storage Controller health status.

Table 66 XtremIO metrics for Volume

Metric	Metric Group	Description
Consumed Capacity in XtremIO (GB)	Capacity	Consumed capacity in gigabytes without "zeroed" space.
Consumed Capacity in VMware (GB)	Capacity	Consumed capacity in gigabytes, including 'zeroed' space.

Table 66 XtremIO metrics for Volume (continued)

Metric	Metric Group	Description
Total Capacity (GB)	Capacity	Total capacity in gigabytes.
Average Block Size (KB)	Performance	Average block size in kilobytes.
Total Bandwidth (MB/s)	Performance	Total bandwidth in megabytes per second.
Total Latency (usec)	Performance	Total latency in microseconds.
Total Operations (IOPS)	Performance	Total input/output operations per second.
Unaligned (%)	Performance	Percentage of unaligned I/O blocks.
Average Block Size (KB)	Performance › Read Operations	Average read block size in kilobytes.
Average Small Reads (IOPS)	Performance › Read Operations	Average small reads in input/output operations per second.
Average Unaligned Reads (IOPS)	Performance › Read Operations	Average unaligned reads in input/output operations per second.
Read Bandwidth (MB/s)	Performance › Read Operations	Read bandwidth in megabytes per second.
Read Latency (usec)	Performance › Read Operations	Read latency in microseconds.
Reads (IOPS)	Performance › Read Operations	Read input/output operations per second.
Average Block Size (KB)	Performance › Write Operations	Average write block size in kilobytes.
Average Small Writes (IOPS)	Performance › Write Operations	Average small writes in input/output operations per second.
Average Unaligned Writes (IOPS)	Performance › Write Operations	Average unaligned writes in input/output operations per second.
Write Bandwidth (MB/s)	Performance › Write Operations	Write bandwidth in megabytes per second.
Write Latency (usec)	Performance › Write Operations	Write latency in microseconds.
Writes (IOPS)	Performance › Write Operations	Write input/output operations per second.

Table 67 XtremIO metrics for X-Brick

Metric	Metric Group	Description
Reporting	X-Brick	X-Brick reporting status.

XtremIO views and reports

You can create views and reports for the following XtremIO metrics:

- [Cluster capacity consumption summary on page 119](#)
- [Health state on page 119](#)
- [LUN list on page 119](#)
- [Performance summary on page 120](#)
- [Storage efficiency summary on page 120](#)

The XtremIO report includes all views and can be exported in CSV and PDF formats.

Table 68 XtremIO cluster capacity consumption summary

Metric	Unit	Description
Available Capacity	TB, physical	Available physical cluster capacity
Consumed Capacity	TB, physical	Consumed physical cluster capacity
Total Capacity	TB, physical	Total physical cluster capacity
Available Capacity	TB, volume	Available cluster volume capacity
Consumed Capacity	TB, volume	Consumed cluster volume capacity
Total Capacity	TB, volume	Total cluster volume capacity

Table 69 XtremIO health state

Metric	Description
Cluster health state	Overall health of the cluster
Storage Controller health state	Overall health state of the Storage Controller and its contained components

Table 70 XtremIO LUN list

Metric	Unit	Description
Read bandwidth	MB/s	Volume Performance:Read Operations Read Bandwidth
Read latency	usec	Volume Performance:Read Operations Read Latency
Reads	IOPS	Volume Performance:Read Operations Reads
Write bandwidth	MB/s	Volume Performance:Write Operations Write Bandwidth
Write latency	usec	Volume Performance:Write Operations Write Latency
Write	IOPS	Volume Performance:Write Operations Write
Total bandwidth	MB/s	Volume Performance Total Bandwidth

Table 70 XtremIO LUN list (continued)

Metric	Unit	Description
Total latency	usec	Volume Performance Total Latency
Total operations	IOPS	Volume Performance Total Operations
Consumed capacity in VMware	GB	Volume Capacity Consumed Capacity in VMware
Consumed capacity in XtremIO	GB	Volume Capacity Consumed Capacity in XtremIO
Total capacity	GB	Volume Capacity Total Capacity
Summary		Max, Min, Average

Table 71 XtremIO performance summary

Metric	Unit	Description
Read bandwidth	MB/s	Cluster Performance:Read Operations Read Bandwidth
Read latency	usec	Cluster Performance:Read Operations Read Latency
Reads	IOPS	Cluster Performance:Read Operations Reads
Write bandwidth	MB/s	Cluster Performance:Write Operations Write Bandwidth
Write latency	usec	Cluster Performance:Write Operations Write Latency
Write	IOPS	Cluster Performance:Write Operations Write
Total bandwidth	MB/s	Cluster Performance Total Bandwidth
Total latency	usec	Cluster Performance Total Latency
Total operations	IOPS	Cluster Performance Total Operations
CPU 1 utilization	Percent	Storage Controller Performance CPU 1 Utilization
CPU 2 utilization	Percent	Storage Controller Performance CPU 2 Utilization
Summary		Max, Min, Average

Table 72 XtremIO storage efficiency summary

Metric	Unit	Description
Deduplication ratio		Cluster Capacity Deduplication Ratio
Compression ratio		Cluster Capacity Compression Ratio
Thin provision savings	Percent	Cluster Capacity Thin Provision Savings
SSD endurance remaining	Percent	SSD Endurance Endurance Remaining

Table 72 XtremIO storage efficiency summary (continued)

Metric	Unit	Description
Disk utilization	Percent	SSD Capacity Disk Utilization
Summary		Average

RecoverPoint for Virtual Machines metrics

EMC Storage Analytics provides metrics for RecoverPoint for Virtual Machines resource kinds.

This section contains RecoverPoint for Virtual Machines metrics for the following resource kinds:

- [Cluster on page 122](#)
- [Consistency Group on page 122](#)
- [Copy on page 123](#)
- [Journal Volume on page 123](#)
- [Link on page 123](#)
- [Virtual RecoverPoint Appliance \(vRPA\) on page 124](#)
- [RecoverPoint for Virtual Machines System on page 124](#)
- [Replication Set on page 124](#)
- [Repository Volume on page 125](#)
- [Splitter on page 125](#)
- [User Volume on page 125](#)

RecoverPoint metrics for Cluster

Table 73 RecoverPoint metrics for Cluster

Metric Group	Metric	Additional Information
Performance	Incoming Writes (IO/s)	Sum of incoming cluster writes from all child vRPAs
	Incoming Writes (KB/s)	Sum of incoming cluster throughput from all child vRPAs
Summary	Number of Consistency Groups	Sum of all child vRPA consistency groups
	Number of Protected VMDKs	Sum of user volumes that the cluster protects on all virtual machines, including replica virtual machines
	Number of Protected VMs	Sum of virtual machines, including replica virtual machines, that the cluster protects
	Number of vRPAs	Sum of all child vRPAs

RecoverPoint metrics for Consistency Group

Table 74 RecoverPoint metrics for Consistency Group

Metric Group	Metric	Additional Information
Performance	Incoming Writes (IO/s)	Sum of incoming consistency group writes per second
	Incoming Writes (KB/s)	Sum of incoming consistency group writes throughput
Status	Enabled	Boolean value that indicates the consistency group is enabled
Protection	Current Protection Window (Hrs)	The farthest time in hours for which RecoverPoint can roll back the consistency group's replica copy

Table 74 RecoverPoint metrics for Consistency Group (continued)

Metric Group	Metric	Additional Information
	Current Protection Window Ratio	Ratio of the current protection window for the consistency group's replica copy as compared with your required protection window

RecoverPoint metrics for Copy**Table 75** RecoverPoint metrics for Copy

Metric Group	Metric	Additional Information
Protection	Current Protection Window (Hrs)	The farthest time in hours for which RecoverPoint can roll back the replica copy
	Current Protection Window Ratio	Ratio of current protection window for the replica copy as compared with your required protection window
Status	Active	Boolean value indicates if the copy is active
	Enabled	Boolean value indicates if the copy is enabled
	Regulated	Boolean value indicates if the copy is regulated
	Removable	Boolean value indicates if the copy is removable
	Role	Role of the copy, which is retrieved from the role of the consistency group copy settings
	Suspended	Boolean value indicates if the copy is suspended

RecoverPoint metrics for Journal Volume**Table 76** RecoverPoint metrics for Journal Volume

Metric Group	Metric	Additional Information
Capacity	Capacity (GB)	Size of journal volume in GB

RecoverPoint metrics for Link**Table 77** RecoverPoint metrics for Link

Metric Group	Metric	Additional Information
Configuration	RPO	The allowed maximum for lag times of consistency group copies
	RPO Type	The set type of RPOs to measure
Status	Current Compression Ratio	The compression ratio through the link
	Current Lag	Current lag time between the copy and production
	Current Lag Type	The type set to measure the current lag time

Table 77 RecoverPoint metrics for Link (continued)

Metric Group	Metric	Additional Information
	Is In Compliance	Exists only with consistency groups in asynchronous replication mode; a yes-no value that indicates if the current lag is in compliance with the RPO
Protection	Current Lag (%)	Exists only with consistency groups in asynchronous replication mode; indicates current lag ratio as compared with RPO

RecoverPoint metrics for virtual RecoverPoint Appliance (vRPA)**Table 78** RecoverPoint metrics for virtual RecoverPoint Appliance (vRPA)

Metric Group	Metric	Additional Information
Performance	CPU Utilization (%)	CPU usage of vRPAs Note Utilization values appear as decimals (not percentages). Values can range from 0.0 to 1.0, with a value of 1.0 indicating 100%.
	Incoming Writes (IO/s)	Incoming application writes per second
	Incoming Writes (KB/s)	Incoming application writes for throughput
Summary	Summary	Number of consistency groups

RecoverPoint metrics for RecoverPoint for Virtual Machines System**Table 79** RecoverPoint metrics for RecoverPoint for Virtual Machines System

Metric Group	Metric	Additional Information
Summary	Number of RecoverPoint Clusters	Sum of all the clusters in the RecoverPoint system
	Number of Splitters	Sum of all the splitters in the RecoverPoint system

RecoverPoint metrics for Replication Set**Table 80** RecoverPoint metrics for Replication Set

Metric Group	Metric	Additional Information
Capacity	Capacity (GB)	Size of the user volume in GB that the replication set is protecting

RecoverPoint metrics for Repository Volume**Table 81** RecoverPoint metrics for Repository Volume

Metric Group	Metric	Additional Information
Capacity	Capacity (GB)	Size of repository volume in GB

RecoverPoint metrics for Splitter**Table 82** RecoverPoint metrics for Splitter

Metric Group	Metric	Additional Information
Summary	Number of Volumes Attached	Number of volumes attached to the splitter
	Number of ESX Clusters Connected	Number of clusters connecting to the splitter

RecoverPoint metrics for User Volume**Table 83** RecoverPoint metrics for User Volume

Metric Group	Metric	Additional Information
Capacity	Capacity (GB)	Size of user volume
Status	Role	Role of the copy to which the user volume belongs

CHAPTER 5

Troubleshooting

This chapter contains the following topics:

- [Badges for monitoring resources](#)..... 128
- [Navigating inventory trees](#)..... 128
- [EMC symptoms, alerts, and recommendations](#)..... 129
- [Event correlation](#)..... 130
- [Launching Unisphere](#)..... 155
- [Installation logs](#)..... 155
- [Log Insight overview](#)..... 156
- [Error handling and event logging](#)..... 159
- [Log file sizes and rollover counts](#)..... 160
- [Editing the Collection Interval for a resource](#)..... 162
- [Configuring the thread count for an adapter instance](#)..... 162
- [Connecting to vRealize Operations Manager by using SSH](#)..... 163
- [Frequently Asked Questions](#)..... 164

Badges for monitoring resources

This topic describes the use of vRealize Operations Manager badges to monitor EMC Storage Analytics resources.

vRealize Operations Manager enables you to analyze capacity, workload, and stress of supported resource objects. vRealize Operations Manager badges are available for these EMC products: VNX Block, VNX File, VNXe, and VMAX.

The badges include:

Workload

The **Workload** badge defines the current workload of a monitored resource. It displays a breakdown of the workload based on supported metrics.

Stress

The **Stress** badge is similar to the **Workload** badge but defines the workload over a period of time. The **Stress** badge displays one-hour time slices over the period of a week. The color of each slice reflects the stress status of the resource.

Capacity

The **Capacity** badge displays the percentage of a resource that is currently consumed and the remaining capacity for the resource.

Note

Depending on the resource and supported metrics, full capacity is sometimes defined as 100% (for example, Busy %). Full capacity can also be defined by the maximum observed value (for example, Total Operations IO/s).

Time Remaining

This badge is calculated from the **Capacity** badge and estimates when the resource will reach full capacity.

The badges are based on a default policy that is defined in vRealize Operations Manager for each resource kind.

Navigating inventory trees

This topic describes how to navigate vRealize Operations Manager inventory trees for EMC resource objects.

Navigating inventory trees in vRealize Operations Manager can help you to troubleshoot problems you encounter with EMC resources.

Note

vRealize Operations Manager inventory trees are available for these EMC products: VNX Block, VNX File, VNXe, VMAX, and VMAX3.

Procedure

1. Log into vRealize Operations Manager.
2. Open the **Environment Overview**.
3. Locate **Inventory Trees**.
4. Click the tree name to view its nodes. Click > to expand the list to view objects under the selected node.

EMC symptoms, alerts, and recommendations

This topic describes the symptoms, alerts, and recommendations that display in vRealize Operations Manager for EMC adapter instances.

Note

You can view EMC symptoms, alerts, and recommendations in vRealize Operations Manager for these EMC products: VNX Block, VNX File, VNXe, VMAX, VMAX3, VPLEX, XtremIO, and RecoverPoint for Virtual Machines.

You can view symptoms, alerts, and recommendations for EMC adapter instances through the vRealize Operations Manager GUI. EMC Storage Analytics generates the alerts, which appear with other alerts that VMware generates. EMC Storage Analytics defines the alerts, symptoms, and recommendations for resources that the EMC adapter instance monitors. You can view the symptoms, alerts, and recommendations in these vRealize Operations Manager windows.

Home dashboard

The vRealize Operations Manager home page dashboard displays EMC symptoms, alerts, and recommendations along with VMware-generated alerts. You can view health, risk, and efficiency alerts, listed in order of severity.

Alerts Overview

You can view EMC alerts along with VMware-generated alerts in the **Alerts Overview** window. In this view, vRealize Operations Manager groups the alerts in health, risk, and efficiency categories.

Alert Details

This vRealize Operations Manager view displays detailed properties of a selected alert. Properties include title, description, related resources, type, subtype, status, impact, criticality, and alert start time. This view also shows the symptoms that triggered the alert as well as recommendations for responding to the alert.

Summary

In the **Summary** view for resource details, vRealize Operations Manager displays the alerts for the selected resource. It also displays alerts for the children of the selected resource, which affect the badge color of the selected resource.

Symptom definition

You can find symptom definitions for EMC Storage Analytics-generated alerts in the **Definitions Overview** (configuration page). Each definition includes the resource kind, metric key, and lists EMC Adapter as the **Adapter Kind**.

Recommendations

You can find the recommendation descriptions for EMC Storage Analytics-generated alerts in the **Recommendations Overview** (configuration page).

Alert definition

You can find alert definitions for EMC Storage Analytics-generated alerts in the **Alert Definitions Overview** (configuration page). Each definition includes the resource kind, type of alert, criticality, and impact (health, risk, or efficiency alert).

Event correlation

Event correlation enables users to correlate alerts with the resources that generate them.

Event correlation is available for:

- VNX Block
- VNX File

EMC adapter instances registered with the vRealize Operations Manager monitor events on select resources. These events appear as alerts in vRealize Operations Manager. The events are associated with the resources that generate them and aid the user in troubleshooting problems that may occur.

vRealize Operations Manager manages the life cycle of an alert and will cancel an active alert based on its rules. For example, vRealize Operations Manager may cancel an alert if EMC Storage Analytics no longer reports it.

vRealize Operations Manager-generated events influence the health score calculation for select resources. For example, in the **RESOURCE:DETAILS** pane for a selected resource, vRealize Operations Manager-generated events that contribute to the health score appear as alerts.

vRealize Operations Manager only generates events and associates them with the resources that triggered them. vRealize Operations Manager determines how the alerts appear and how they affect the health scores of the related resources.

Note

When a resource is removed, vRealize Operations Manager automatically removes existing alerts associated with the resource, and the alerts no longer appear in the user interface.

Viewing all alerts

This procedure shows you how to view a list of all the alerts in the vRealize Operations Manager system.

Procedure

1. Log into the vRealize Operations Manager user interface.
2. From the vRealize Operations Manager menu, select **ALERTS > ALERTS OVERVIEW**.
A list of alerts appears in the **ALERTS OVERVIEW** window.
3. (Optional) To refine your search, use the tools in the menu bar. For example, select a start and end date or enter a search string.
4. (Optional) To view a summary of information about a specific alert, select the alert and double-click it.

The **ALERT SUMMARY** window appears and provides reason, impact, and root cause information for the alert.

Finding resource alerts

An alert generated by EMC Storage Analytics is associated with a resource. This procedure shows you how to find an alert for a specific resource.

Procedure

1. Log into the vRealize Operations Manager user interface.
2. Select the resource from one of the dashboard views.
The number that appears on the alert icon represents the number of alerts for this resource.
3. Click the **Show Alerts** icon on the menu bar to view the list of alerts for the resource.
Alert information for the resource appears in the popup window.

Locating alerts that affect the health score for a resource

This procedure shows how to locate an alert that affects the health score of a resource.

Different types of alerts can contribute to the health score of a resource, but a resource with an abnormal health score might not have triggered the alert. For example, the alert might be triggered by a parent resource. To locate an alert that affects the health score of a resource:

Procedure

1. Log into the vRealize Operations Manager user interface.
2. View the **RESOURCE DETAIL** window for a resource that shows an abnormal health score.
Events that contributed to the resource health score appear in the **ROOT CAUSE RANKING** pane.
3. Click an event to view the event details and investigate the underlying cause.

List of alerts and notifications

EMC Storage Analytics generates the listed events when the resources are queried.

This section provides the following information:

- [VMAX alerts on page 131](#)
- [VNX Block alerts on page 133](#)
- [VNX Block notifications on page 137](#)
- [VNX File alerts on page 139](#)
- [VNX File notifications on page 142](#)
- [VNXe alerts on page 147](#)
- [VPLEX alerts on page 149](#)
- [XtremIO alerts on page 153](#)

VMAX alerts

The Wait Cycle is 1 for all these VMAX alerts.

Table 84 List of VMAX alerts

Resource Kind	Symptom	Badge	Severity	Condition	Message
Device	VmaxDevice_percent_full98.0	Risk	Critical	> 98	Device available capacity is low.
	VmaxDevice_percent_full95.0	Risk	Immediate	> 95	Device available capacity is low.
SRP (VMAX3 Storage Resource Pool)	VmaxSRPStoragePool_percent_full98.0	Risk	Critical	> 98	Storage Resource Pool available capacity is low.
	VmaxSRPStoragePool_percent_full95.0	Risk	Immediate	> 95	Storage Resource Pool available capacity is low.
Thin Pool (VMAX)	VmaxThinPool_percent_full98.0	Risk	Critical	> 98	Thin Pool available capacity is low.
	VmaxThinPool_percent_full95.0	Risk	Immediate	> 95	Thin Pool available capacity is low.
Front-End Port	VmaxPort_Operational_Status_Predictive_failure	Risk	Warning	Contains predictive failure	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Other	Risk	Info	Contains Other	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Stressed	Risk	Warning	Contains Stressed	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Degraded	Risk	Warning	Contains Degraded	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Error	Risk	Immediate	Contains Error	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Non-recoverable_error	Risk	Immediate	Contains Non-recoverable error	Front-End Port is having a problem.
	VmaxPort_Operational_Status_No_contact	Risk	Warning	Contains No contact	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Stopping	Risk	Info	Contains Stopping	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Stopped	Risk	Info	Contains Stopped	Front-End Port is having a problem.
	VmaxPort_Operational_Status_Lost_communication	Risk	Immediate	Contains Lost communications	Front-End Port is having a problem.

VNX Block alerts

Table 85 List of VNX Block alerts

Resource Kind	Metric	Badge	Severity	Condition	Message Summary	
Storage Pool	Full (%)	Risk	Critical	> 90	Capacity used in this storage pool is very high.	
			Immediate	> 85	Capacity used in this storage pool is very high.	
		Efficiency	Info	< 5	Capacity used in this storage pool is low.	
	Subscribed (%)	Risk	Info	>100	This storage pool is oversubscribed.	
	State	Health	Critical	Offline	Offline	This storage pool is offline.
				Faulted	Faulted	This storage pool is faulted.
				Expansion Failed	Expansion Failed	This storage pool's expansion failed.
				Cancel Expansion Failed	Cancel Expansion Failed	The cancellation of this storage pool's expansion failed.
				Verification Failed	Verification Failed	The verification of this storage pool failed.
				Initialize Failed	Initialize Failed	The initialization of this storage pool failed.
				Destroy Failed	Destroy Failed	The destruction of this storage pool failed.
			Warning	Offline and Recovering	Offline and Recovering	This storage pool is offline and recovering.
			Critical	Offline and Recovery Failed	Offline and Recovery Failed	The recovery of this offline storage pool failed.
			Warning	Offline and Verifying	Offline and Verifying	This storage pool is offline and verifying.
			Critical	Offline and Verification Failed	Offline and Verification Failed	This storage pool is offline and verification failed.
				Faulted and Expanding	Faulted and Expanding	This storage pool is faulted and expanding.
				Faulted and Expansion Failed	Faulted and Expansion Failed	This expansion of this storage pool failed.
Faulted and Cancelling Expansion				Faulted and Cancelling Expansion	This storage pool is faulted and is cancelling an expansion.	
Faulted and Cancel Expansion Failed	Faulted and Cancel Expansion Failed	This storage pool is faulted and the cancellation of the expansion failed.				
Faulted and Verifying	Faulted and Verifying	This storage pool is faulted and verifying.				
Faulted and Verification Failed	Faulted and Verification Failed	This storage pool is faulted and verification failed.				

Table 85 List of VNX Block alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
				Unknown	The status of this storage pool is unknown.
FAST Cache	State	Health	Info	Enabling	FAST Cache is enabling.
			Warning	Enabled_Degraded	The status of this storage pool is unknown.
			Info	Disabling	FAST Cache is disabling.
			Warning	Disabled	FAST Cache is created but disabled.
			Critical	Disabled_Faulted	FAST Cache is faulted.
			Critical	Unknown	The state of FAST cache is unknown.
Tier	Subscribed (%)	Risk	Info	> 95	Consumed Capacity (%) of this tier is high.
SP (Storage Processor)	Busy (%)	Risk	Info	> 90	Storage Processor Utilization is high.
			Warning	> 80	Storage Processor Utilization is high.
	Read Cache Hit Ratio (%)	Efficiency	Info	< 50	Storage Processor Read Cache Hit Ratio (%) is low.
	Dirty Cache Pages (%)	Efficiency	Critical	> 95	Storage Processor Dirty Cache Pages (%) is high.
			Info	< 10	Storage Processor Dirty Cache Pages (%) is high.
	Write Cache Hit Ratio (%)	Efficiency	Warning	> 20	Storage Processor Write Cache Hit Ratio (%) is low.
			Info	< 25	Storage Processor Write Cache Hit Ratio (%) is low.
N/A	Health	Critical	N/A	Storage Processor could not be reached by CLI.	
RAID Group	Full (%)	Risk	Info	> 90	RAID Group capacity used (%) is high.
		Efficiency	Info	< 5	RAID Group capacity used (%) is low.
	State	Health	Critical	Invalid	The status of this RAID Group is invalid.
			Info	Explicit_Remove	This RAID Group is explicit remove.
			Info	Expanding	This RAID Group is expanding.
			Info	Defragmenting	This RAID Group is defragmenting.
			Critical	Halted	This RAID Group is halted.
			Info	Busy	This RAID Group is busy.
Critical	Unknown	This RAID Group is unknown.			
Disk	Busy (%)	Risk	Critical	> 95	Disk Utilization (%) is High.
			Immediate	> 90	Disk Utilization (%) is High.

Table 85 List of VNX Block alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
			Warning	> 85	
			Info	> 75	
	Hard Read Error (count)	Health	Critical	> 10	Disk has Read Error.
			Immediate	> 5	Disk has Read Error.
			Warning	> 0	Disk has Read Error.
	Hard Write Error (count)	Health	Critical	> 75	Disk has Write Error.
			Immediate	And	Disk has Write Error.
			Warning	Total IO/s > 1	Disk has Write Error.
	Response Time (ms)	Risk	Critical	> 75	Disk Average Response Time (ms) is in range.
				And	N/A
				Total IO/s > 1	Disk is not idle.
			Immediate	75 >= x > 50	Disk Average Response Time (ms) is in range.
				And	N/A
				Total IO/s > 1	Disk is not idle.
			Warning	50 >= x > 25	Disk Average Response Time (ms) is in range.
				And	N/A
				Total IO/s > 1	Disk is not idle.
	State	Health	Critical	Removed	This disk is removed.
				Faulted	The disk is faulted.
				Unsupported	The disk is unsupported.
Unknown				The disk is unknown.	
Info			Powering up	The disk is powering up.	
			Unbound	The disk is unbound.	
Warning			Rebuilding	The disk is rebuilding.	
Info			Binding	The disk is binding.	
Info			Formatting	The disk is formatting.	
Warning			Equalizing	The disk is equalizing.	
Info			Unformatted	The disk is unformatted.	
			Probation	The disk is in probation	
Warning			Copying to Hot Spare	The disk is copying to hot spare.	

Table 85 List of VNX Block alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
	N/A		Critical	N/A	Disk failure occurred.
LUN	Service Time (ms)	Risk	Critical	> 25	LUN Service Time (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
			Immediate	> 25	LUN Service Time (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
			Warning	> 25	LUN Service Time (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
	Latency (ms)	Risk	Critical	75 >= x > 50	LUN Total Latency (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
			Immediate	75 >= x > 50	LUN Total Latency (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
			Warning	50 >= x > 25	LUN Total Latency (ms) is in range.
				And	N/A
				Total IO/s > 1	LUN is not idle.
	State	Health	Critical	Device Map Corrupt	This LUN's device map is corrupt.
				Faulted	This LUN is faulted.
				Unsupported	This LUN is unsupported.
				Unknown	This LUN is unknown.
			Info	Binding	This LUN is binding.
			Warning	Degraded	This LUN is degraded.
Info			Transitioning	This LUN is transitioning.	
Info			Queued	This LUN is queued.	
Critical			Offline	This LUN is offline.	
Port	N/A	Health	Info	N/A	Link down occurred.
				N/A	The port is not in use.
			Warning	N/A	Link down occurred.
			Info	N/A	The port is not in use.

Table 85 List of VNX Block alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
Fan and Power Supply	N/A	Health	Critical	N/A	Device (FAN or Power Supply) is having problem. Device state is "empty".
			Warning	N/A	Device (FAN or Power Supply) is having problem. Device state is "unknown".
			Critical	N/A	Device (FAN or Power Supply) is having problem. Device state is "removed".
				N/A	Device (FAN or Power Supply) is having problem. Device state is "faulted".
				N/A	Device (FAN or Power Supply) is having problem. Device state is "missing".
Array	N/A	Health	Warning	N/A	Statistics logging is disabled.
				N/A	Performance data won't be available until it is enabled.

VNX Block notifications

Table 86 List of VNX Block notifications

Category	Message	Resource kind
Failures	Disk failure occurred.	Disk
	Link down occurred.	SP Front-end Port
Background Event	Disk rebuilding started.	Disk
Background Event	Disk rebuilding completed.	Disk
Background Event	Disk zeroing started. <hr/> Note <hr/> This alert is not available for 1st generation models.	Disk
Background Event	Disk zeroing completed. <hr/> Note <hr/> This alert is not available for 1st generation models.	Disk
Background Event	LUN migration queued.	LUN
Background Event	LUN migration completed.	LUN
Background Event	LUN migration halted.	LUN
Background Event	LUN migration started.	LUN
Background Event	Fast VP relocation resumed.	EMC Adapter Instance

Table 86 List of VNX Block notifications (continued)

Category	Message	Resource kind
	<hr/> Note <hr/> This alert is not available for 1st generation models.	
Background Event	Fast VP relocation paused <hr/> Note <hr/> This alert is not available for 1st generation models.	EMC Adapter Instance
Background Event	Fast VP relocation started.	Storage Pool
Background Event	Fast VP relocation stopped.	Storage Pool
Background Event	Fast VP relocation completed.	Storage Pool
Background Event	SP boot up.	Storage Processor
Background Event	SP is down. <hr/> Note <hr/> This alert is not available for 1st generation models.	Storage Processor
Background Event	FAST Cache started.	FAST Cache
Configuration	Storage Pool background initialization started.	Storage Pool
Configuration	Storage Pool background initialization completed.	Storage Pool
Configuration	LUN creation started.	LUN
Configuration	LUN creation completed.	LUN
Configuration	Snapshot<snapshot name>creation completed.	LUN
Configuration	SP Write Cache was disabled.	EMC Adapter Instance
Configuration	SP Write Cache was enabled. <hr/> Note <hr/> This alert is not available for 1st generation models.	EMC Adapter Instance
Configuration	Non-Disruptive upgrading started.	EMC Adapter Instance
Configuration	Non-Disruptive upgrading completed.	EMC Adapter Instance
Configuration	Deduplication on LUN was disabled. <hr/> Note <hr/> This alert is not available for 1st generation models.	LUN
Configuration	Deduplication on LUN was enabled. <hr/> Note <hr/>	LUN

Table 86 List of VNX Block notifications (continued)

Category	Message	Resource kind
	This alert is not available for 1st generation models.	
Configuration	Deduplication on Storage Pool paused. <hr/> Note <hr/> This alert is not available for 1st generation models.	Storage Pool
Configuration	Deduplication on Storage Pool resumed. <hr/> Note <hr/> This alert is not available for 1st generation models.	Storage Pool
Configuration	Compression on LUN started.	LUN
Configuration	Compression on LUN completed.	LUN
Configuration	Compression on LUN was turned off.	LUN

VNX File alerts

Table 87 List of VNX File alerts

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
File Pool	Full (%)	Risk	Critical	> 90	Capacity consumed (%) of the file pool is high.
			Immediate	> 85	
		Efficiency	Info	< 5	Capacity consumed (%) of the file pool is low.
Disk Volume	Request Comp. Time (µs)	Risk	Critical	> 25,000	dVol's Average Request Completion Time (µs) is high
			Immediate	> 15,000	
			Warning	> 10,000	
	Service Comp. Time (µs)	Risk	Critical	> 25,000	
			Immediate	> 15,000	
			Warning	> 10,000	
File System	Full (%)	Risk	Critical	> 90	Capacity consumed (%) of this file system is high.
			Immediate	> 85	
		Efficiency	Info	< 5	

Table 87 List of VNX File alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
Data Mover	NFS v2 Read Response (ms)	Risk	Critical	> 75	NFS v2 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v2 Write Response (ms)	Risk	Critical	> 75	NFS v2 Average Write Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v3 Read Response (ms)	Risk	Critical	> 75	NFS v3 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v3 Write Response (ms)	Risk	Critical	> 75	NFS v3 Average Write Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v4 Read Response (ms)	Risk	Critical	> 75	NFS v4 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v4 Write Response (ms)	Risk	Critical	> 75	NFS v4 Average Write Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	CIFS SMBv1 Read Response (ms)	Risk	Critical	> 75	CIFS SMB v1 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
CIFS SMBv1 Write Response (ms)	Risk	Critical	> 75	CIFS SMB v1 Average Write Response Time (ms) is high.	
		Immediate	> 50		

Table 87 List of VNX File alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary	
			Warning	> 25		
	CIFS SMBv2 Read Response (ms)	Risk	Critical	> 75	CIFS SMB v2 Average Read Response Time (ms) is high.	
			Immediate	> 50		
			Warning	> 25		
	CIFS SMBv2 Write Response (ms)	Risk	Critical	> 75	CIFS SMB v2 Average Write Response Time (ms) is high.	
			Immediate	> 50		
			Warning	> 25		
	State	Health	Info	Offline	Data Mover is powered off.	
			Error	Disabled		Data Mover will not reboot.
				Out_of_service		Data Mover cannot provide service. (For example, taken over by its standby)
			Warning	Boot_level=0		Data Mover is powered up.
						Data Mover is booted to BIOS.
						Data Mover is booted to DOS.
						DART is loaded and initializing.
						DART is initialized.
			Info			Data Mover is controlled by Control Station.
			Error	Fault/Panic		Data Mover has faulted.
				Online		Data Mover is inserted and has power, but not active or ready.
				Slot_empty		There is no Data Mover in the slot.
				Unknown		Cannot determine the Data Mover state.

Table 87 List of VNX File alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
				Hardware misconfigured	Data Mover hardware is misconfigured.
				Hardware error	Data Mover hardware has error.
				Firmware error	Data Mover firmware has error.
					Data Mover firmware is updating.

VNX File notifications

Table 88 List of VNX File notifications

Category	Message	Resource kind
Control Station Events	The NAS Command Service daemon is shutting down abnormally. (MessageID:<id>)	Array
Control Station Events	The NAS Command Service daemon is shutting down abnormally. (MessageID:<id>)	Array
Control Station Events	The NAS Command Service daemon is shutdown completely.	Array
Control Station Events	The NAS Command Service daemon is forced to shutdown. (MessageID:<id>)	Array
Control Station Events	Warm reboot is about to start on this data mover.	Data Mover
Control Station Events	Unable to warm reboot this data mover. Cold reboot has been performed.	Data Mover
Control Station Events	AC power has been lost. VNX storage system will be powerdown in<value>seconds. (MessageID:<id>)(timeout_wait)	EMC adapter instance
Control Station Events	AC power is restored and back on.	EMC adapter instance
Control Station Events	Automatic extension failed. Reason: Internal error. COMMAND:<value>, ERROR:<value>, STAMP:<value>(MessageID:<id>)(COMMAND, DM_EVENT_STAMP, ERROR)	File system
Control Station Events	Automatic extension started.	File system
Control Station Events	Automatic extension failed. Reason: Filesystem has reached the maximum size. STAMP:<value>(MessageID:<id>)(DM_EVENT_STAMP)	File system

Table 88 List of VNX File notifications (continued)

Category	Message	Resource kind
Control Station Events	Automatic extension failed. Reason: Percentage used could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Filesystem size could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Available space could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Filesystem is not RW mounted. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Insufficient available sapace. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Available pool size could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Slice flag could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Available space is not sufficient for minimum size extension. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Maximum filesystem size could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: High Water Mark (HWM) could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Forced automatic extension started.	File system
Control Station Events	Automatic extension ended.	File system
Control Station Events	Automatic extension ended. The filesystem is now at its maximum size limit.	File system
Control Station Events	Forced automatic extension is cancelled. The requested extension size is less than the high water mark (HWM) set for the filesystem.	File system
Control Station Events	The filesystem's available storage pool size will be used as the extension size instead of the requested size.	File system
Control Station Events	Automatic extension completed.	File system

Table 88 List of VNX File notifications (continued)

Category	Message	Resource kind
Control Station Events	Forced automatic extension completed. The file system is at the maximum size.	File system
Control Station Events	Automatic extension failed. Reason: Volume id could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Storage system id could not be determined. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. Reason: Filesystem is spread across multiple storage systems. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	Automatic extension failed. STAMP:<value>(MessageID:<id>) (DM_EVENT_STAMP)	File system
Control Station Events	The JServer is not able to start. VNX File System statistics will be impacted. (MessageID:<id>)	EMC adapter instance
Control Station Events	Filesystem is using<value>of its<value><value>capacity. (condition, cap_setting, prop_name)	File system
Control Station Events	Filesystem has<value>of its<value><value>capacity available. (condition, cap_setting, prop_name)	File system
Control Station Events	Storage pool is using<value>of its <value><value>capacity (condition, cap_setting)	File pool
Control Station Events	Storage pool has<value>of its<value>capacity available. (condition, cap_setting)	File pool
Control Station Events	Filesystem is using<value>of the maximum allowable file system size (16 TB). (condition)	File system
Control Station Events	Filesystem has<value>of the maximum allowable file system size (16 TB). (condition)	File system
Control Station Events	Filesystem is using<value>of the maximum storage pool capacity available. (condition)	File system
Control Station Events	Filesystem has <value> of the maximum storage pool capacity available.(condition)	File system
Control Station Events	Filesystem will fill its<value><value>capacity on<value>. (cap_setting, prop_name, sdate)	File system
Control Station Events	Storage pool will fill its<value>capacity on<value>. (cap_setting, sdate)	File pool
Control Station Events	Filesystem will reach the 16 TB file system size limit on<value>. (sdate)	File system
Control Station Events	Filesystem will fill its storage pool's maximum capacity on<value>. (sdate)	File system
Control Station Events	Data Mover is using<value>of its<value>capacity. (stat_value, stat_name)	Data Mover

Table 88 List of VNX File notifications (continued)

Category	Message	Resource kind
Control Station Events	Storage usage has crossed threshold value<value>and has reached to<value>. (threshold, pool_usage_percentage)	File pool
Control Station Events	Storage usage has crossed threshold value<value>and has reached to<value>. (threshold, pool_usage_percentage)	File pool
Control Station Events	Filesystem has filled its<value><value>capacity. (cap_setting, prop_name)	File system
Control Station Events	Storage pool has filled its<value>capacity. (cap_setting)	File pool
Control Station Events	Filesystem has almost filled its<value><value>capacity. (cap_setting, prop_name)	File system
Control Station Events	Storage pool has almost filled its<value>capacity. (cap_setting)	File pool
Control Station Events	Filesystem is using<value>of its current inode capacity. (condition)	File system
Dart Events	The SCSI HBA<value>is operating normally. (hban0)	Data Mover
Dart Events	The SCSI HBA<value>has failed. (MessageID:<id>) (hban0)	Data Mover
Dart Events	The SCSI HBA<value>is inaccessible. (MessageID:<id>) (hban0)	Data Mover
Dart Events	Filesystem has encountered a critical fault and is being unmounted internally. (MessageID:<id>)	File system
Dart Events	Filesystem has encountered a corrupted metadata and filesystem operation is being fenced. (MessageID:<id>)	File system
Dart Events	Filesystem usage rate<value>% crossed the high water mark threshold<value>%. Its size will be automatically extended. (currentUsage, usageHWM)	File system
Dart Events	Filesystem is full.	File system
Dart Events	Power Supply A in Data Mover Enclosure was removed.	EMC adapter instance
Dart Events	Power Supply A in Data Mover Enclosure is OK.	EMC adapter instance
Dart Events	Power Supply A in Data Mover Enclosure failed:<value>(MessageID:<id>) (details)	EMC adapter instance
Dart Events	Power Supply B in Data Mover Enclosure was installed.	EMC adapter instance
Dart Events	Power Supply B in Data Mover Enclosure was removed.	EMC adapter instance
Dart Events	Power Supply B in Data Mover Enclosure is OK.	EMC adapter instance
Dart Events	Power Supply B in Data Mover Enclosure failed:<value>(MessageID:<id>) (details)	EMC adapter instance

Table 88 List of VNX File notifications (continued)

Category	Message	Resource kind
Dart Events	One or more fans in Fan Module 1 in Data Mover Enclosure failed. (MessageID:<id>)	EMC adapter instance
Dart Events	One or more fans in Fan Module 2 in Data Mover Enclosure failed. (MessageID:<id>)	EMC adapter instance
Dart Events	One or more fans in Fan Module 3 in Data Mover Enclosure failed. (MessageID:<id>)	EMC adapter instance
Dart Events	Multiple fans in Data Mover Enclosure failed. (MessageID:<id>)	EMC adapter instance
Dart Events	All Fan Modules in Data Mover Enclosure are in OK status.	EMC adapter instance
Dart Events	Power Supply A in Data Mover Enclosure is going to shutdown due to over heating. (MessageID:<id>)	EMC adapter instance
Dart Events	Power Supply B in Data Mover Enclosure is going to shutdown due to over heating. (MessageID:<id>)	EMC adapter instance
Dart Events	Both Power Supplies in Data Mover Enclosure are going to shutdown due to over heating. (MessageID:<id>)	EMC adapter instance
Dart Events	Power Supply A in Data Mover Enclosure was installed.	EMC adapter instance
Dart Events	DNS server<value>is not responding. Reason:<value>(MessageID:<id>) (serverAddr, reason)	Data Mover
Dart Events	Network device<value>is down. (MessageID:<id>) (deviceName)	Data Mover
Dart Events	Automatic fsck is started via Data Mover<value>. Filesystem may be corrupted. (MessageID:<id>) (DATA_MOVER_NAME)	File system
Dart Events	Manual fsck is started via Data Mover<value>. (DATA_MOVER_NAME)	File system
Dart Events	Automatic fsck succeeded via Data mover<value>. (DATA_MOVER_NAME)	File system
Dart Events	Manual fsck succeeded via Data mover<value>. (DATA_MOVER_NAME)	File system
Dart Events	Automatic fsck failed via Data mover<value>. (DATA_MOVER_NAME)	File system
Dart Events	Manual fsck failed via Data mover<value>. (DATA_MOVER_NAME)	File system

VNXe alerts

Table 89 List of VNXe alerts

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
Disk	Total Latency (ms)	Risk	Critical	> 75	Disk Total Latency (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	State	Health	Critical	Includes "critical"	This disk is reporting a problem.
			Immediate		
			Warning		
			Info		
Tier	Full (%)	Risk	Info	> 95	Consumed Capacity (%) of this tier is high.
Storage Pool	Full (%)	Risk	Critical	> 90	Consumed Capacity (%) of this storage pool is high.
			Immediate	> 85	
		Efficiency	Info	< 5	Consumed Capacity (%) of this storage pool is low.
		State	Health	Critical	Includes "critical"
	Immediate				
	Warning				
	Info				
SP (Storage Processor)	CIFS SMBv1 Read Response (ms)	Risk	Critical	> 75	CIFS SMBv1 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	CIFS SMBv1 Write Response (ms)	Risk	Critical	> 75	
			Immediate	> 50	
			Warning	> 25	
	CIFS SMBv2 Read Response (ms)	Risk	Critical	> 75	CIFS SMBv2 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	

Table 89 List of VNXe alerts (continued)

Resource Kind	Metric	Badge	Severity	Condition	Message Summary
	CIFS SMBv2 Write Response (ms)	Risk	Critical	> 75	
			Immediate	> 50	
			Warning	> 25	
	NFS v3 Read Response (ms)	Risk	Critical	> 75	NFSv3 Average Read Response Time (ms) is high.
			Immediate	> 50	
			Warning	> 25	
	NFS v3 Write Response (ms)	Risk	Critical	> 75	
			Immediate	> 50	
			Warning	> 25	
	State	Health	Critical	Includes "critical"	This storage processor is reporting a problem.
			Immediate		
			Warning		
			Info		
LUN	State	Health	Critical	Condition includes critical	This LUN is reporting a problem.
			Immediate		
			Warning		
			Info		
File System	State	Health	Critical	Condition includes critical	This File System is reporting a problem.
			Immediate		
			Warning		
			Info		
NAS Server	State	Health	Critical	Condition includes critical	This NAS Server is reporting a problem.
			Immediate		
			Warning		
			Info		

VPLEX alerts

Table 90 List of VPLEX alerts

Resource Kind	Message	Badge	Recommendation	Severity	Condition
Cluster	VPLEX cluster is having a problem.	Health	Please check the health state of your VPLEX cluster. Ignore this alert if the health state is expected.	Critical	VPLEX cluster health state is "major-failure".
					VPLEX cluster health state is "critical-failure".
				Immediate	VPLEX cluster health state is "unknown".
				Warning	VPLEX cluster health state is "minor-failure".
					VPLEX cluster health state is "degraded".
FC Port	FC port is having a problem.	Health	Please check the operational status of your FC port. Ignore this alert if the operational status is expected.	Critical	FC port operational status is "error".
					FC port operational status is "lost-communication".
				Immediate	FC port operational status is "unknown".
				Warning	FC port operational status is "degraded".
					FC port operational status is "stopped".
Ethernet Port	Ethernet port is having a problem.	Health	Please check the operational status of your ethernet port. Ignore this alert if the operational status is expected.	Critical	Ethernet port operational status is "error".
					Ethernet port operational status is "lost-communication".
				Immediate	Ethernet port operational status is "unknown".
				Warning	Ethernet port operational status is "degraded".

Table 90 List of VPLEX alerts (continued)

Resource Kind	Message	Badge	Recommendation	Severity	Condition
					Ethernet port operational status is "stopped".
Local Device	Local device is having a problem.	Health	Please check the health state of your local device. Ignore this alert if the health state is expected.	Critical	Local device health state is "major-failure".
					Local device health state is "critical-failure".
				Immediate	Local device health state is "unknown".
				Warning	Local device health state is "minor-failure".
					Local device health state is "degraded".
Storage View	Storage view is having a problem.	Health	Please check the operational status of your storage view. Ignore this alert if the operational status is expected.	Critical	Storage view operational status is "error".
				Warning	Storage view operational status is "degraded".
					Storage view operational status is "stopped".
Storage Volume	Storage volume is having a problem.	Health	Please check the health state of your storage volume. Ignore this alert if the health state is expected.	Critical	Storage volume health state is "critical-failure".
				Immediate	Storage volume health state is "unknown".
				Warning	Storage volume health state is "non-recoverable-error".
					Storage volume health state is "degraded".
Virtual Volume	Virtual volume is	Health	Please check the health state of your virtual volume. Ignore this alert if	Critical	Virtual volume health state is "critical-failure".

Table 90 List of VPLEX alerts (continued)

Resource Kind	Message	Badge	Recommendation	Severity	Condition
	having a problem.		the health state is expected.		Virtual volume health state is "major-failure".
				Immediate	Virtual volume health state is "unknown".
				Warning	Virtual volume health state is "minor-failure".
					Virtual volume health state is "degraded".
VPLEX Metro	VPLEX metro is having a problem.	Health	Please check the health state of your VPLEX metro. Ignore this alert if the health state is expected.	Critical	VPLEX metro health state is "critical-failure".
					VPLEX metro health state is "major-failure".
				Immediate	VPLEX metro health state is "unknown".
				Warning	VPLEX metro health state is "minor-failure".
					VPLEX metro health state is "degraded".
Distributed Device	Distributed device is having a problem.	Health	Please check the health state of your distributed device. Ignore this alert if the health state is expected.	Critical	Distributed device health state is "critical-failure".
					Distributed device health state is "major-failure".
				Immediate	Distributed device health state is "unknown".
				Warning	Distributed device health state is "minor-failure".
					Distributed device health state is "non-recoverable-error".

Table 90 List of VPLEX alerts (continued)

Resource Kind	Message	Badge	Recommendation	Severity	Condition
					Distributed device health state is "degraded".
Engine	Engine is having a problem.	Health	Please check the operational status of your engine. Ignore this alert if the health state is expected.	Critical	Engine operational status is "error".
					Engine operational status is "lost-communication".
				Immediate	Engine operational status is "unknown".
				Warning	Engine operational status is "degraded".
Director	Director is having a problem.	Health	Please check the operational status of your director. Ignore this alert if the health state is expected.	Critical	Director operational status is "critical-failure".
					Director operational status is "major-failure".
				Immediate	Director operational status is "unknown".
				Warning	Director operational status is "minor-failure".
					Director operational status is "degraded".
Extent	Extent is having a problem.	Health	Please check the health state of your extent. Ignore this alert if the health state is expected.	Critical	Extent health state is "critical-failure".
				Immediate	Extent health state is "unknown".
				Warning	Extent health state is "non-recoverable-error".
					Extent health state is "degraded".

XtremIO alerts

The Wait Cycle is 1 for all these XtremIO alerts.

Table 91 List of XtremIO alerts based on external events

Resource Kind	Message	Badge	Recommendation	Severity	Condition
Cluster	XtremIO cluster is having a problem.	Health	Please check the state of your XtremIO cluster. Ignore this alert if the state is expected.	Critical	XtremIO cluster health state is "failed".
				Warning	XtremIO cluster health state is "degraded".
					XtremIO cluster health state is "partial fault".
Storage Controller	Storage controller is having problem.	Health	Please check the state of your storage controller. Ignore this alert if the state is expected.	Critical	Storage controller health state is "failed".
				Warning	Storage controller health state is "degraded".
					Storage controller health state is "partial fault".

Table 92 List of XtremIO alerts based on metrics

Resource Kind	Message	Badge	Severity	Condition	Recommendation
Cluster SSD	Consumed Capacity Ratio (%) is high.	Health	Warning	Consumed Capacity Ratio (%) \geq 60	<ol style="list-style-type: none"> Free capacity from cluster Extend capacity of cluster
	Subscription Ratio is high.	Health	Warning	Subscription Ratio \geq 5	<ol style="list-style-type: none"> Unsubscribe capacity from cluster Extend capacity of cluster
	Physical capacity used in the cluster is high.	Risk	Warning	Consumed capacity \geq 90%	Migrate the volume to another cluster.
	Physical capacity used in the cluster is low.	Efficiency	Warning	Consumed capacity \leq 5%	Cluster is not fully utilized. Possible waste.

Table 92 List of XtremIO alerts based on metrics (continued)

Resource Kind	Message	Badge	Severity	Condition	Recommendation
	Endurance Remaining (%) is low.	Health	Warning	Endurance Remaining (%) \leq 10	Replace SSD
Volume	Average Small Reads (IO/s) is out of normal range.	Health	Warning	Average Small Read Ratio \geq 20	Check the status of the volume.
	Average Small Writes (IO/s) is out of normal range.	Health	Warning	Average Small Write Ratio \geq 20	Check the status of the volume.
	Average Unaligned Reads (IO/s) is out of normal range.	Health	Warning	Average Unaligned Read Ratio \geq 20	Check the status of the volume.
	Average Unaligned Writes (IO/s) is out of normal range.	Health	Warning	Average Unaligned Write Ratio \geq 20	Check the status of the volume.
	Capacity used in the volume is high.	Risk	Warning	Consumed capacity \geq 90%	Extend the capacity of the volume.
	Capacity used in the volume is low.	Efficiency	Warning	Consumed capacity \leq 5%	Volume is not fully utilized. Possible waste.
Snapshot	Average Small Reads (IO/s) is out of normal range.	Health	Warning	Average Small Read Ratio \geq 20	Check the status of the snapshot.
	Average Small Writes (IO/s) is out of normal range.	Health	Warning	Average Small Write Ratio \geq 20	Check the status of the snapshot.
	Average Unaligned Reads (IO/s) is out of normal range.	Health	Warning	Average Unaligned Read Ratio \geq 20	Check the status of the snapshot.
	Average Unaligned Writes (IO/s) is out of normal range.	Health	Warning	Average Unaligned Write Ratio \geq 20	Check the status of the snapshot.

Launching Unisphere

EMC Storage Analytics provides metrics that enable you to assess the health of monitored resources. If the resource metrics indicate that you need to troubleshoot those resources, EMC Storage Analytics provides a way to launch Unisphere on the array.

The capability to launch Unisphere on the array is available for:

- VNX Block
- VNX File
- VNXe

To launch Unisphere on the array, select the resource and click the **Link and Launch** icon. The **Link and Launch** icon is available on most widgets (hovering over an icon displays a tooltip that describes its function).

Note

This feature requires a fresh installation of the EMC Adapter (not an upgrade). You must select the object to launch Unisphere. Unisphere launch capability does not exist for VMAX or VPLEX objects.

Installation logs

This topic lists the log files to which errors in the EMC Storage Analytics installation are written.

Errors in the EMC Storage Analytics installation are written to log files in the following directory in vRealize Operations Manager:

```
/var/log/emc
```

Log files in this directory follow the naming convention:

```
install-2012-12-11-10:54:19.log.
```

Use a text editor to view the installation log files.

Log Insight overview

This topic provides an overview of Log Insight and its use with EMC Storage Analytics.

VMware vRealize Log Insight provides log management for VMware environments. Log Insight includes dashboards for visual display of log information. Content packs extend this capability by providing dashboard views, alerts, and saved queries.

For information on working with Log Insight, refer to the Log Insight documentation: <http://pubs.vmware.com/log-insight-25/index.jsp>.

Log Insight configuration

This topic describes important background information about the integration of Log Insight with EMC Storage Analytics.

You can send the EMC Storage Analytics logs stored on the vRealize Operations Manager virtual machine to the Log Insight instance to facilitate performance analysis and perform root cause analysis of problems.

The adapter logs in vRealize Operations Manager are stored in a subdirectory of the `/storage/vcops/log/adapters/EmcAdapter` directory. The directory name and the log file are created by concatenating the adapter instance name with the adapter instance ID.

An example of the contents of `EmcAdapter` follows. Notice that the adapter name parsing changes dots and spaces into underscores. For example, the adapter instance named `ESA3.0 Adapter VNX File` is converted to `ESA3_0_Adapter_VNX_File`. The adapter instance ID of `455633441` is concatenated to create the subdirectory name as well as the log file name.

```
-rw-r--r-- 1 admin admin 27812 Sep 26 10:37 ./
ESA3_0_Adapter_VNX_File-455633441/
ESA3_0_Adapter_VNX_File-455633441.log
-rw-r--r-- 1 admin admin 1057782 Sep 26 15:51 ./
ESA3_0_VNX_Adapter-1624/ESA3_0_VNX_Adapter-1624.log
-rw-r--r-- 1 admin admin 40712 Sep 23 11:58 ./
ESA3_0_VNX_Adapter-616398625/ESA3_0_VNX_Adapter-616398625.log
-rw-r--r-- 1 admin admin 40712 Sep 23 11:58 ./
ESA3_0_VNX_Adapter-725881978/ESA3_0_VNX_Adapter-725881978.log
-rw-r--r-- 1 admin admin 31268 Sep 10 11:33 ./
ESA_3_0_Adapter-1324885475/ESA_3_0_Adapter-1324885475.log
-rw-r--r-- 1 admin admin 193195 Sep 26 10:48 ./EmcAdapter.log
-rw-r--r-- 1 admin admin 25251 Sep 26 10:48 ./My_VNXe-1024590653/
My_VNXe-1024590653.log
-rw-r--r-- 1 admin admin 25251 Sep 26 10:48 ./My_VNXe-1557931636/
My_VNXe-1557931636.log
-rw-r--r-- 1 admin admin 4853 Sep 26 10:48 ./My_VNXe-1679/
My_VNXe-1679.log
```

In the vRealize Operations Manager **Solution Details** view, the corresponding adapter instance names appear as follows:

- ESA3.0 Adapter VMAX
- My VNXe
- ESA3.0 VNX Adapter
- ESA3.0 Adapter VNX File

As seen in the example, multiple instances of each of the adapter types appear because EMC Storage Analytics creates a new directory and log file for the Test Connection part of discovery as well as for the analytics log file.

Error handling and event logging

Errors in the EMC Storage Analytics operation are written to log files available through vRealize Operations Manager.

Error logs are available in the `/data/vcops/log` directory. This directory contains the vRealize Operations Manager logs.

Adapter logs (including adapters other than the EMC Adapter) are in `/data/vcops/log/adapters`.

View logs relating to EMC Storage Analytics operation in the vRealize Operations Manager GUI. Create and download a support bundle used for troubleshooting.

Viewing error logs

EMC Storage Analytics enables you to view error log files for each adapter instance.

Procedure

1. Start the vRealize Operations Manager custom user interface and log in as administrator.
For example in a web browser, type: `http://<vROPs_ip_address>/vcops-web-ent`
2. Select **Admin > Support**. Select the **Logs** tab.
3. Expand the `vCenter Operations Collector` folder, then the `adapter` folder, then the `EmcAdapter` folder. Log files appear under the `EmcAdapter` folder. Double-click a log entry in the log tree.
Entries appear in the **Log Content** pane.

Creating and downloading a support bundle

Procedure

1. On the **Logs** tab, click the **Create Support Bundle** icon.
The bundle encapsulates all necessary logs.
2. Select the bundle name and click the **Download Bundle** icon.

Log file sizes and rollover counts

This topic describes the default log file size and rollover count for EMC adapter instances.

Logs for each EMC Adapter instance are in folders under `/data/vcops/log/adapters/EmcAdapter`, one folder for each adapter instance. For example, if you have five EMC Adapter instances, a directory (folder) appears for each of them.

Log files in this directory follow this naming convention:

```
<EMC_adapter_name>-<adapter_instance_ID>.log.<rollover_count>
```

For example: `VNX_File-131.log.9`

The log filename begins with the name of the EMC Adapter instance. Filenames beginning with `EmcAdapter` are common to all connectors.

The number that follows the EMC Adapter instance name is the adapter instance ID, which corresponds to a VMware internal ID.

The last number in the filename indicates the rollover increment. When the default log file size is reached, the system starts a new log file with a new increment. The lowest-numbered increment represents the most recent log. Each rollover is 10 MB (default value, recommended). Ten rollovers (default value) are allowed; the system deletes the oldest log files.

Finding adapter instance IDs

This describes how to find the ID for an EMC adapter instance.

Procedure

1. In vRealize Operations Manager, select **Administration** > **Environment** > **Adapter Types** > **EMC Adapter**.
2. In the **Internal ID** column, you can view the IDs for adapter instances.

Configuring log file sizes and rollover counts

This topic describes how to change the default values for all adapter instances or for a specific adapter instance.

Before you begin



EMC recommends that you not increase the 10 MB default value for the log file size. Increasing this value makes the log file more difficult to load and process as it grows in size. If more retention is necessary, increase the rollover count instead.

Procedure

1. On the vRealize Operations Manager virtual machine, find and edit the `adaptor.properties` file:

```
/usr/lib/vmware-vcops/user/plugins/inbound/emc-vcops-  
adapter/conf/adaptor.properties
```

2. Locate these EMC adapter instance properties:

```
com.emc.vcops.adapter.log.size=10MB
```

```
com.emc.vcops.adapter.log.count=10
```

3. To change the properties for all EMC adapter instances, edit only the log size or log count values. For example:

```
com.emc.vcops.adapter.log.size=12MB
```

```
com.emc.vcops.adapter.log.count=15
```

4. To change the properties for a specific EMC adapter instance, insert the EMC adapter instance ID as shown in this example:

```
com.emc.vcops.adapter.356.log.size=8MB
```

```
com.emc.vcops.adapter.356.log.count=15
```

Activating configuration changes

This topic describes how to activate changes you made to the log file size or rollover count for an EMC adapter instance.

Procedure

1. In vRealize Operations Manager, select **Environment** > **Environment Overview**.
2. In the navigation pane, expand **Adapter Kinds**, then select **EMC Adapter**.
3. In the **List** tab, select a resource from the list and click the **Edit Resource** icon.

The **Resource Management** window for the EMC adapter opens.

4. Click the **OK** button. No other changes are required.

This step activates the changes you made to the log file size or rollover count for the EMC adapter instance.

Verifying configuration changes

This topic describes how to verify the changes you made to the log file size or rollover counts of an EMC adapter instance.

Procedure

1. Log into vRealize Operations Manager.
2. Change directories to `/data/vcops/log/adapters/EmcAdapter`.
3. Verify the changes you made to the size of the log files or the number of saved rollover backups.

If you changed:

- Only the default properties for log file size and rollover count, all adapter instance logs will reflect the changes
- Properties for a specific adapter instance, only the logs for that adapter instance will reflect the changes
- Log file size or rollover count to higher values, you will not notice the resulting changes until those thresholds are crossed

Editing the Collection Interval for a resource

From the vRealize Operations Manager user interface, you can edit the Collection Interval for a resource.

The interval time is five minutes by default. Changing this time will affect the frequency of collection times for metrics, but the EMC Adapter will only recognize the change if the resource is the EMC Adapter instance. This is normal vRealize Operations Manager behavior.

Note

For VNXe, the maximum collection interval is five minutes.

Instructions on configuring Resource Management settings are provided in the vRealize Operations Manager online help.

Configuring the thread count for an adapter instance

This topic describes two ways to configure the thread count for an adapter instance.

Only administrative personnel should perform this procedure. Use this procedure to change the thread count for best performance. If the thread count is not specified in `adapter.properties`, `thread count = vCPU count + 2`. The maximum allowed thread count is 20.

Procedure

1. Access the `adapter.properties` file. You can find this file at:

```
/usr/vmware-vcops/user/plugins/inbound/emc-vcops-adapter/
conf/adapter.properties
```

2. Open and edit the thread count property for all adapter instances or for a specific adapter instance.

- If you want to edit the thread count property for all adapter instances, change the `com.emc.vcops.adapter.threadcount` property.
- If you want to edit the thread count property for a specific adapter instance, insert the adapter instance ID after `adapter`, for example:
`com.emc.vcops.adapter.7472.threadcount`, and change the property value.

Note

To find an adapter instance ID, refer to [Finding adapter instance IDs on page 160](#).

3. To activate the property change, restart the adapter instance in the vRealize Operations Manager.

Connecting to vRealize Operations Manager by using SSH

This topic describes how to use SSH to login to vRealize Operations Manager as root.

Procedure

1. Open the VM console for the vRealize Operations Manager.
2. Press **Alt-F1** to open the command prompt.
3. Enter **root** for the login and leave the password field blank.

You are prompted for a password.

4. Set the root password.

You will be logged in.

5. Use this command to enable SSH:

```
service sshd start
```

You will be able to successfully login as root by using SSH.

Frequently Asked Questions

How many nodes are supported per vRealize Operations Manager cluster?

vRealize Operations Manager clusters consist of a master node and data nodes. A total of eight nodes are supported. The master node (required) and up to seven data nodes.

How many resources and metrics are supported per node in vRealize Operations Manager?

- Small Node - 4vCPU, 16GB Memory - Supports 2,000 objects and 1,000,000 metrics
- Medium Node - 8vCPU, 32GB Memory - Supports 6,000 objects and 3,000,000 metrics
- Large Node - 16vCPU, 64GB Memory - Supports 10,000 objects and 5,000,000 metrics

How does a trial license work?

A 90-day trial license is provided for each platform that EMC Storage Analytics supports. The 90-day trial license provides the same features as a permanent license, but after 90 days, the adapter stops collecting data. You can add a permanent license at any time during or after the trial period.

How do health scores work?

Health scores measure how normal a resource is and grades it on a scale of 0-100. A health score of 100 indicates normal behavior while a lower health score indicates that the resource is acting abnormally. The resource may not be in an unhealthy state but there is an abnormality. Health scores are calculated by a proprietary algorithm which account for several factors including thresholds and historical statistics. vRealize Operations Manager may take up to 30 days to gather enough information to determine what is considered normal in your environment. Until then, you may not see any changes in your health scores.

I deleted a resource. Why does it still appear in the vRealize Operations Manager?

vRealize Operations Manager will not delete any resources automatically because it retains historical statistics and topology information that may be important to the user. The resource enters an unknown state (blue). To remove the resource, delete it on the **Environment Overview** page.

What does the blue question mark in the health score indicate?

The blue question mark indicates that vRealize Operations Manager was unable to poll that resource. It will retry during the next polling interval.

What does it mean when a resource has a health score of 0?

This indicates that the resource is either down or not available.

Why are my EMC Adapter instances marked down after upgrading to the latest version of the EMC Adapter?

EMC Adapter instances require a license to operate. Edit your EMC Adapter instances to add license keys obtained from EMC. Select **Environment Overview** > **Configuration** > **Adapter Instances**.

I have multiple EMC Adapter instances for my storage systems, and I have added license keys for each of them. Why are they still marked down?

License keys are specific to the model for which the license was purchased. Verify that you are using the correct license key for the adapter instance. After adding a license, click the **Test** button to test the configuration and validate the license key. If you saved the configuration without performing a test and the license is invalid, the adapter instance

will be marked `Resource down`. To verify that a valid license exists, select **Environment Overview**. The list that appears shows the license status.

How is the detailed view of vCenter resources affected in EMC Storage Analytics?

Any changes in the disk system affects the health of vCenter resources such as virtual machines, but EMC Storage Analytics does not show changes in other subsystems. Metrics for other subsystems will either show `No Data` or `?`.

Can I see relationships between my vCenter and EMC storage resources?

Yes. Relationships between resources are not affected and you can see a top to bottom view of the virtual and storage infrastructures if the two are connected.

How do I uninstall EMC Storage Analytics?

No uninstall utility exists. However, to remove EMC Storage Analytics objects, remove adapter instances for which the Adapter Kind is **EMC Adapter (Environment > Configuration > Adapter Instances)**. Then delete objects in the **Environment Overview** for which the Data Source is **EMC (Environment > Environment Overview)**.

If I test a connection and it fails, how do I know which field is wrong?

Unfortunately, the only field that produces a unique message when it is wrong is the license number field. If any other field is wrong, the user is informed the connection was not successful. To resolve the issue, verify all the other fields are correct. Remove any white spaces after the end of the values.

Can I modify or delete a dashboard?

Yes, the environment can be customized to suit the needs of the user. Rename the dashboard so that it is not overwritten during an upgrade.

Why do some of the boxes appear white in the Overview dashboard?

While the metrics are being gathered for an adapter instance, some of the heat maps in the dashboard may be white. This is normal. Another reason the boxes may appear white is that the adapter itself or an individual resource has been deleted, but the resources remain until they are removed from the **Environment Overview** page.

Which arrays does EMC Storage Analytics support?

A complete list of the supported models for EMC storage arrays is available in the *EMC Storage Analytics Release Notes*.

Will EMC Storage Analytics continue to collect VNX statistics if the primary SP or CS goes down?

Storage Analytics will continue to collect statistics through the secondary Storage Processor if the primary Storage Processor goes down. EMC Storage Analytics will automatically collect metrics from the secondary Control Station in the event of a Control Station failover. Note that the credentials on the secondary Control Station must match the credentials on the primary Control Station.

Does the Unisphere Analyzer for VNX need to be running to collect metrics?

No. VNX Block metrics are gathered through `naviseccli` commands and VNX File metrics are gathered through CLI commands. However, statistics logging must be enabled on each storage processor (SP) on VNX Block, and statistics logging will have a performance impact on the array. No additional services are required for VNX File.

How does the FAST Cache heat map work?

The FAST Cache heatmaps are based on the FAST Cache read and write hit ratios. This heat map will turn red if these ratios are low because that indicates that FAST Cache is not being utilized efficiently. These heat maps will turn green when FAST Cache is servicing a high percentage of I/O.

I purchased a license for the model of the VNX array that I plan to monitor. When I configure the adapter instance for VNX File, why does an "invalid license" error message appear?

Control Station may not be reporting the correct model or the array. Log into Control Station and check the array model with the command: `/nas/sbin/model`. Verify that the array model returned matches the model on the Right to Use certificate.

After a Control Station failover, why is the VNX File adapter instance marked down and why does metric collection stop?

The failover may have been successful, but the new Control Station may not be reporting the correct model of the array. This results in a failure to validate the license and all data collection stops. Log into Control Station and check the array model with the command: `/nas/sbin/model`. If the model returned does not match the actual model of the array, Primus case emc261291 in the EMC Knowledgebase provides possible solutions.

The disk utilization metric is not visible for my VNX Block array. Why not?

The disk utilization metric is not supported on VNX arrays running a VNX Block OE earlier than Release 32. Upgrade to VNX Block OE Release 32 or later to see this metric in vRealize Operations Manager.

I am unable to successfully configure an EMC Adapter instance for VNX File when using a user with read-only privileges. Why does this happen?

A user with administrative privileges is required while configuring an EMC Adapter instance for VNX File arrays running an OE earlier than 7.1.56.2. Upgrade to VNX File OE 7.1.56.2 or later to be able to configure an adapter instance using a user with read-only privileges.

The user LUNs on my VNX Block vault drives are not reporting performance metrics. Why not?

Performance metrics are not supported for user LUNs on vault drives. Place user LUNs on drives other than vault drives.

Why is my VMAX array showing as red rather than blue (unknown) just after adding it?

If the array is red, the SMI-S may be down or there may be an incorrect parameter in the adapter configuration. Return to the adapter instance configuration and test the configured instance. If it fails, verify all fields are correct. Determine if the SMI-S server is running and can recognize the VMAX array that you are configuring. If the license and user credentials are correct but connection issues remain, see the *EMC Storage Analytics Release Notes*.

All my configured VMAX adapter instances changed to red. Why?

This usually happens when the EMC SMI-S Provider is unavailable or there is a clock synchronization problem. This might be network-related or application-related. The EMC SMI-S Provider may have reached the connection limit if the network IP is available. Look for errors in the cimom.log file on the SMI-S box similar to:

```
26-Mar-2013 05:47:59.817 -900-E- WebServer: The webserver hits its
connection limit, closing connection.
```

Follow the steps in the *SMI-S Provider Release Notes* to increase the count.

A message next to the array will indicate a clock synchronization problem if a problem exists.

I received the following error when I attempted to modify the VNX Overview dashboard although I have only VMAX arrays. Is this a problem?

Error occurred

An error occurred on the page; please contact support.

Error Message: org.hibernate.exception.SQLGrammarException: could not execute query

No, this is a generic error that VMware produces when you attempt to modify a component you do not have.